


ADF mylar shield

1. Remove the mylar-holder assembly. See [Mylar-holder assembly on page 44](#).
2. Carefully unhook the mylar shield from the four tabs on the mylar-holder assembly, and then remove and discard the mylar shield.

Figure 5-13 Replacing the ADF mylar shield (4 of 7)

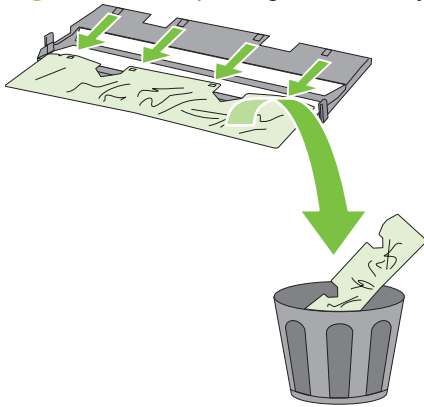

3. Use a dry cloth to clean the white strips inside of the mylar-holder assembly.
4. Insert a new mylar shield, and clip it onto the four tabs on the mylar-holder assembly.


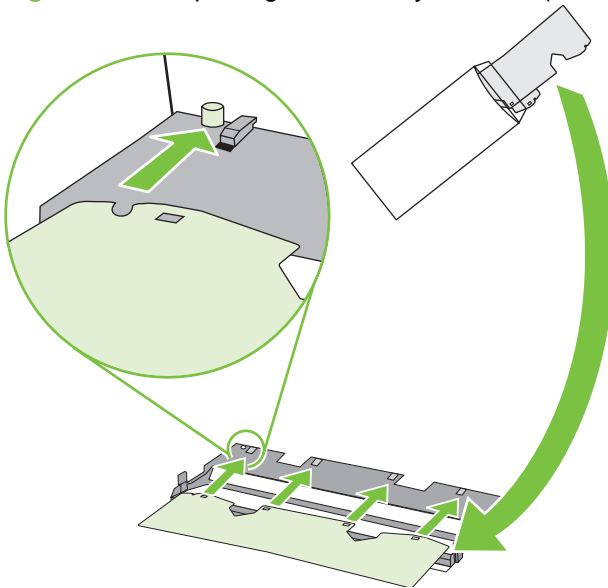
 **NOTE:** Make sure that you do not leave fingerprints on the new mylar shield.


Figure 5-14 Replacing the ADF mylar shield (5 of 7)



Mylar-holder assembly


1. Open the ADF/scanner assembly and release the locking tabs on the mylar-holder assembly.

Figure 5-10 Removing the mylar-holder assembly (1 of 3)

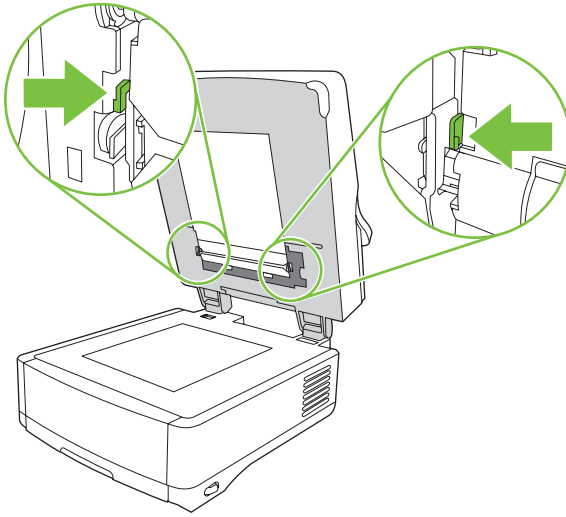


The mylar-holder assembly should drop open.

Figure 5-11 Removing the mylar-holder assembly (2 of 3)

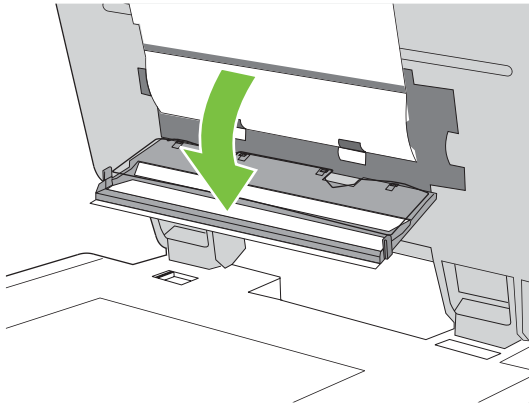

2. Remove the mylar-holder assembly by unclipping two clips (callout 1) and pulling the assembly toward you.


Figure 5-12 Removing the mylar-holder assembly (3 of 3)

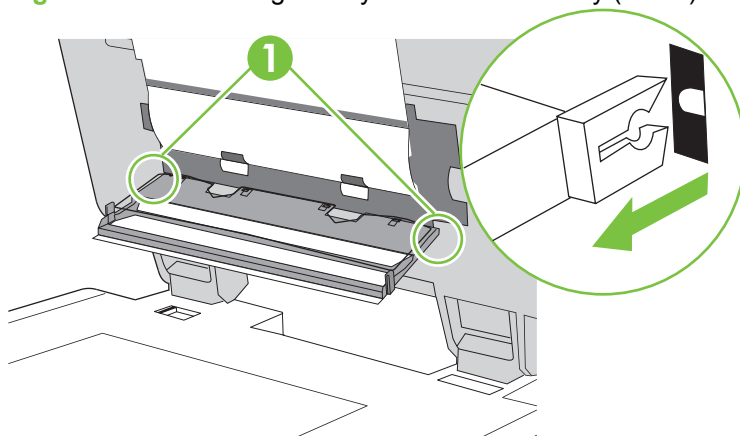

Pickup roller assembly


1. Open the ADF top cover.

Figure 5-7 Removing the pickup roller assembly (1 of 3)

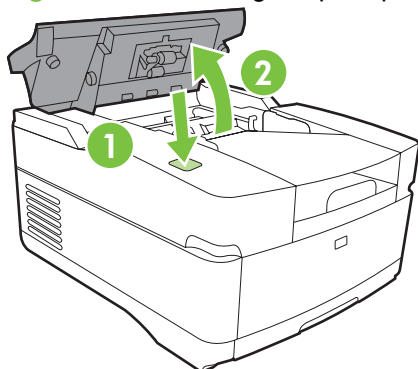


2. Open the pickup-roller cover by pressing the locking tab and rotating the top of the assembly away from the ADF.

Figure 5-8 Removing the pickup roller assembly (2 of 3)

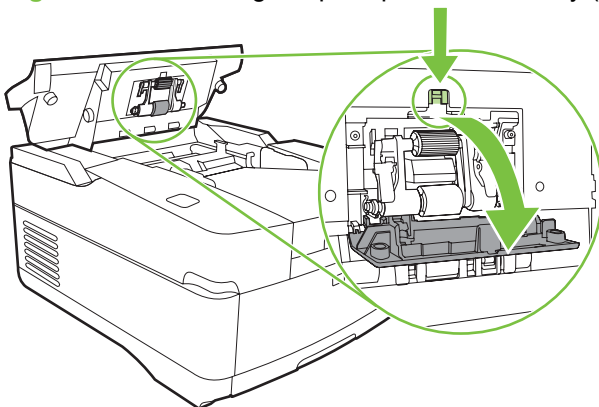

3. Pull the left side (gear end) of the roller-assembly drive shaft to disengage it, and then slide the assembly toward the left of the device to remove it.


Figure 5-9 Removing the pickup roller assembly (3 of 3)

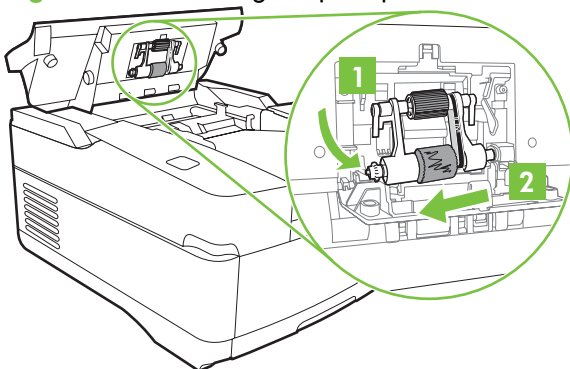

Pickup-roller cover


1. Open the ADF top cover.

Figure 5-4 Removing the paper input tray (1 of 2)

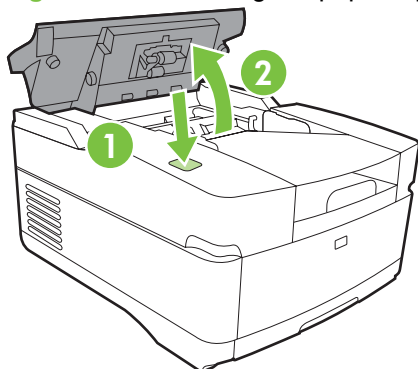


2. Open the pickup-roller cover by pressing the locking tab and rotating the top of the assembly away from the ADF.

Figure 5-5 Removing the pickup roller assembly (2 of 3)

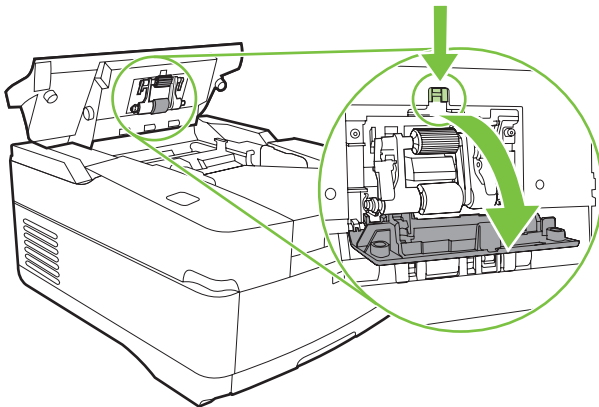

3. Release two clips (callout 1) to remove the cover.


Figure 5-6 Removing the pickup-roller cover (2 of 2)

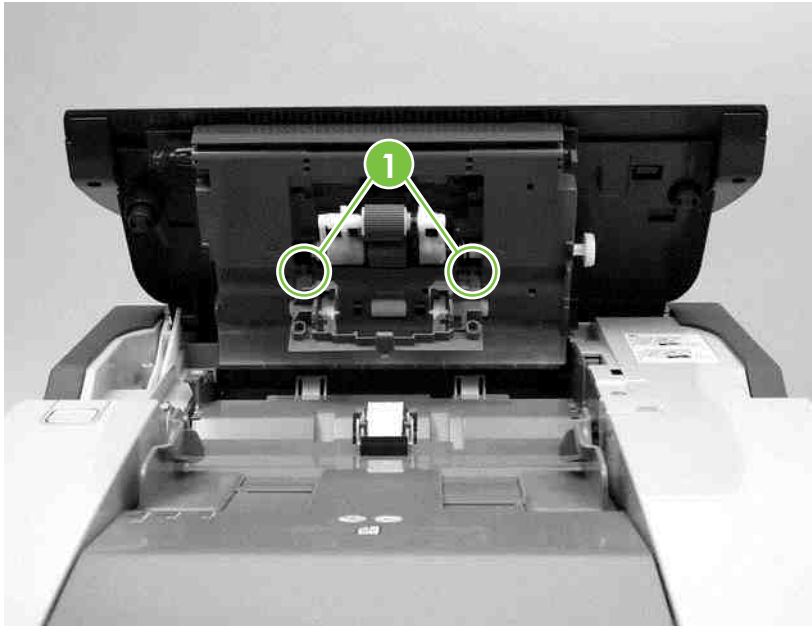

Separation pad


1. Open the ADF top cover.

Figure 5-1 Removing the separation pad (1 of 3)

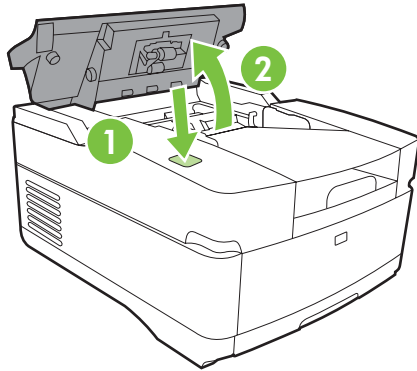


2. Raise the separation pad frame assembly.

Figure 5-2 Removing the separation pad (2 of 3)

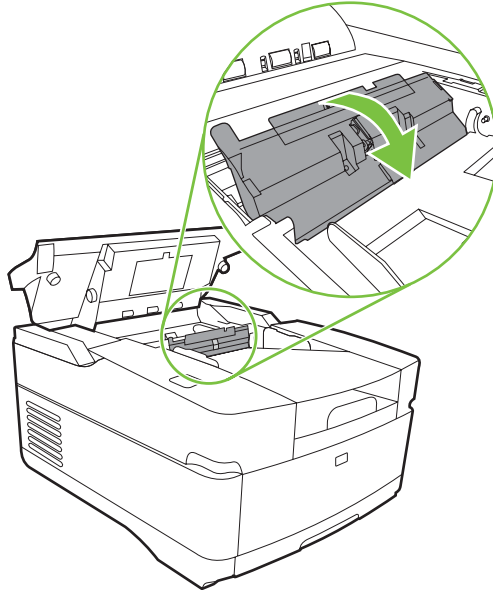

3. Push the bottom edge of the separation pad away from the frame.

Figure 5-3 Removing the separation pad (3 of 3)

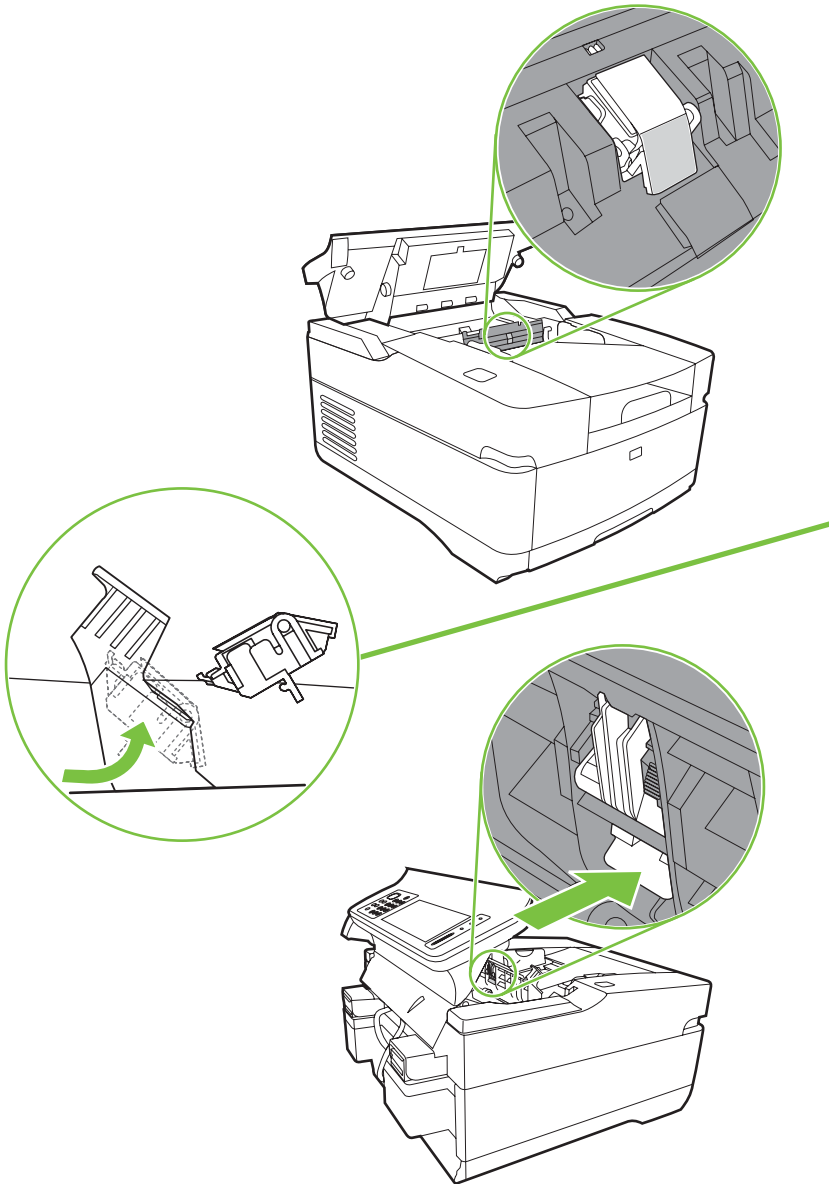

4. Remove the separation pad.