

ADF pickup and feed rollers

1. Open the ADF top cover.



Figure 5-31 Remove the ADF pickup and feed rollers (1 of 3)

2. Push down on the locking tab (callout 1), and rotate the top of the assembly away from the ADF.

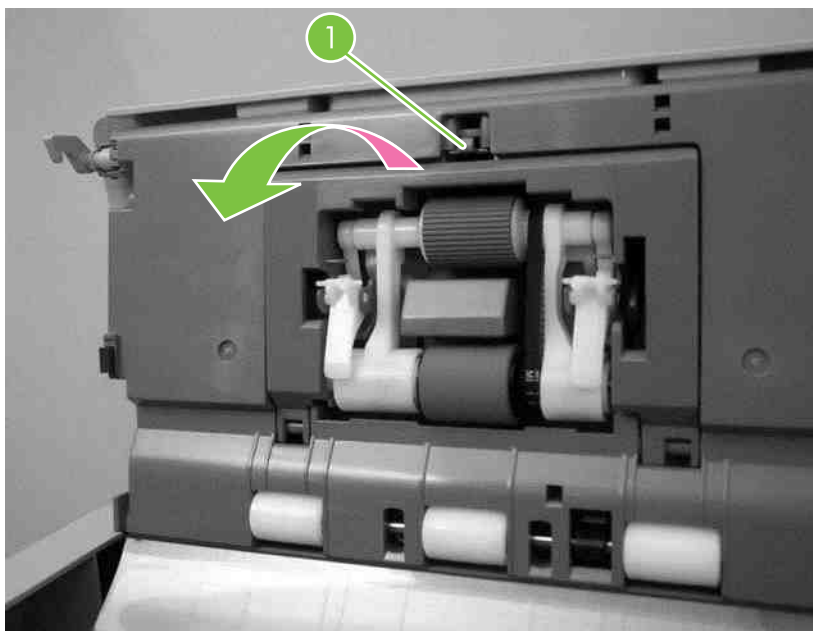


Figure 5-32 Remove the ADF pickup and feed rollers (2 of 3)

3. Release the front (gear end) of the roller assembly drive shaft (callout 2), and slide (callout 3) the assembly toward the front of the MFP to remove it.

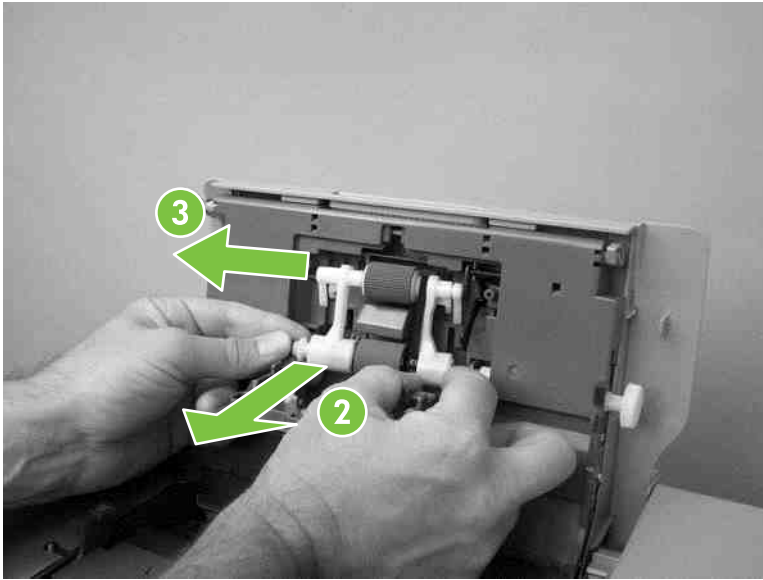


Figure 5-33 Remove the ADF pickup and feed rollers (3 of 3)

ADF separation pad

1. Open the ADF top cover.



Figure 5-34 Remove the ADF separation pad (1 of 4)

2. Locate the ADF separation pad (callout 1).



Figure 5-35 Remove the ADF separation pad (2 of 4)

3. Raise the separation pad frame assembly using the green lever, and push the bottom edge (white plastic) of the separation pad away from the frame.

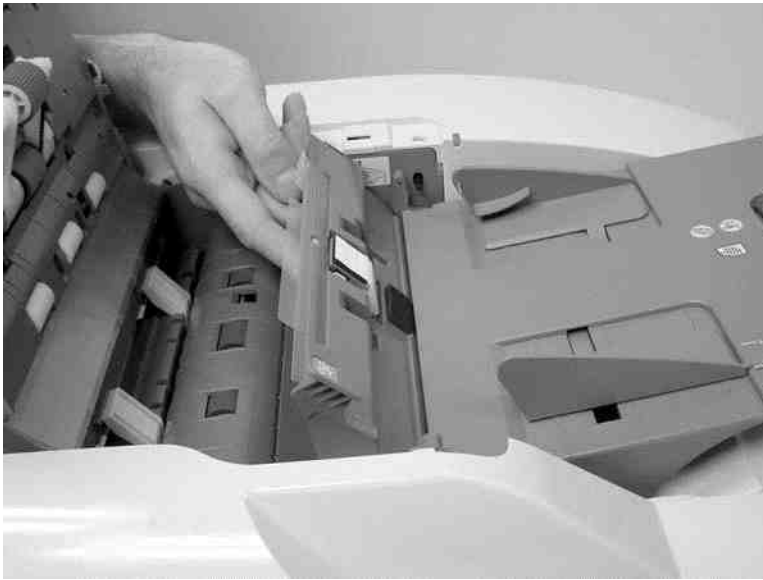


Figure 5-36 Remove the ADF separation pad (3 of 4)

4. Push the separation pad out of the frame.

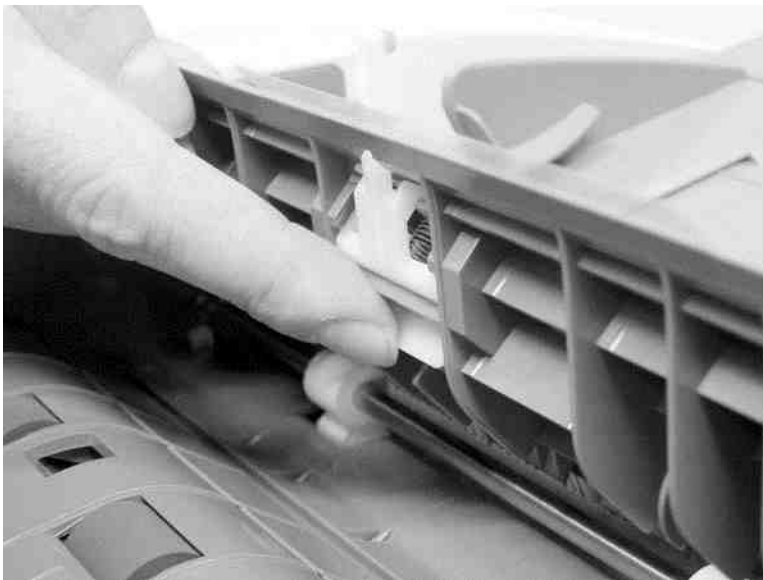


Figure 5-37 Remove the ADF separation pad (4 of 4)

2. Disconnect the cable (callout 1).



Figure 5-20 Remove the 3-bin mailbox (2 of 3)

3. Lift the 3-bin mailbox, tilt it upward, and pull to remove it from the MFP.

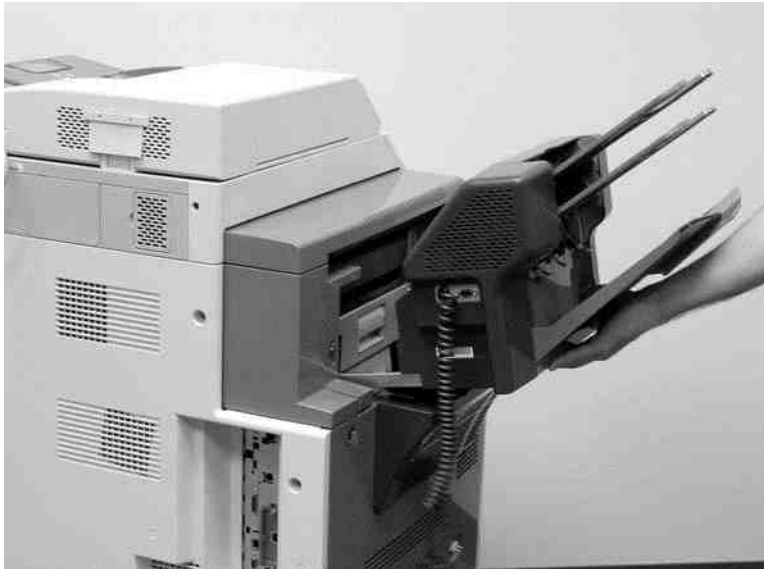


Figure 5-21 Remove the 3-bin mailbox (3 of 3)

ETB assembly, removing

1. Open the right lower cover.

2. Open the ETB assembly by pulling the green handle.



Figure 5-22 Remove the ETB assembly (1 of 4)

3. Depress the blue tabs on the right and left sides of the ETB (callout 2), and then lift the ETB (callout 1) out of the MFP.

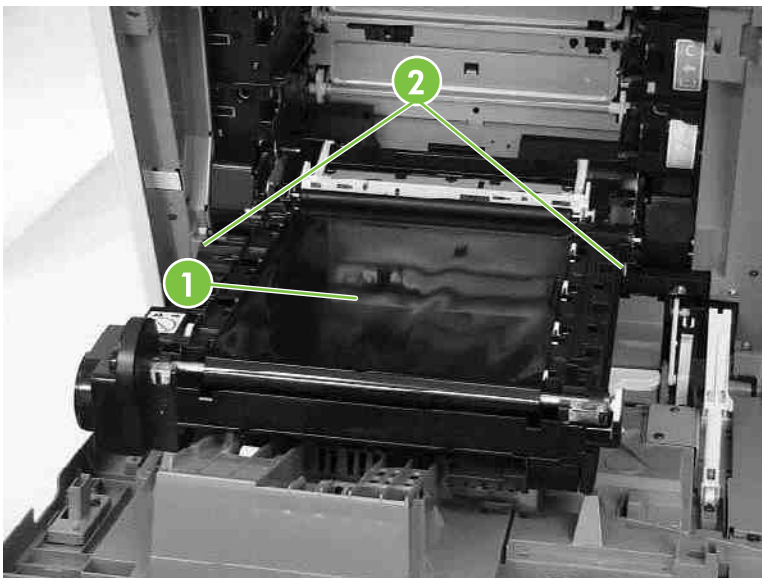


Figure 5-23 Remove the ETB assembly (2 of 4)

4. Detail of right lever (callout 3).

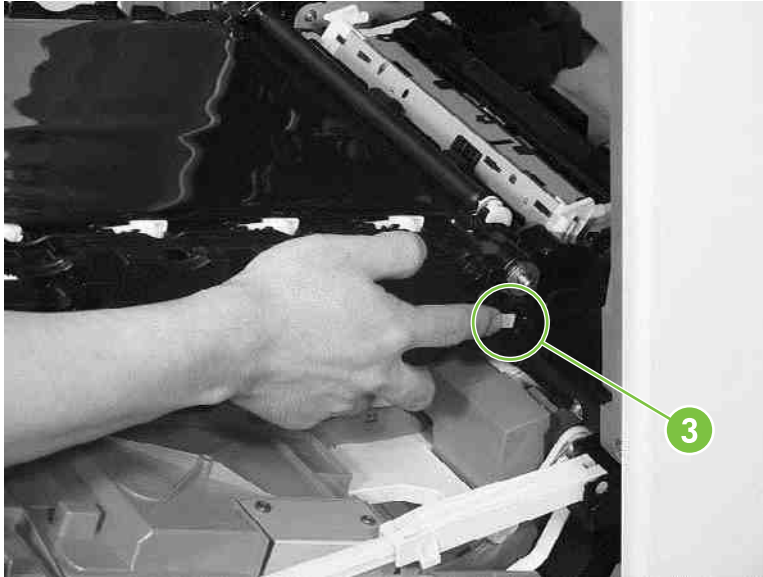


Figure 5-24 Remove the ETB assembly (3 of 4) — right lever

5. Detail of left lever (callout 4).

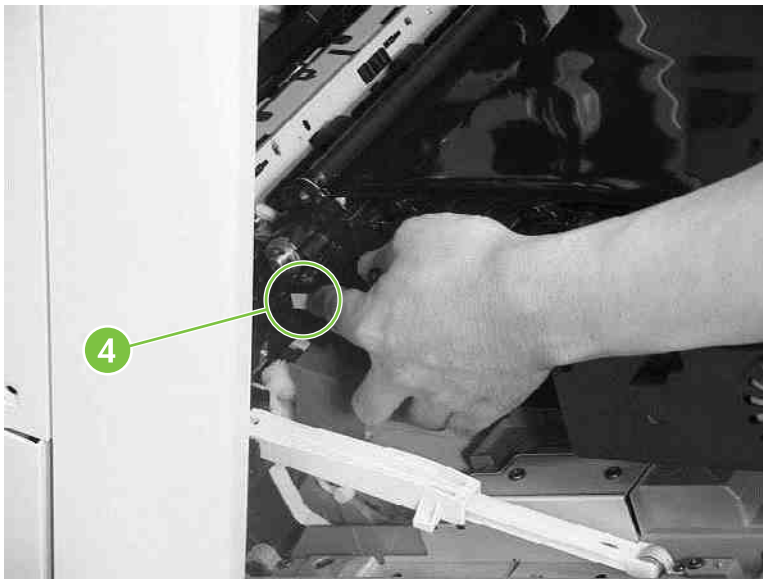


Figure 5-25 Remove the ETB assembly (4 of 4) — left lever

Fuser



NOTE: Do not attempt to disassemble the fuser sleeve assembly. This part cannot be serviced in the field.

1. Open the right top cover (callout 1) and the fuser cover (callout 2).

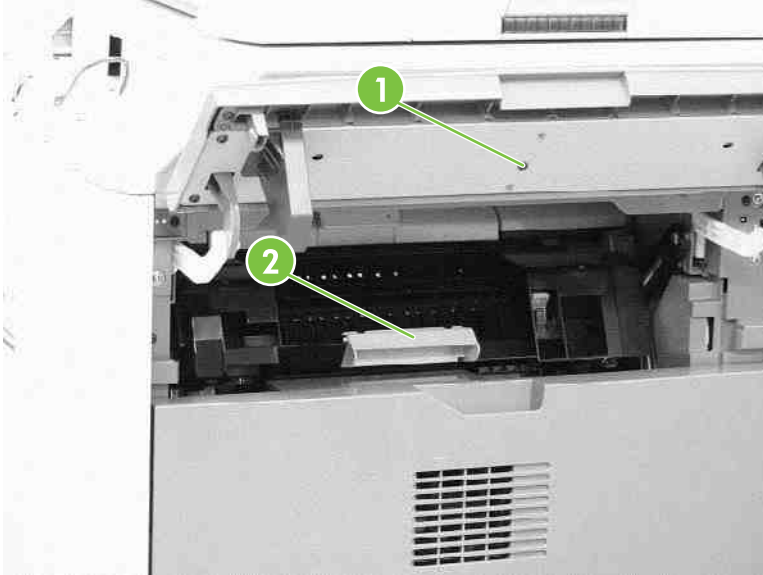


Figure 5-43 Remove the fuser (1 of 2)

2. Gently lift the two purple handles (callout 3). Then pull the fuser (callout 4) out of the MFP.

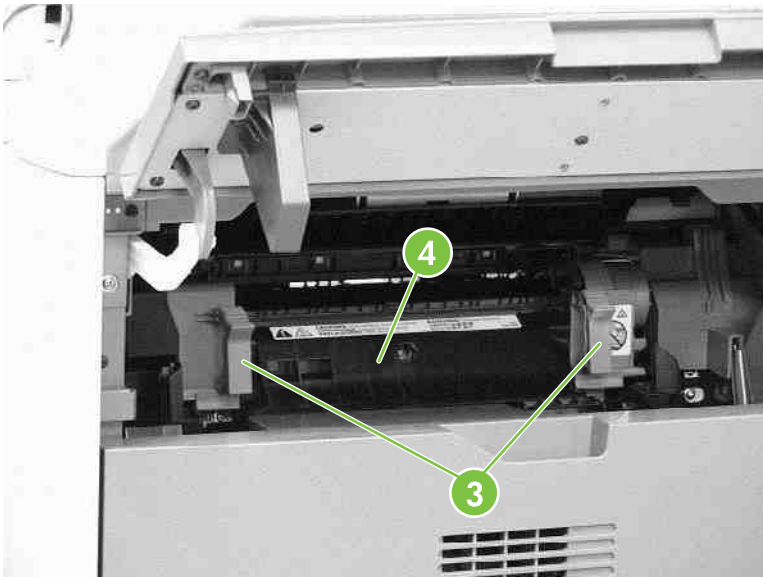


Figure 5-44 Remove the fuser (2 of 2)

Tray 2, 3, or 4 pickup and feed rollers

1. Remove the paper tray. See [Trays 2, 3, and 4 on page 278](#).



Figure 5-45 Remove the tray 2, 3, or 4 pickup and feed rollers (1 of 2)

2. Squeeze the tabs to release the pickup roller (left) and feed roller (right).



Figure 5-46 Remove the tray 2, 3, or 4 pickup and feed rollers (2 of 2)

3. Slide the rollers off the shaft.