


VERSION 1.6.5

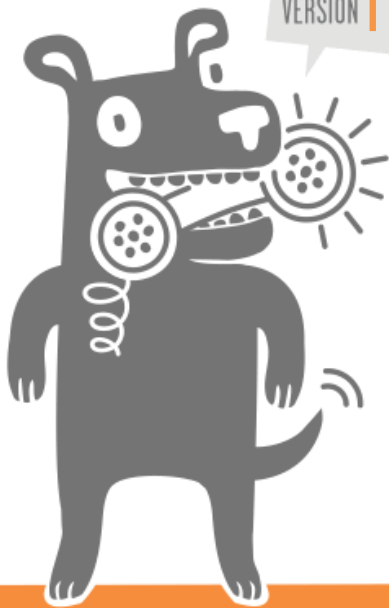

FREEDOM ★ FONE
IT'S FOR YOU

★ QUICK START GUIDE ★

NOTE: To operate Freedom Fone you will need to connect to either a 1-SIM USB device called a MobiGater and/or a 4-SIM SIP device called a VoiceBlue Lite. For more information on these devices, visit:

www.freedomfone.org/page/frequently-asked-questions



Contents

Stage 1.	Installing the software	4
Stage 2.	Getting the SIM card ready for use	6
Stage 3.	Connecting the computer to the MobiGater	7

STAGE

1

Installing the software

Estimated time for installation is 15 minutes

Warning: Please note that the Freedom Fone v1.6.5 DVD will overwrite all data currently on the computer.

- ★ Insert the Freedom Fone DVD into your DVD drive and restart the computer.
- ★ Ensure that the computer's BIOS settings enable the computer to boot from the DVD.
- ★ At the Boot prompt, type install to begin the installation.

Footnote: If the computer is not currently set to boot from the DVD, restart the computer and look for the prompt to modify the BIOS settings and set the primary boot device to the CD/DVD player.

STAGE 1

CONTINUED

- Step 1: Select the language you prefer for installation. Click the Forward button.
 - Step 2: Select your region and time zone. Click the Forward button.
 - Step 3: Select keyboard layout. Click the Forward button.
 - Step 4: Select Erase and use the entire disk. Click the Forward button.
 - Step 5: Enter your name. “What name do you want to log in as” must be set to **lupinus**. Enter **lupinus** for the password and click the Forward button.
 - Step 6: Click install. Once installation is complete, click the Restart now button.
- ★ When prompted remove the DVD, close the tray and press the Enter button on your keyboard.
 - ★ Wait for the computer to reboot and when prompted enter **lupinus** as your username and password.

STAGE

2

Getting the SIM card ready for use

To avoid problems, switch off the computer and the MobiGater before inserting or removing SIM cards.

- ★ Insert the SIM card in a mobile phone and ensure that:
 - ★ the SIM card has been activated.
 - ★ the pin request setting for the SIM card has been turned off.
 - ★ there is good mobile network coverage in your work area.
- ★ If you have a pre-paid SIM card, ensure that it is topped up with airtime and that it meets the pay-as-you-go operational requirements specific to your country.
- ★ Remove the SIM card from the mobile phone and place it in the MobiGater.

Connecting the computer to the MobiGater

For other supported GSM devices, refer to the User Guide.

- ★ Switch off your computer before connecting each MobiGater via its USB cable.
- ★ If all is correct, the LEDs on the MobiGater will light up as follows: the LEDs under the power and USB icons will both light up red. The LED under the mobile phone icon will flicker red roughly every four seconds, as the SIM card polls the nearest mobile network tower.

FREEDOM ★ FONE

IT'S FOR YOU

PO Box GD 376
Greendale
Harare, Zimbabwe

email: info@freedomfone.org
website: www.freedomfone.org