




★Aries2 / Virgo2




Symptom: Cannot start up, Screen stays black.

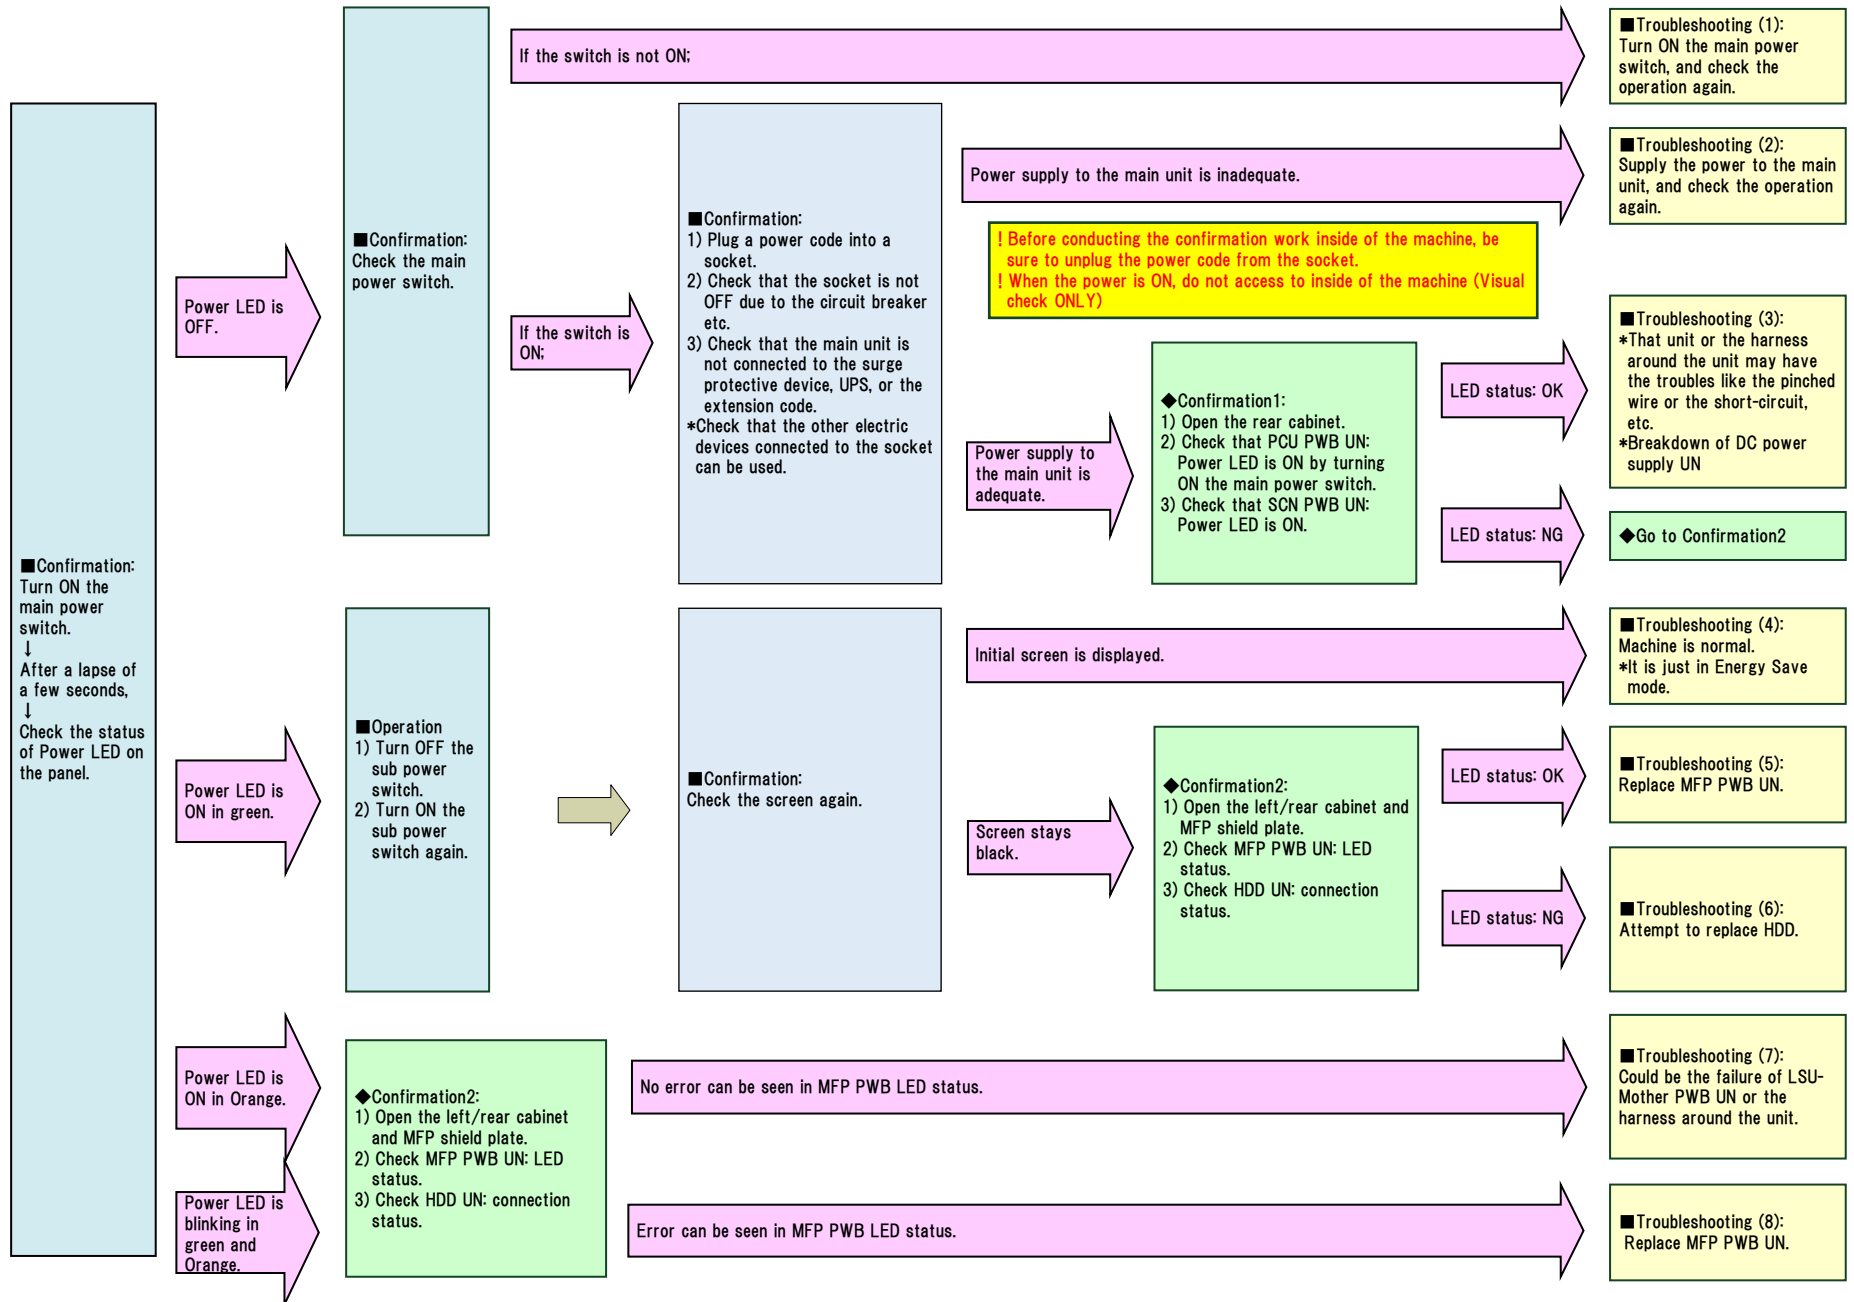




◆Confirmation2:

- Aries2: Open the left cabinet and MFP shield plate and turn ON the main power switch.
- Virgo2: Open the rear cabinet and MFP shield plate and turn ON the main power switch.



Power LED		Failure (and implementation of countermeasure)
Off		Power supply failure occurs. -> Try PWB replacement. -> Check DC power supply.
On		Normal

Operation LED 1		Failure (and implementation of countermeasure)
All LEDs not lighten		Activation failure -> Try removing and inserting the SD card and replacement of SD card.
All LEDs blinking		Memory failure -> Replace the PWB.
All LEDs lighten		Normal
Others		Activation failure / memory A failure -> Replace the PWB.

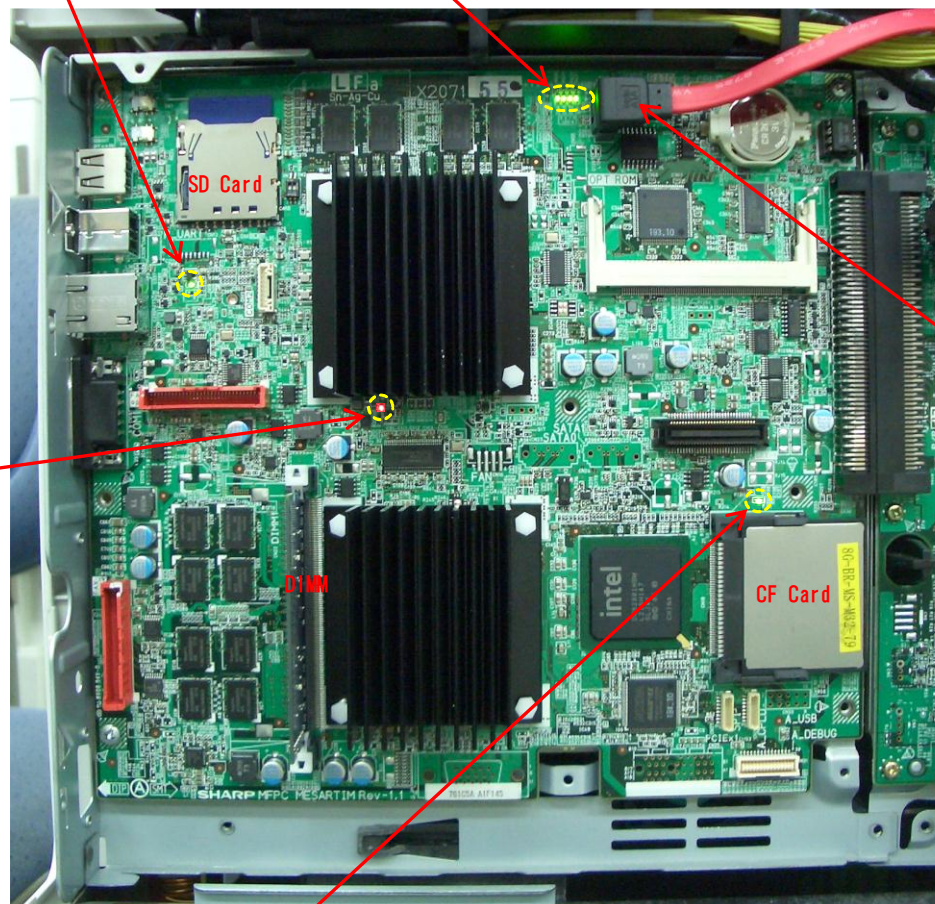SD boot error [with Red LED]		
Off		Normal
On		Possible SD card failure -> Remove and insert the SD card.



HDD unit:
Confirmation of
connecting condition

Operation LED 2		Failure (and implementation of countermeasure)
Off		No access to CF card executed.
On		Access to CF card executed.
[How to check (and implement the countermeasure)]		
The LED blinks severely at the time of power on because access to the CF card is executed frequently.		
- The LED keep lightening: Failure to access CF card -> Replace the CF card / PWB.		
- The LED never lightening: Activation failure -> Replace DIMM / PWB.		