

# **Elisa Lukula Device User Interface Specification**


**The Elisa Lukula Home view**

## The Home View of Elisa Lukula

The Home View is the main view of Elisa Lukula.

It is displayed always, when


- **The device is turned on**
- **User presses the Home button**  
(Defined at page 8)

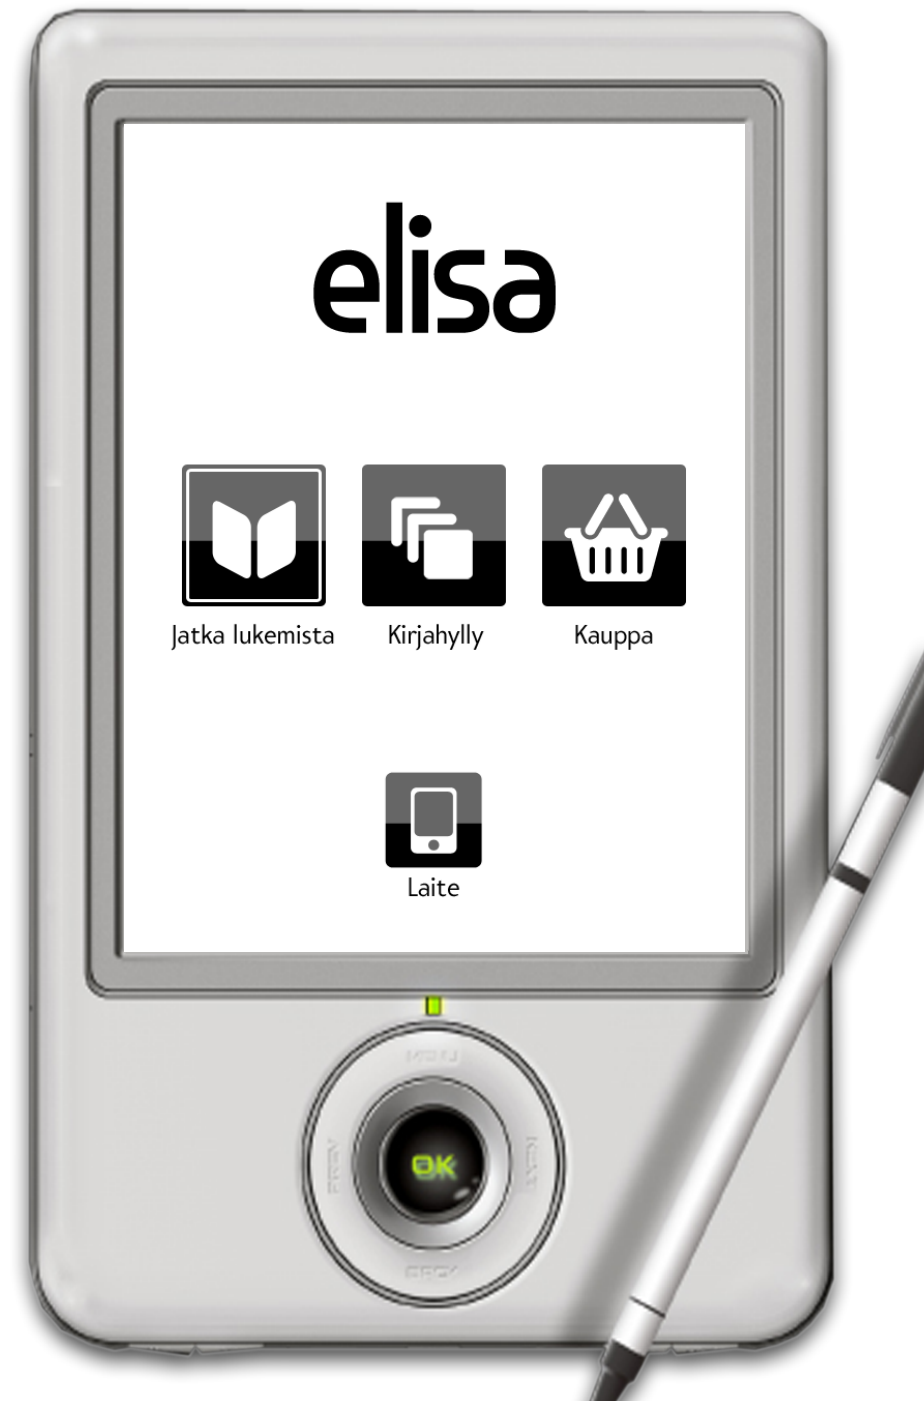

## The Home View of Elisa Lukula

The home view provides four options for the user:

- **Continue reading (Jatka lukemista)**  
This option takes user immediately to the last book he was reading.
- **The Library (Kirjahylly)**  
Displays the Library.
- **The Webstore (Kauppa)**  
Opens the Elisa Bookstore in the browser
- **The Device (Laite)**  
Opens the device home menu  
(Library, SD Card, Recent Documents -  
Settings, Web Sites)

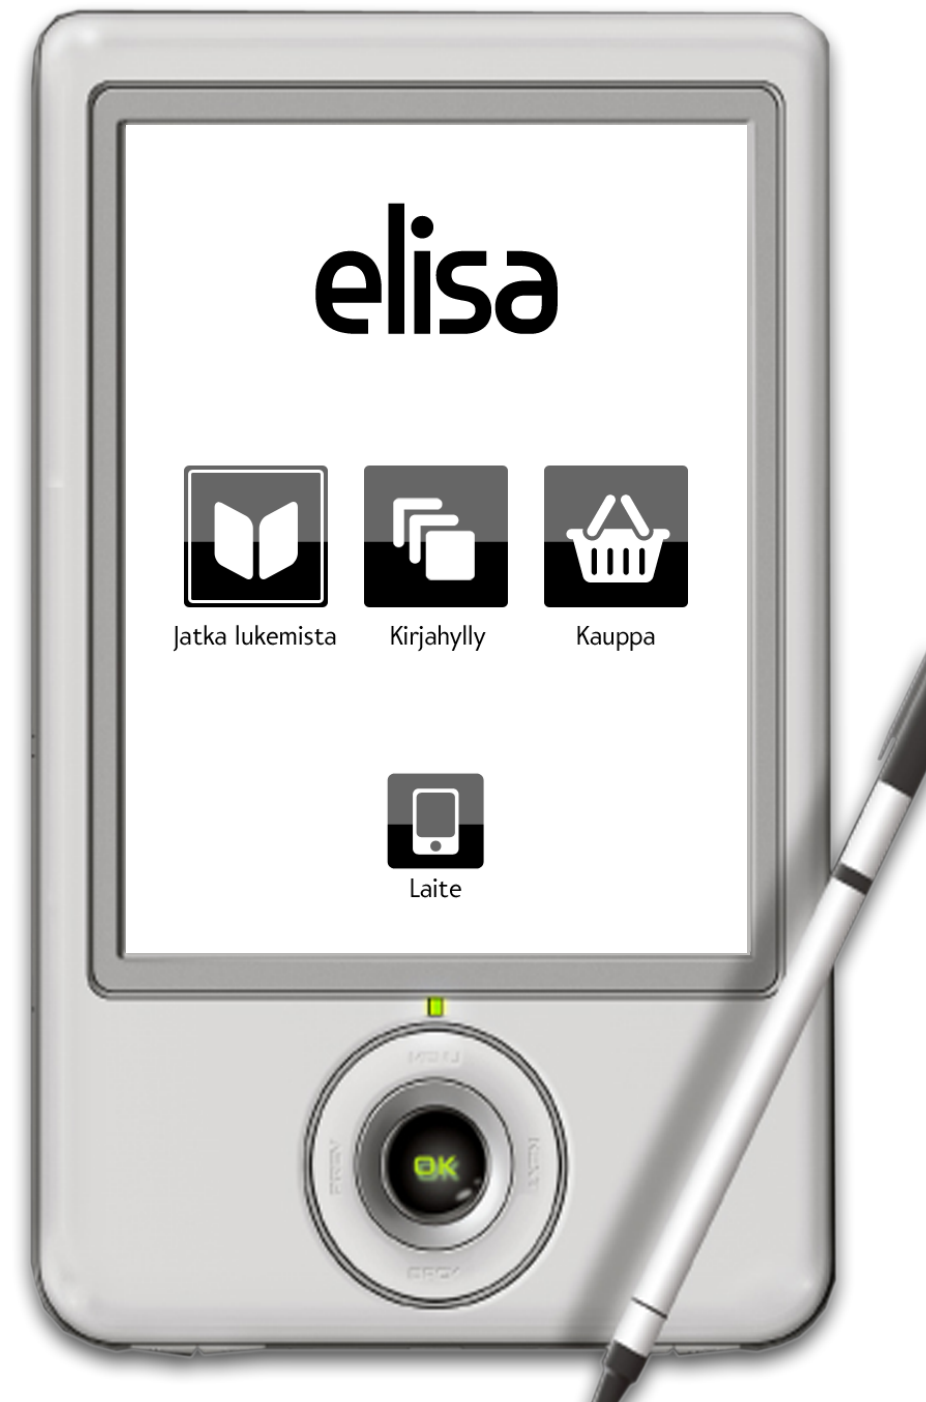

# The Home View Specifications

The placement and size information is displayed to the right.

The button texts are written on The Elisa Font. Included in the font file is the font style Book. The font size is 28px and the color is black, #000000.

The button texts are centered below their respective button icons.

These dimensions leave room for the device status bar in the bottom of the screen.



## Using the Home View with hardware keys


All the four actions on the Home View should be accessible without the use of stylus by using the device hardware keys.

The **Continue Reading** option is highlighted by default. The highlighted item is visually indicated by showing the highlighted version of the icon.

User can highlight other items by using the left, right, up or down keys.

Tab indexing should follow a pattern from left to right and from top to bottom.

The highlighted item is activated by pressing the OK button.

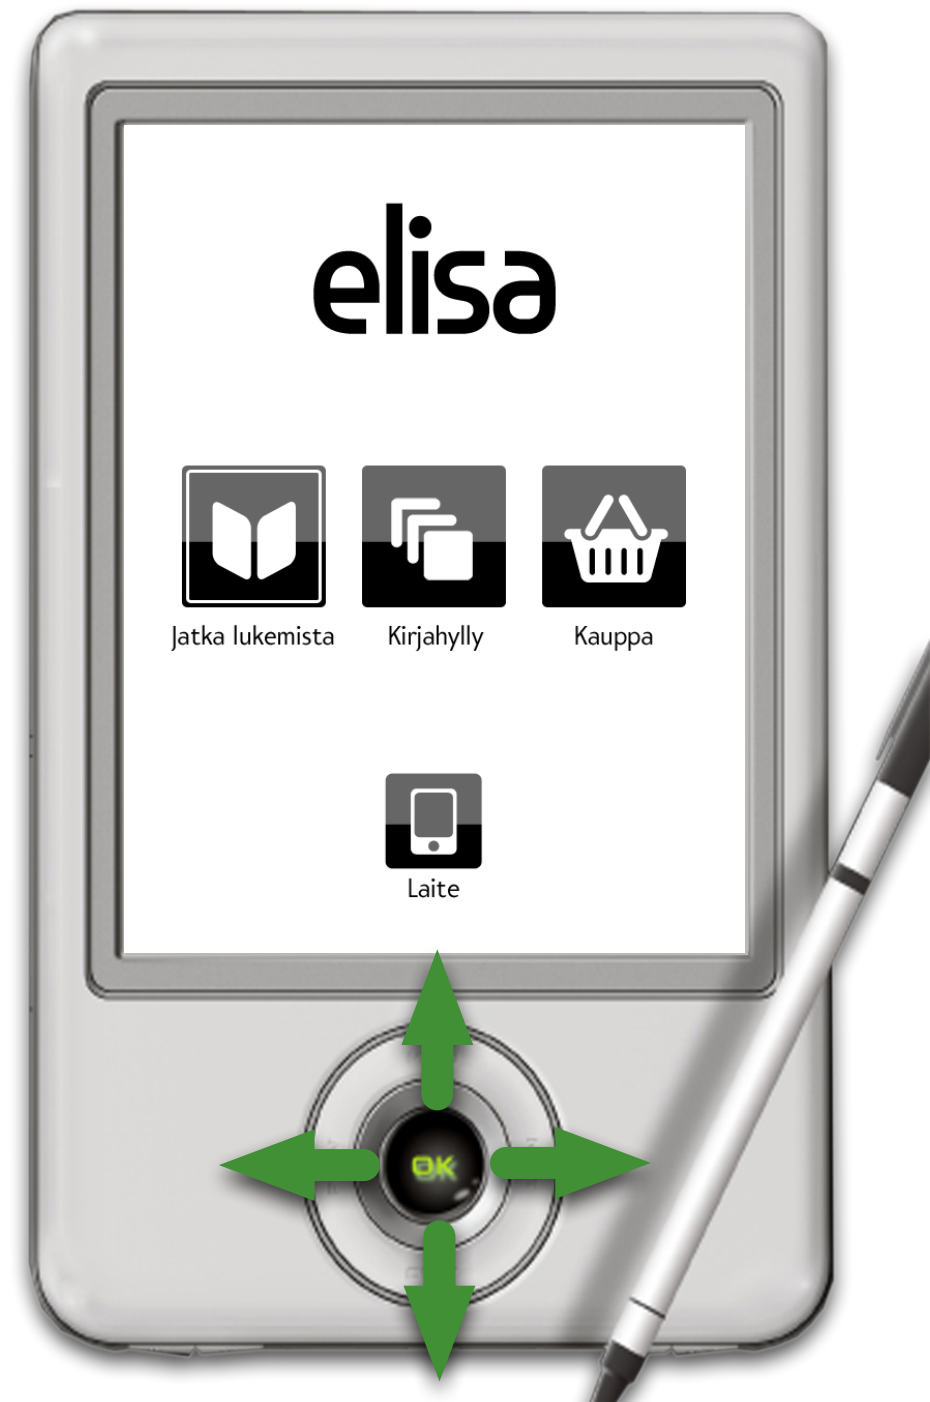


# **Elisa Lukula Device User Interface Specification**

**Hardware key interaction**

## The Hardware keys

The nine hardware keys of the device should be as followed:

- 1) Home
- 2) Previous
- 3) Next
- 4) Menu
- 5) Up
- 6) Left
- 7) Right
- 8) Down
- 9) OK

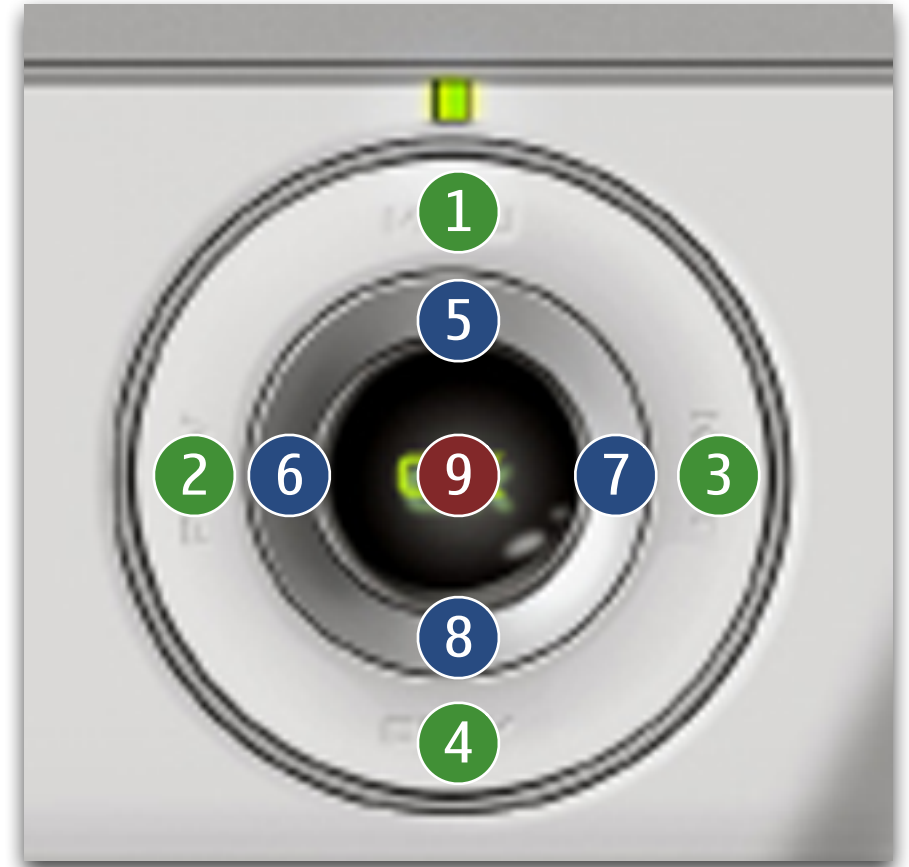

## The Home Key

The home key takes the user always to the Elisa Lukula Home View (defined at page 2).

For example, if the user is reading a book or browsing the book store, pressing the Home Key takes him immediately to the Elisa Home View.

The home key is defined with an icon or text "Home".

### Exceptions:

When the user is browsing the device filesystem, the home key takes the user to the parent folder.

When the device pop-up menu is open, the Home Key closes the menu.





## The Menu Key

The Menu Key opens and closes the Device pop-up menu.

The behaviour is exactly the same as in the prototype devices, but the Menu Key is now located in the bottom of the main key circle.



## Other hardware keys

The behaviour of all the other hardware keys should be similar than in the prototype devices.

