
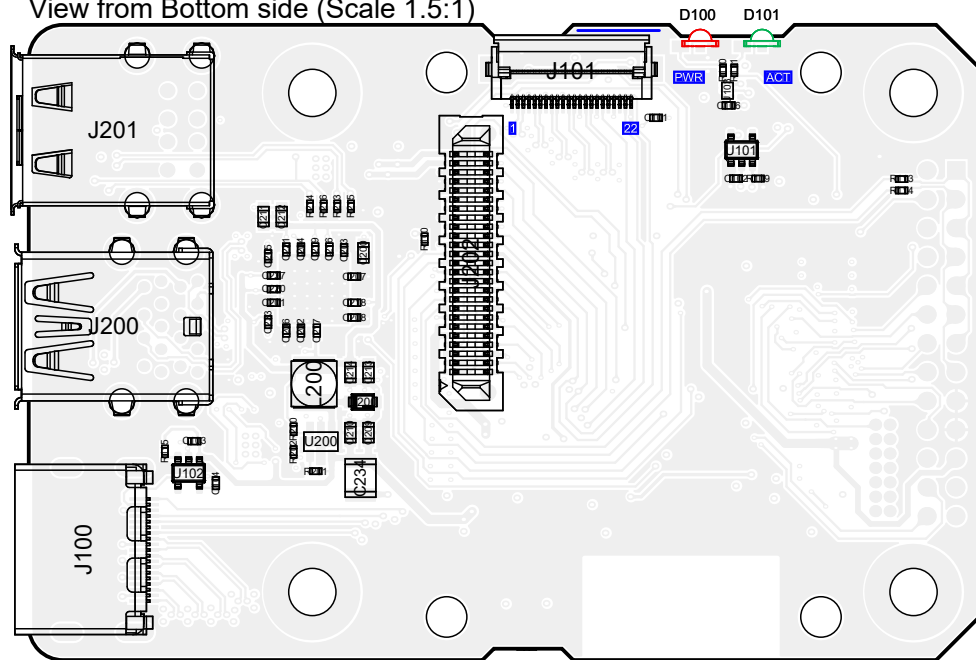


SW100 push-button user defined

D101 green LED -> Pi activity LED

D100 red LED -> Pi power LED




SW101 push-button can be used to reset the Pi while running

KUKSA CANOPI Prototyping Platform
<https://www.eclipse.org/kuksa/>
 V1.1 © 2022 Eclipse KUKSA Project




set jumper to connect Pi with STN2120 chip
(default jumper PI_TX-GPIO14 and PI_RX-GPIO15)

DETAIL A (Scale 4:1)

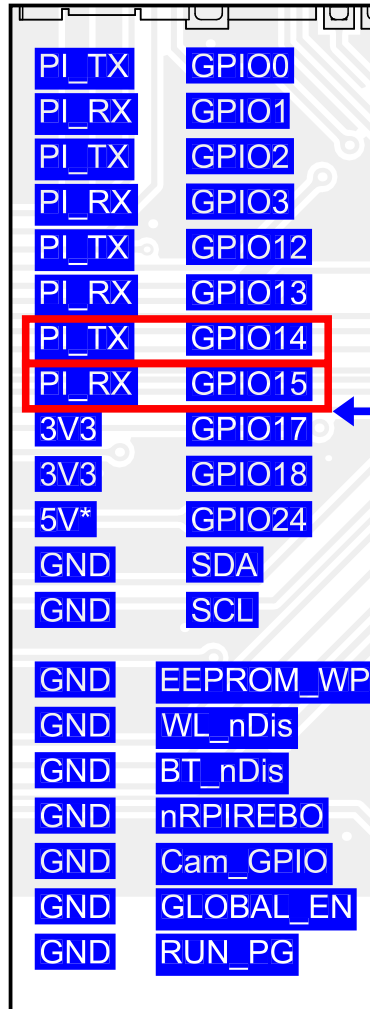

DETAIL C (Scale 2.3:1)

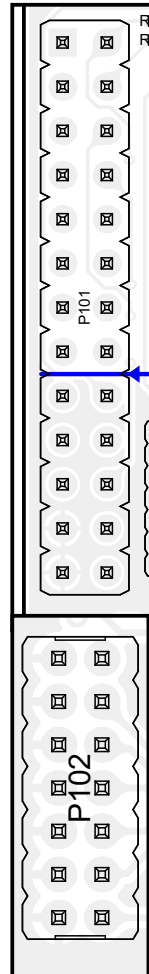


DETAIL B (Scale 4.5:1)

information in CM4 datasheet

<https://datasheets.raspberrypi.com/cm4/cm4-datasheet.pdf>

SD100 SD-Card slot for CM4 Lite modules

View from Top side (Scale 1.5:1)

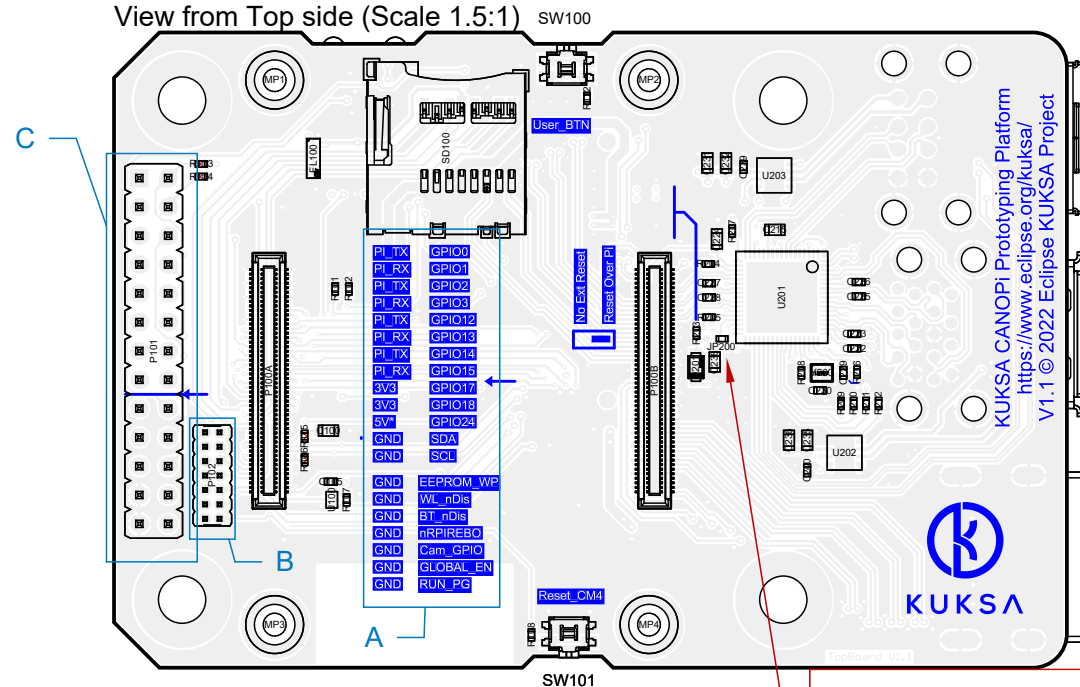

JP200 Triple jumper
-> Reset signal to USB-Hub from Pi
(default, 0R between 1-2)

-> Power on Reset
(0R between 1-3)

A

B

C

D

E

1

1

2

2

3

3

4

4

