


PACTware Installation guideline

Download the required “**DTM collection**” from our Product Selector to your Computer.


Unpack the “**zip**” file with a suitable software programme e. g. Winzip or Total Commander.

When the “**zip**” file is unpacked the directories “**PACTware_setup_shell**”, “**PW2_setup_hart**”, “**PW2_setup_level**”, “**PW2_setup_PTP**”, “**PW2_setup_remote**” and “**Readme**” will be generated.

In the same directory there is also the file “**Autorun.exe**”
Doubleclick to **Autorun.exe** and select at first “**PACTware 2.0 FDT 1.2**” to install the **PACTware** Frame Application.

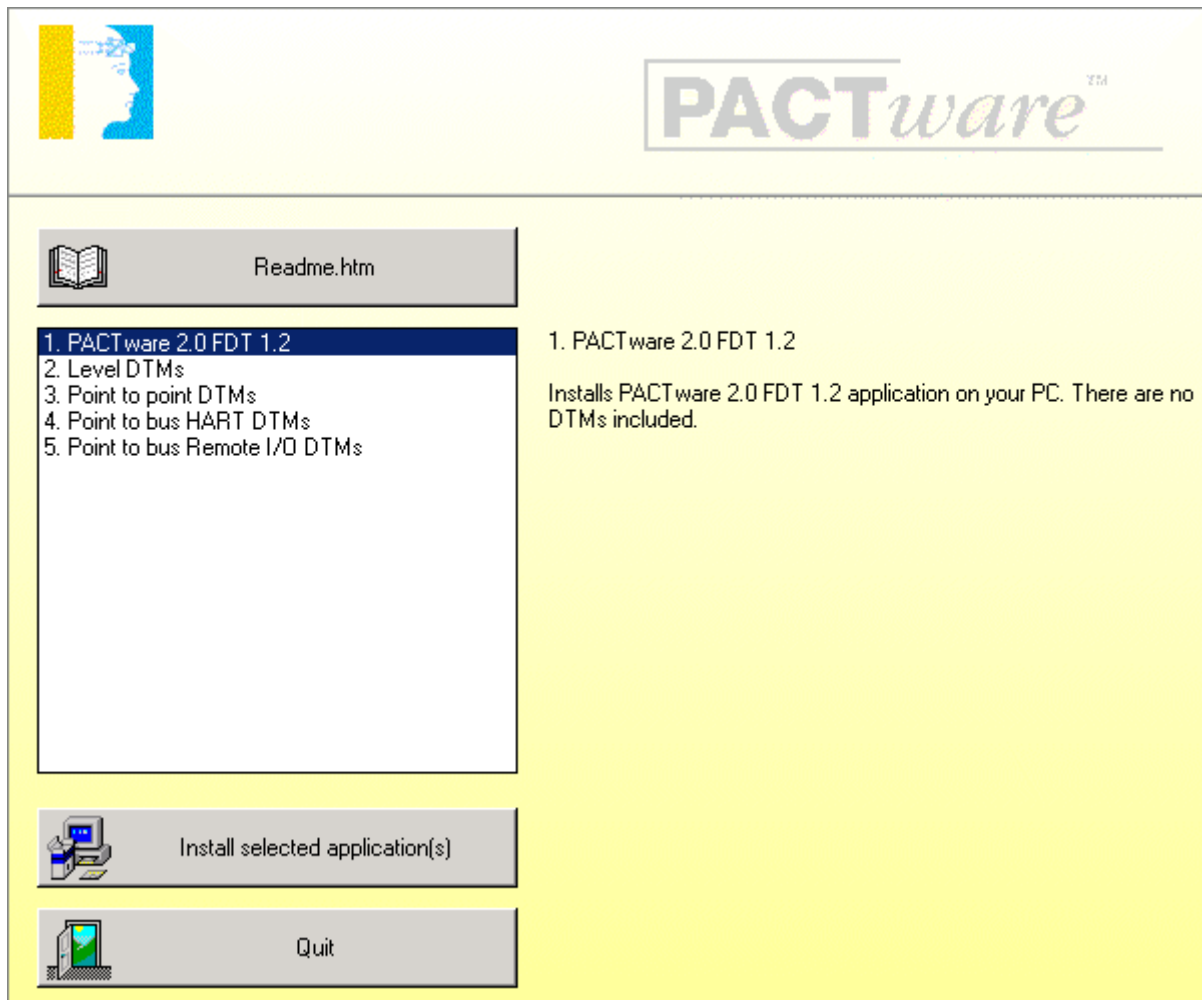


You will be asked now if you want to install „**PACTware 2.0**“ .
Confirm with „**Ja**“.

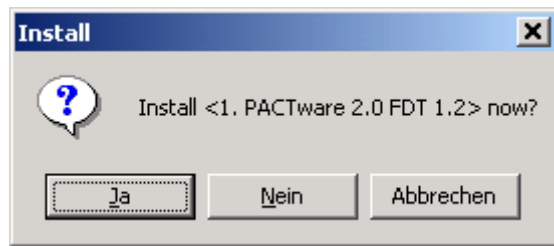


Select the required language and confirm with **Next**.


PACTware 2.4 SP2 FINAL Setup

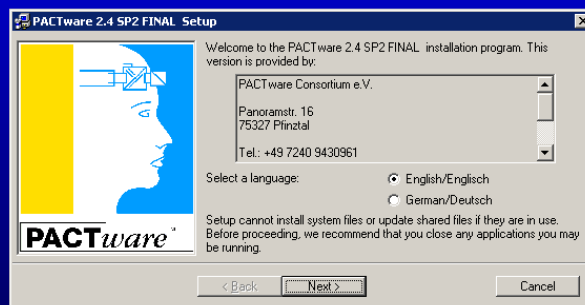


Select „**PACTware Edition2 Application**“ and „**PACTware Default Password**“.
Confirm with “**Next**”.

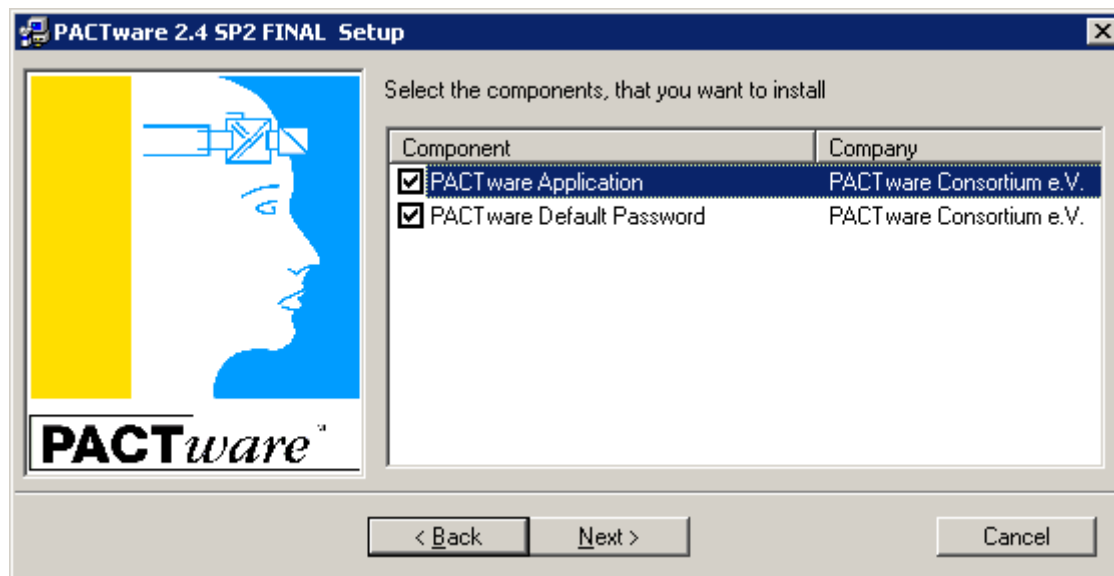


“**PACTware 2.4** ” will now be installed on your computer.
Confirm with “**OK**” when the installation has been finished

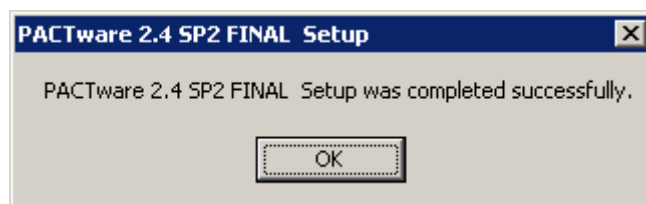

Select the DTM packages you want to install e.g. **“Level DTMs”** and confirm with **“Install the selected application”**.
Do it in the same way with all other DTMs you want to install.

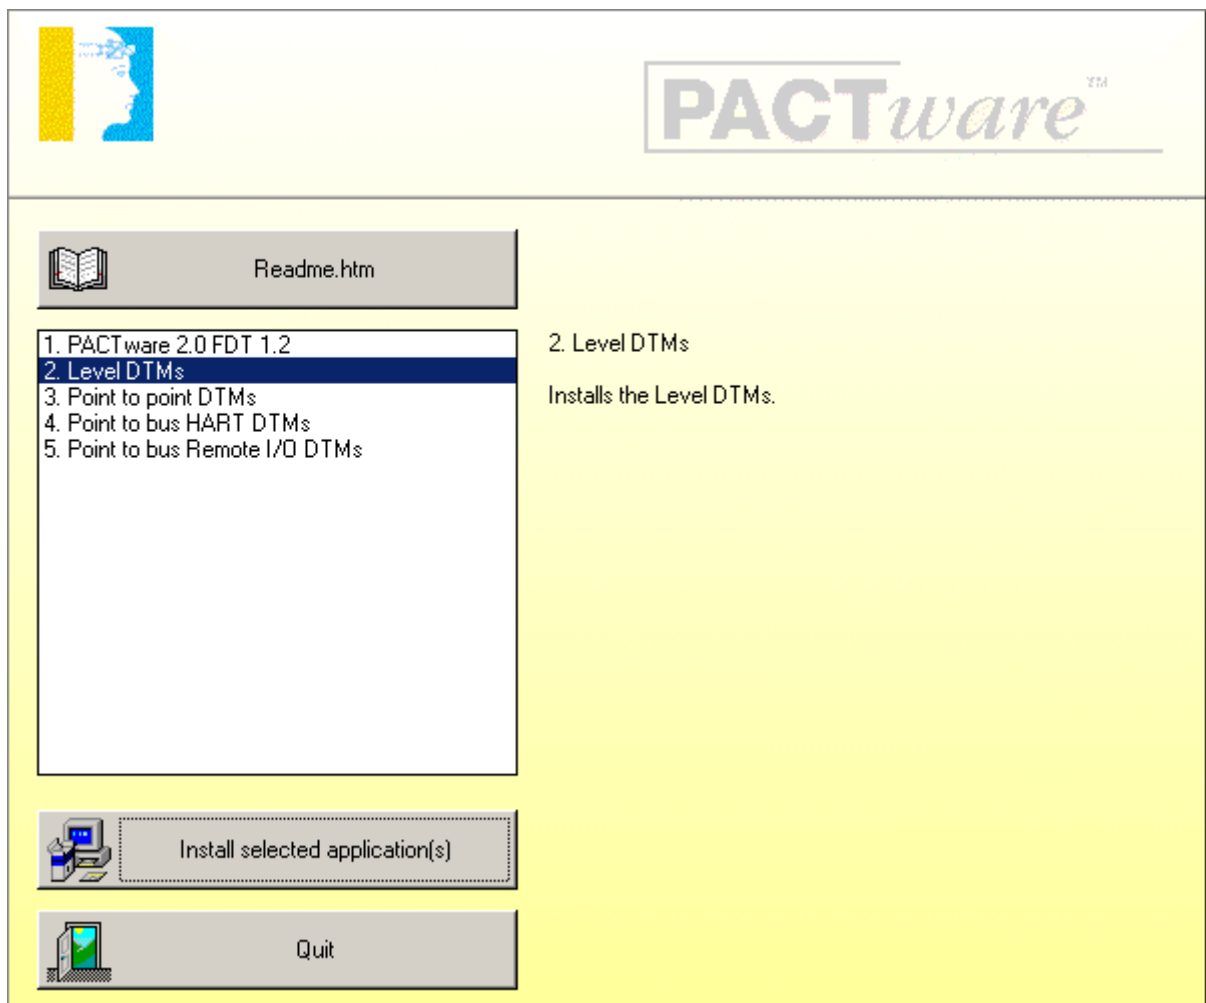


You will be asked now if you want to install the **“Level DTMs”**.
Confirm with **“Ja”**.

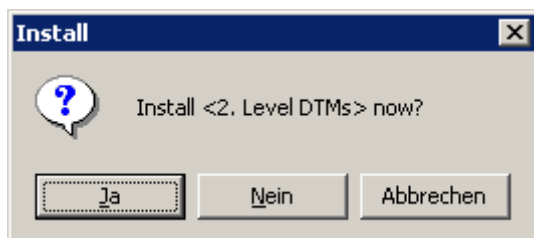


Select the required language and confirm with “**Next**”.


Level Setup

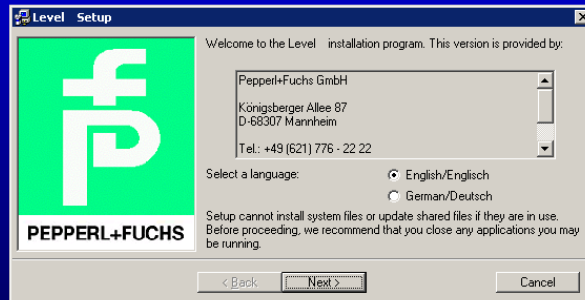

Select the required DTMs and confirm with “**Next**”.

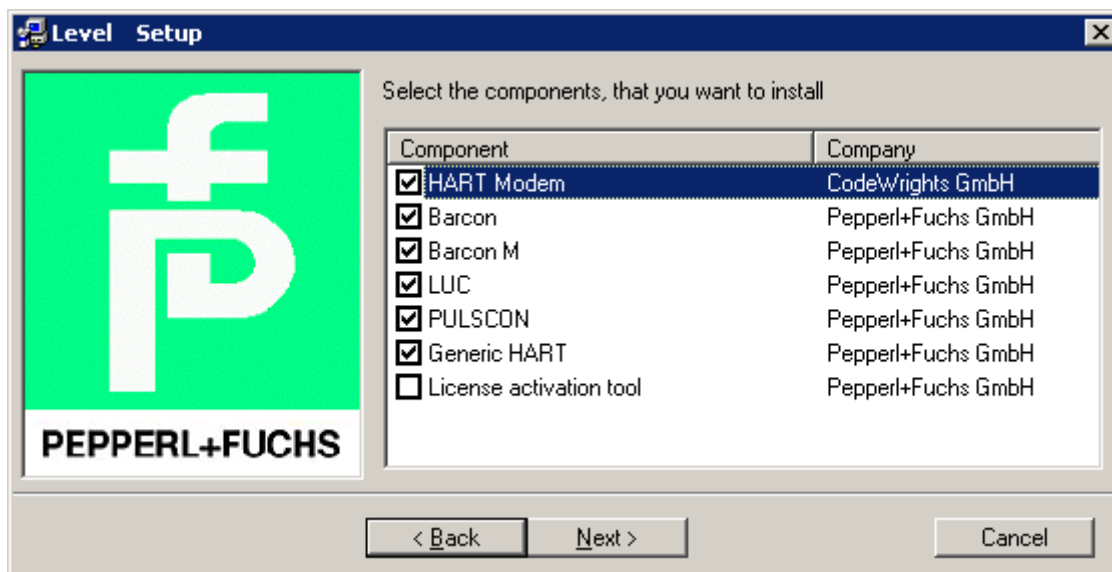

The “**Level DTMs**” will now be installed on your computer.
Confirm with “**OK**” when the installation has been finished

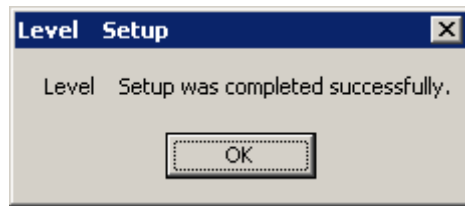


Proceed with the installation of other DTMs if required in the same way as you has done it with the “**Level DTMs**” right now.


Installation of the Licence Activation Tool

The installation of the “**Licence Activation Tool**” can be done in connection with the installation of any DTM package e.g. the “**Level DTMs**”.


Select “**Licence Activation Tool**” and confirm with “**Next**”.

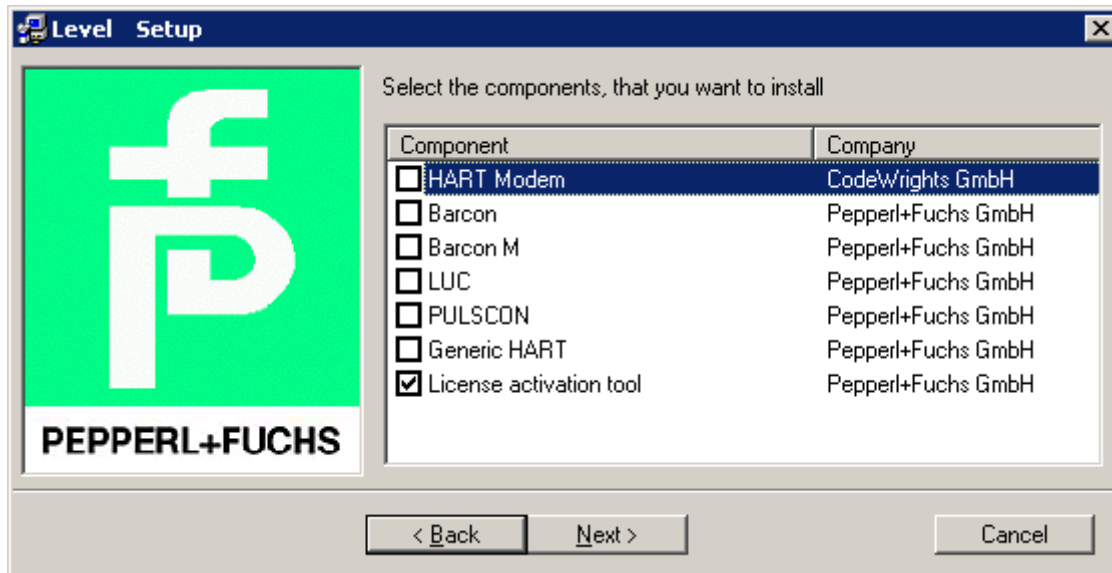


Confirm with “**Install**” when the following screen appear.

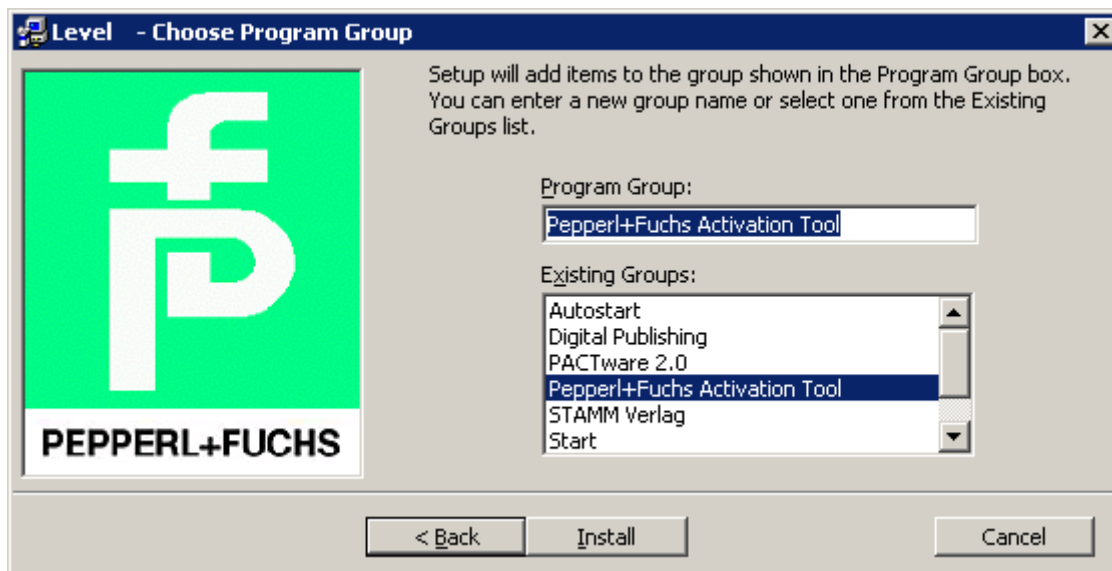


The **“Licence Activation Tool”** will now be installed on your computer.
Confirm with **“OK”** when the installation has been finished

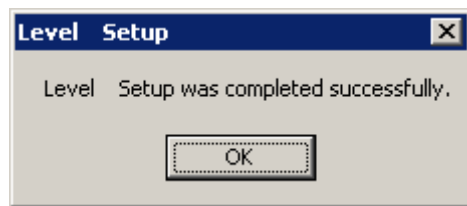


Start the **“Licence Activation Tool”** via the Windows task bar.

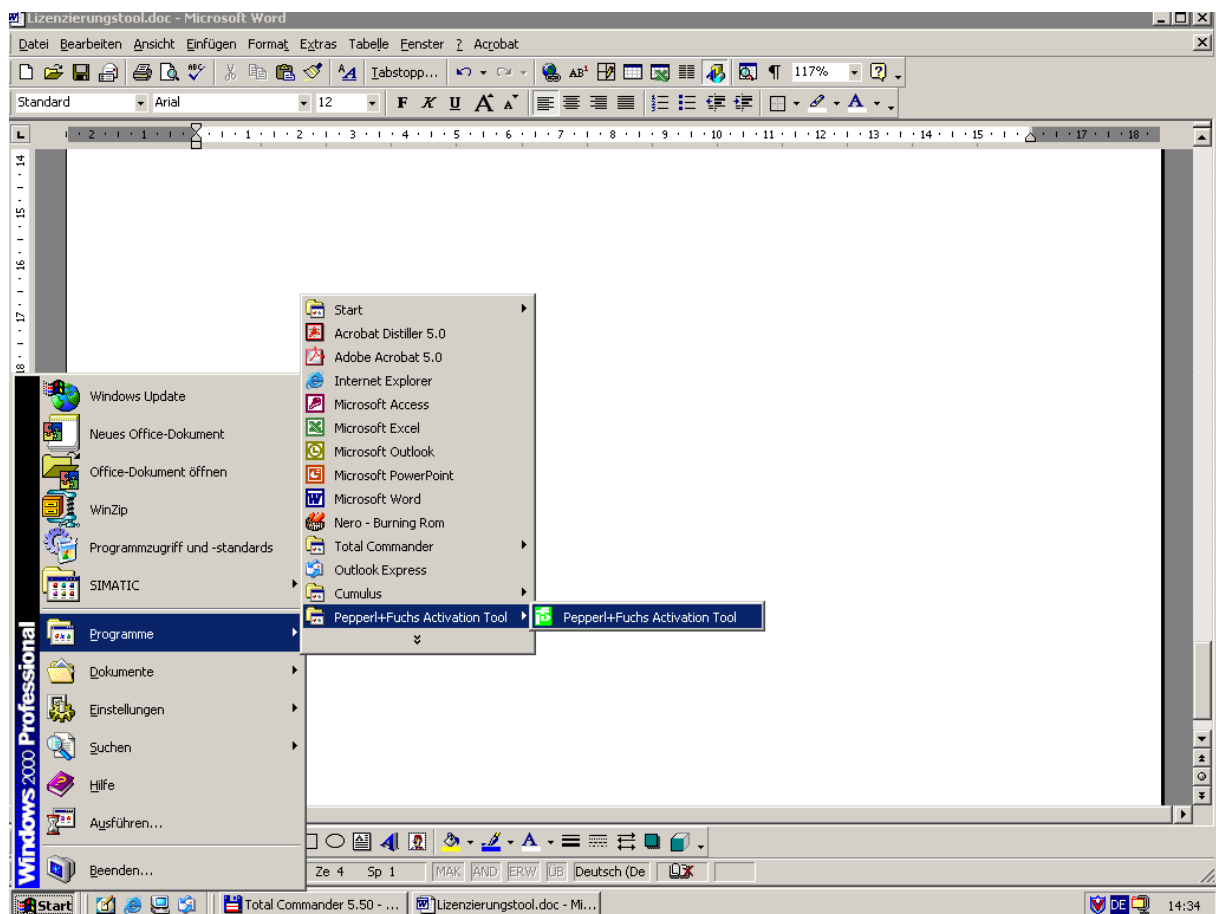


A window appear where you have to enter your licence code.

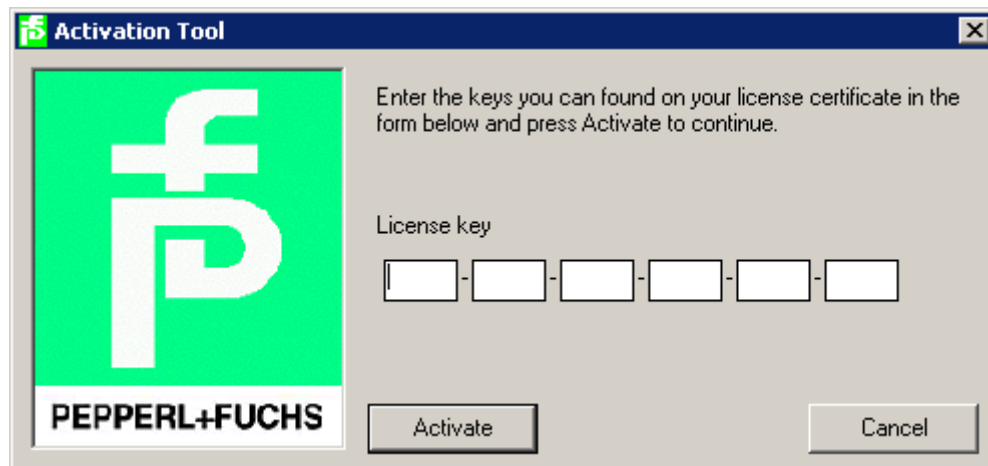

Enter your licence code and confirm with „**Activate**”.

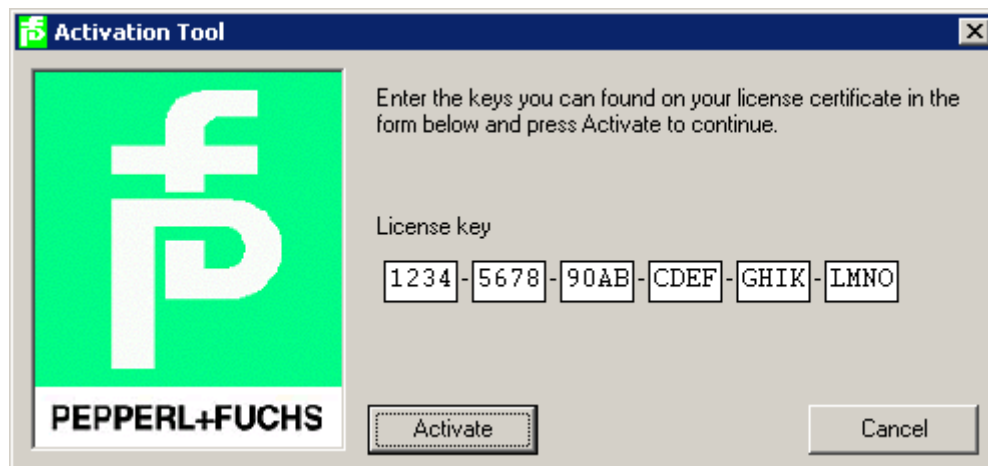

The “**Level DTMs**”will now be licenced on your computer.
Confirm with “**OK**” when the licence was successfully installed.

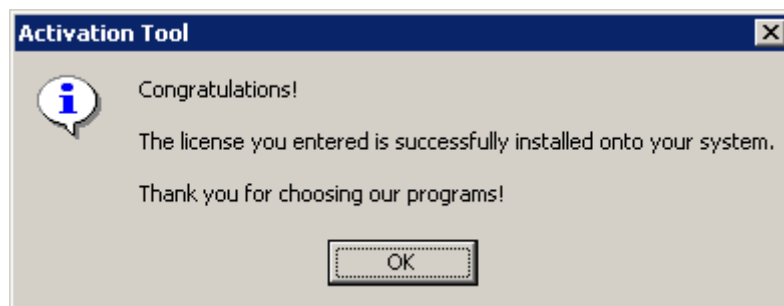


The licence activation of other DTMs if required can be done in the same way at any time.

Start **PACTware** via the Windows Task bar.
Enter the password „**manager**“ and confirm with OK.



The **PACTware** screen will start now.

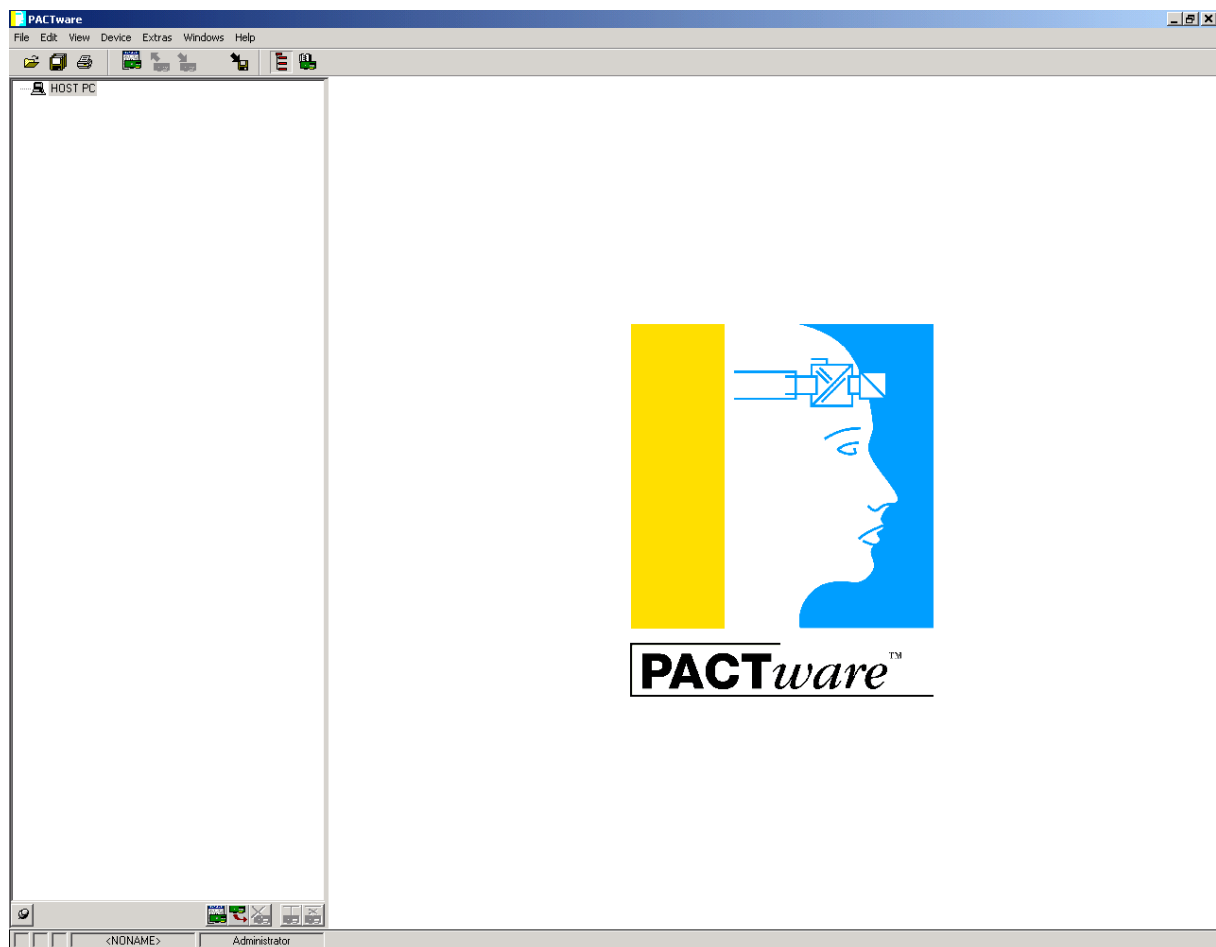

Detailed information of **PACTware** is available in the PACTware manual. You can download the file **_manual.zip**.

http://www.pepperl-fuchs.com/pa/accessories/pactware/main_e.html - Microsoft Internet Explorer bereitgestellt von Pepperl+Fuchs

Datei Bearbeiten Ansicht Favoriten Extras ?

Adresse http://www.pepperl-fuchs.com/pa/accessories/pactware/main_e.html Wechsell zu Links

english | deutsch Home | news | factory automation | process automation | products | the company | jobs&careers

text search

product search

[up]

Contents

help

site map

about

print

Home | News | Service | Catalogue | Downloads

Efficient device configuration with **PACTware** and FDT

Download Software

[data sheet - installation guidelines](#)

[programming adapter - point to point: conventional interface technique - point to bus: Remote I/O](#)

Download

Package I...IV


| Package I | Package II | Package III | Package IV | manual |
|---|---------------------------------|---------------------------|--------------------------|------------|
| point to point V1.3 conventional interface technique | point to bus V1.2 Remote I/O | point to bus V1.2 HART | Level V1.2 | |
| PACTware shell V 2.4 SP2 | PACTware shell V 2.4 SP2 | PACTware shell V 2.4 SP2 | PACTware shell V 2.4 SP2 | |
| KFD2-GU-* V1.3.8 | RPI V1.3.32 | KFD2-HMM16 V1.4.14 | Barcon V1.3.10 | manual.zip |
| ED2-UT-* V1.3.11 | IS-RPI V1.3.22 | HIS2700 V1.4.14 BETA | Barcon M V1.4.32 | |
| KFD2-UT-* V1.3.11 | Com-RPI V1.3.32 | Generic HART V1.3.2 | LUC V1.4.28 | |
| KFD2-CRG-Ex1.D V1.3.1 | Com-ModBus V1.3.1 | Com HART FDT V1.4.8 | PULSCON V1.4.32 | |
| KFD2-UFC-Ex1.D V1.3.73 | Com-Profibus V1.3.1 | | Generic HART V1.3.2 | |
| COM-RS232-300 V1.3.5 | | | Com HART FDT V1.4.8 | |
| COM-RS232-9600 V1.3.11 | | | | |

Licences

Enterprise

Internet

Select the required language

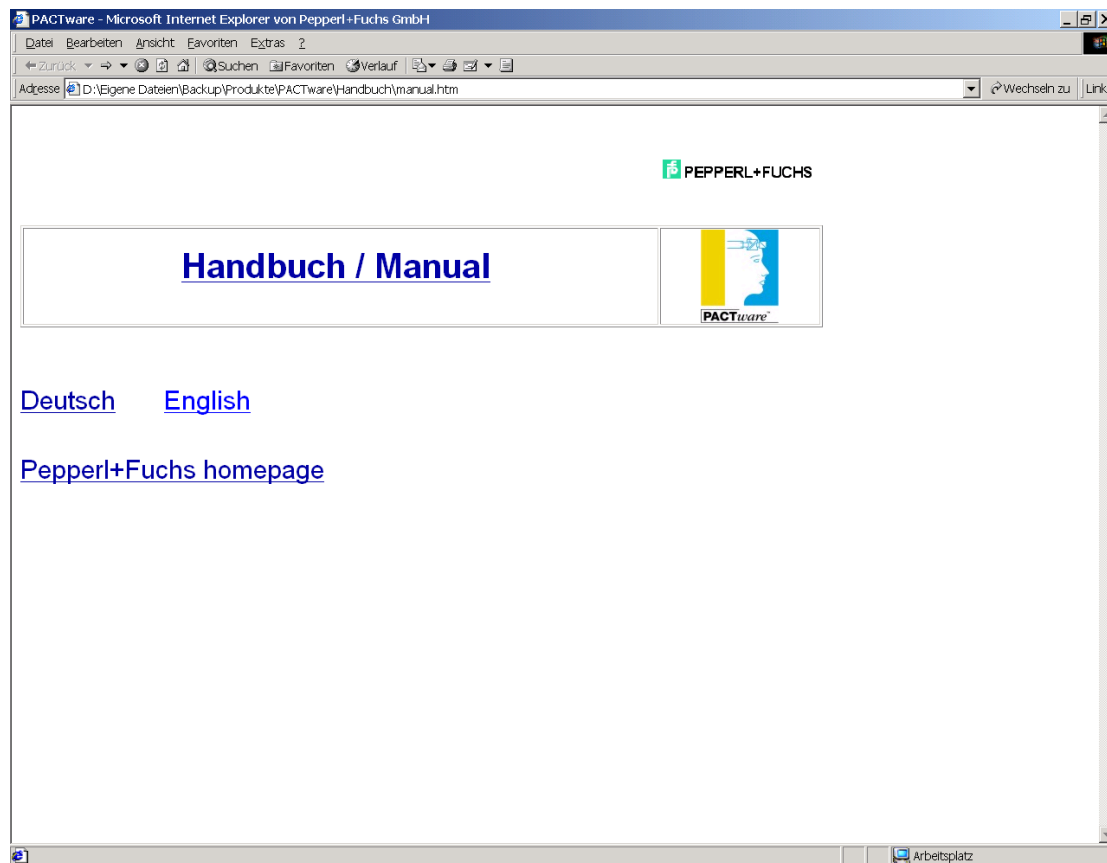

Select PACTware

