




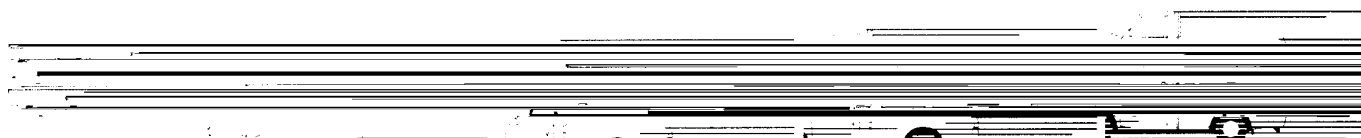

Workshop Manual

electrical wiring SUPPLEMENT

L200 2002

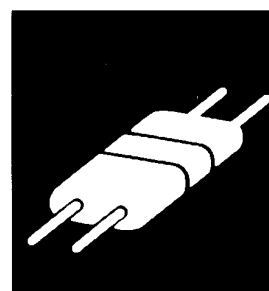

ENGINE GROUP

PWEE□□□□

(Looseleaf edition)

ELECTRICAL WIRING

PHTE96E1-B (Basic)

PHTE96E1-C (Supplement)

PHTE96E1-D (Supplement)

PHTE96E1-E (Supplement)

PARTS CATALOGUE

T603B00□D□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

MITSUBISHI MOTOR SALES
Europe B.V.

© Mitsubishi Motors Corporation

August 2001

of any component of the SRS or any SRS-related component.

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.