

mitsubishi

MULTIPOINT

FUEL INJECTION



INTRODUCTION

EXPLANATION OF MANUAL CONTENTS

Maintenance and Servicing Procedures

- Removal steps:

The next designation number onwards.

INTRODUCTION

Indicates
the group
title.

Indicates
the section
title.

Indicates
the group
number.

Indicates
the section
number.

Indicates
the page
number.

6A1 ENGINE – Water Pump and Water Pipe

11A-7-1


7. WATER PUMP AND WATER PIPE REMOVAL AND INSTALLATION

Denotes tightening
torque.

Nm kgm ft.lbs.

Denotes non-
reusable part.

This number
corresponds to the
number appearing in
"Removal steps"

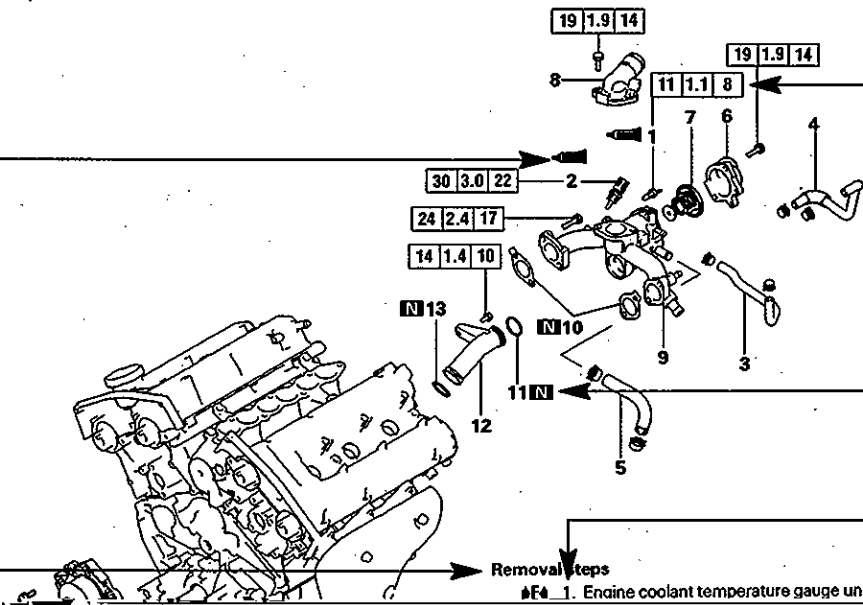

Removal steps

1. Engine coolant temperature gauge unit

List of Effective Pages

Page	Revision code	Date	Remarks
13A-0-1	E	Feb. 1995	
13A-1-1	F	Feb. 1997	Revised
13A-2-1 to 13A-2-3	A	June 1991	
13A-2-4	E	Feb. 1995	
13A-2-5	A	June 1991	
13A-2-6 and 13A-2-7	F	Feb. 1997	Revised
13A-2-7a and 13A-2-7b	F	Feb. 1997	Added
13A-2-8	F	Feb. 1997	Revised
13A-2-8a and 13A-2-8b	F	Feb. 1997	Added
13A-2-9	E	Feb. 1995	
13A-2-10 to 13A-2-14	A	June 1991	