

mitsubishi

ENGINE 4G6 SERIES

WORKSHOP MANUAL

INTRODUCTION

EXPLANATION OF MANUAL CONTENTS

Maintenance and Servicing Procedures

- Removal steps:
The part designation number corresponds

INTRODUCTION

Indicates
the group
title.

Indicates
the section
title.

Indicates
the group
number.


Indicates
the section
number.

Indicates
the page
number.

6A1 ENGINE – Water Pump and Water Pipe

11A-7-1

7. WATER PUMP AND WATER PIPE REMOVAL AND INSTALLATION

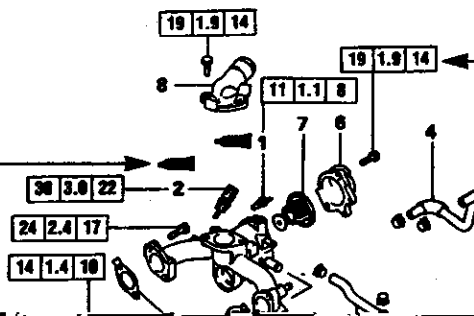

Denotes tightening
torque.

Nm Kgm ft.lbs.

List of Effective Pages

Page	Revision code	Date	Remarks
11A-0-1	A	July 1992	
11A-0-3 to 11A-0-9		Aug. 1990	
11A-1-1 to 11A-1-14		Aug. 1990	
11A-2-1 to 11A-2-4		Aug. 1990	
11A-3-1 to 11A-3-9		Aug. 1990	
11A-4-1 to 11A-4-10		Aug. 1990	
11A-5-1 to 11A-5-4		Aug. 1990	
11A-6-1 to 11A-6-4		Aug. 1990	
11A-7-1 to 11A-7-4		Aug. 1990	
11A-8-1 to 11A-8-5		Aug. 1990	

Page	Revision code	Date	Remarks
11B-4-6	A	July 1992	
11B-4-7	C	Sept. 1995	
11B-4-8 and 11B-4-9	A	July 1992	
11B-4-10	B	Aug. 1994	
11B-4-11 and 11B-4-12	C	Sept. 1995	
11B-4-13 to 11B-4-17	A	July 1992	
11B-4-18 and 11B-4-19	C	Sept. 1995	
11B-5-1	B	Aug. 1994	
11B-5-1a	D	Aug. 1996	Revised
11B-5-1b	B	Aug. 1994	

Page	Revision code	Date	Remarks
11B-10-6 to 11B-10-8	A	July 1992	
11B-10-9	B	Aug. 1994	
11B-10-10	A	July 1992	
11B-11-1	C	Sept. 1995	
11B-11-2	A	July 1992	

Page	Revision code	Date	Remarks
11B-11-8 and 11B-11-9	B	Aug. 1994	
11B-12-1	D	Aug. 1996	Revised
11B-12-2	A	July 1992	
11B-12-3 and 11B-12-4	C	Sept. 1995	
11B-12-5	D	Aug. 1996	Revised