



# **Google Cloud**

## **Setup and administration**

NetApp  
September 13, 2023

This PDF was generated from <https://docs.netapp.com/us-en/bluexp-setup-admin/concept-install-options-google.html> on September 13, 2023. Always check docs.netapp.com for the latest.

# Table of Contents

- Google Cloud ..... 1
  - Connector installation options in Google Cloud ..... 1
  - Create a Connector in Google Cloud from BlueXP or gcloud ..... 1
  - Manually install the Connector in Google Cloud ..... 12

# Google Cloud

## Connector installation options in Google Cloud

There are a few different ways to create a Connector in Google Cloud. Directly from BlueXP is the most common way.

The following installation options are available:

- [Create the Connector directly from BlueXP](#) (this is the standard option)

This action launches a VM instance running Linux and the Connector software in a VPC of your choice.

- [Create the Connector using gcloud](#)

This action also launches a VM instance running Linux and the Connector software, but the deployment is initiated directly from Google Cloud, rather than from BlueXP.

- [Download and manually install the software on your own Linux host](#)

The installation option that you choose impacts how you prepare for installation. This includes how you provide BlueXP with the required permissions that it needs to authenticate and manage resources in Google Cloud.

## Create a Connector in Google Cloud from BlueXP or gcloud

To create a Connector in Google Cloud from BlueXP or by using gcloud, you need to set up your networking, prepare Google Cloud permissions, enable Google Cloud APIs, and then create the Connector.

### Before you begin

You should review [Connector limitations](#).

### Step 1: Set up networking

Set up your networking so the Connector can manage resources and processes within your hybrid cloud environment. For example, you need to ensure that connections are available to target networks and that outbound internet access is available.

#### VPC and subnet

When you create the Connector, you need to specify the VPC and subnet where the Connector should reside.

#### Connections to target networks

A Connector requires a network connection to the location where you're planning to create and manage working environments. For example, the network where you plan to create Cloud Volumes ONTAP systems or a storage system in your on-premises environment.

#### Outbound internet access

The network location where you deploy the Connector must have an outbound internet connection to contact specific endpoints.

## Endpoints contacted from the Connector

The Connector requires outbound internet access to contact the following endpoints in order to manage resources and processes within your public cloud environment for day-to-day operations.

Endpoints	Purpose
<a href="https://www.googleapis.com/compute/v1/">https://www.googleapis.com/compute/v1/</a> <a href="https://compute.googleapis.com/compute/v1/">https://compute.googleapis.com/compute/v1</a> <a href="https://cloudresourcemanager.googleapis.com/v1/projects">https://cloudresourcemanager.googleapis.com/v1/projects</a> <a href="https://www.googleapis.com/compute/beta">https://www.googleapis.com/compute/beta</a> <a href="https://storage.googleapis.com/storage/v1">https://storage.googleapis.com/storage/v1</a> <a href="https://www.googleapis.com/storage/v1">https://www.googleapis.com/storage/v1</a> <a href="https://iam.googleapis.com/v1">https://iam.googleapis.com/v1</a> <a href="https://cloudkms.googleapis.com/v1">https://cloudkms.googleapis.com/v1</a> <a href="https://www.googleapis.com/deploymentmanager/v2/projects">https://www.googleapis.com/deploymentmanager/v2/projects</a>	To manage resources in Google Cloud.
<a href="https://support.netapp.com">https://support.netapp.com</a>	To obtain licensing information and to send AutoSupport messages to NetApp support.
<a href="https://*.api.bluexp.netapp.com">https://*.api.bluexp.netapp.com</a> <a href="https://api.bluexp.netapp.com">https://api.bluexp.netapp.com</a> <a href="https://*.cloudmanager.cloud.netapp.com">https://*.cloudmanager.cloud.netapp.com</a> <a href="https://cloudmanager.cloud.netapp.com">https://cloudmanager.cloud.netapp.com</a> <a href="https://netapp-cloud-account.auth0.com">https://netapp-cloud-account.auth0.com</a>	To provide SaaS features and services within BlueXP.  Note that the Connector is currently contacting "cloudmanager.cloud.netapp.com" but it will start contacting "api.bluexp.netapp.com" in an upcoming release.
<a href="https://*.blob.core.windows.net">https://*.blob.core.windows.net</a> <a href="https://cloudmanagerinfraprod.azurecr.io">https://cloudmanagerinfraprod.azurecr.io</a>	To upgrade the Connector and its Docker components.

## Endpoints contacted from the BlueXP console

As you use the BlueXP web-based console that's provided through the SaaS layer, it contacts several endpoints to complete data management tasks. This includes endpoints that are contacted to deploy the Connector from the BlueXP console.

[View the list of endpoints contacted from the BlueXP console.](#)

## Proxy server

If your organization requires deployment of a proxy server for all outgoing internet traffic, obtain the following information about your HTTP or HTTPS proxy. You'll need to provide this information during installation.

- IP address
- Credentials
- HTTPS certificate

## Ports

There's no incoming traffic to the Connector, unless you initiate it or if the Connector is used as a proxy to send AutoSupport messages from Cloud Volumes ONTAP to NetApp Support.

- HTTP (80) and HTTPS (443) provide access to the local UI, which you'll use in rare circumstances.
- SSH (22) is only needed if you need to connect to the host for troubleshooting.
- Inbound connections over port 3128 are required if you deploy Cloud Volumes ONTAP systems in a subnet where an outbound internet connection isn't available.

If Cloud Volumes ONTAP systems don't have an outbound internet connection to send AutoSupport messages, BlueXP automatically configures those systems to use a proxy server that's included with the Connector. The only requirement is to ensure that the Connector's security group allows inbound connections over port 3128. You'll need to open this port after you deploy the Connector.

## Step 2: Set up permissions to create the Connector

Before you can deploy a Connector from BlueXP or by using gcloud, you need to set up permissions for the Google Cloud user who will deploy the Connector VM.

### Steps

1. Create a custom role in Google Cloud:
  - a. Create a YAML file that includes the following permissions:

```
title: Connector deployment policy
description: Permissions for the user who deploys the Connector from
BlueXP
stage: GA
includedPermissions:
- compute.disks.create
- compute.disks.get
- compute.disks.list
- compute.disks.setLabels
- compute.disks.use
- compute.firewalls.create
- compute.firewalls.delete
- compute.firewalls.get
- compute.firewalls.list
- compute.globalOperations.get
- compute.images.get
- compute.images.getFromFamily
- compute.images.list
- compute.images.useReadOnly
- compute.instances.attachDisk
- compute.instances.create
- compute.instances.get
- compute.instances.list
- compute.instances.setDeletionProtection
```

- compute.instances.setLabels
- compute.instances.setMachineType
- compute.instances.setMetadata
- compute.instances.setTags
- compute.instances.start
- compute.instances.updateDisplayDevice
- compute.machineTypes.get
- compute.networks.get
- compute.networks.list
- compute.networks.updatePolicy
- compute.projects.get
- compute.regions.get
- compute.regions.list
- compute.subnetworks.get
- compute.subnetworks.list
- compute.zoneOperations.get
- compute.zones.get
- compute.zones.list
- deploymentmanager.compositeTypes.get
- deploymentmanager.compositeTypes.list
- deploymentmanager.deployments.create
- deploymentmanager.deployments.delete
- deploymentmanager.deployments.get
- deploymentmanager.deployments.list
- deploymentmanager.manifests.get
- deploymentmanager.manifests.list
- deploymentmanager.operations.get
- deploymentmanager.operations.list
- deploymentmanager.resources.get
- deploymentmanager.resources.list
- deploymentmanager.typeProviders.get
- deploymentmanager.typeProviders.list
- deploymentmanager.types.get
- deploymentmanager.types.list
- resourcemanager.projects.get
- compute.instances.setServiceAccount
- iam.serviceAccounts.list

- b. From Google Cloud, activate cloud shell.
- c. Upload the YAML file that includes the required permissions.
- d. Create a custom role by using the `gcloud iam roles create` command.

The following example creates a role named "connectorDeployment" at the project level:

```
gcloud iam roles create connectorDeployment --project=myproject --file=connector-deployment.yaml
```

[Google Cloud docs: Creating and managing custom roles](#)

2. Assign this custom role to the user who will deploy the Connector from BlueXP or by using gcloud.

[Google Cloud docs: Grant a single role](#)

## Result

The Google Cloud user now has the permissions required to create the Connector.

## Step 3: Set up permissions for the Connector

A Google Cloud service account is required to provide the Connector with the permissions that BlueXP needs to manage resources in Google Cloud. When you create the Connector, you'll need to associate this service account with the Connector VM.

## Steps

1. Create a custom role in Google Cloud:
  - a. Create a YAML file that includes the contents of the [service account permissions for the Connector](#).
  - b. From Google Cloud, activate cloud shell.
  - c. Upload the YAML file that includes the required permissions.
  - d. Create a custom role by using the `gcloud iam roles create` command.

The following example creates a role named "connector" at the project level:

```
gcloud iam roles create connector --project=myproject --file=connector.yaml
```

[Google Cloud docs: Creating and managing custom roles](#)

2. Create a service account in Google Cloud and assign the role to the service account:
  - a. From the IAM & Admin service, select **Service Accounts > Create Service Account**.
  - b. Enter service account details and select **Create and Continue**.
  - c. Select the role that you just created.
  - d. Finish the remaining steps to create the role.

[Google Cloud docs: Creating a service account](#)

3. If you plan to deploy Cloud Volumes ONTAP systems in different projects than the project where the Connector resides, then you'll need to provide the Connector's service account with access to those projects.

For example, let's say the Connector is in project 1 and you want to create Cloud Volumes ONTAP systems in project 2. You'll need to grant access to the service account in project 2.

- a. From the IAM & Admin service, select the Google Cloud project where you want to create Cloud Volumes ONTAP systems.
- b. On the **IAM** page, select **Grant Access** and provide the required details.
  - Enter the email of the Connector's service account.
  - Select the Connector's custom role.

- Select **Save**.

For more details, refer to [Google Cloud documentation](#)

## Result

The service account for the Connector VM is set up.

## Step 4: Set up shared VPC permissions

If you are using a shared VPC to deploy resources into a service project, then you'll need to prepare your permissions.

This table is for reference and your environment should reflect the permissions table when IAM configuration is complete.



## View shared VPC permissions

Identity	Creator	Hosted in	Service project permissions	Host project permissions	Purpose
Google account to deploy the Connector	Custom	Service Project	<a href="#">Connector deployment policy</a>	compute.network User	Deploying the Connector in the service project
Connector service account	Custom	Service project	<a href="#">Connector service account policy</a>	compute.network User deploymentmanager.editor	Deploying and maintaining Cloud Volumes ONTAP and services in the service project
Cloud Volumes ONTAP service account	Custom	Service project	storage.admin  member: BlueXP service account as serviceAccount.user	N/A	(Optional) For data tiering and BlueXP backup and recovery
Google APIs service agent	Google Cloud	Service project	(Default) Editor	compute.network User	Interacts with Google Cloud APIs on behalf of deployment. Allows BlueXP to use the shared network.
Google Compute Engine default service account	Google Cloud	Service project	(Default) Editor	compute.network User	Deploys Google Cloud instances and compute infrastructure on behalf of deployment. Allows BlueXP to use the shared network.

### Notes:

1. deploymentmanager.editor is only required at the host project if you are not passing firewall rules to the deployment and are choosing to let BlueXP create them for you. BlueXP will create a deployment in the host project which contains the VPC0 firewall rule if no rule is specified.
2. firewall.create and firewall.delete are only required if you are not passing firewall rules to the deployment and are choosing to let BlueXP create them for you. These permissions reside in the BlueXP account .yaml file. If you are deploying an HA pair using a shared VPC, these permissions will be used to create the firewall rules for VPC1, 2 and 3. For all other deployments, these permissions will also be used to create rules for VPC0.
3. For data tiering, the tiering service account must have the serviceAccount.user role on the service account, not just at the project level. Currently if you assign serviceAccount.user at the project level, the permissions don't show when you query the service account with getIAMPolicy.

## Step 5: Enable Google Cloud APIs

Several Google Cloud APIs must be enabled before you can deploy the Connector and Cloud Volumes ONTAP in Google Cloud.

### Step

1. Enable the following Google Cloud APIs in your project:

- Cloud Deployment Manager V2 API
- Cloud Logging API
- Cloud Resource Manager API
- Compute Engine API
- Identity and Access Management (IAM) API
- Cloud Key Management Service (KMS) API

(Required only if you are planning to use BlueXP backup and recovery with customer-managed encryption keys (CMEK))

[Google Cloud documentation: Enabling APIs](#)

## Step 6: Create the Connector

Create a Connector directly from the BlueXP web-based console or by using gcloud.

### About this task

Creating the Connector deploys a virtual machine instance in Google Cloud using a default configuration.

[Learn about the default configuration for the Connector.](#)

## BlueXP


### Before you begin

You should have the following:

- The required Google Cloud permissions to create the Connector and a service account for the Connector VM.
- A VPC and subnet that meets networking requirements.
- Details about a proxy server, if a proxy is required for internet access from the Connector.

### Steps

1. Select the **Connector** drop-down and select **Add Connector**.

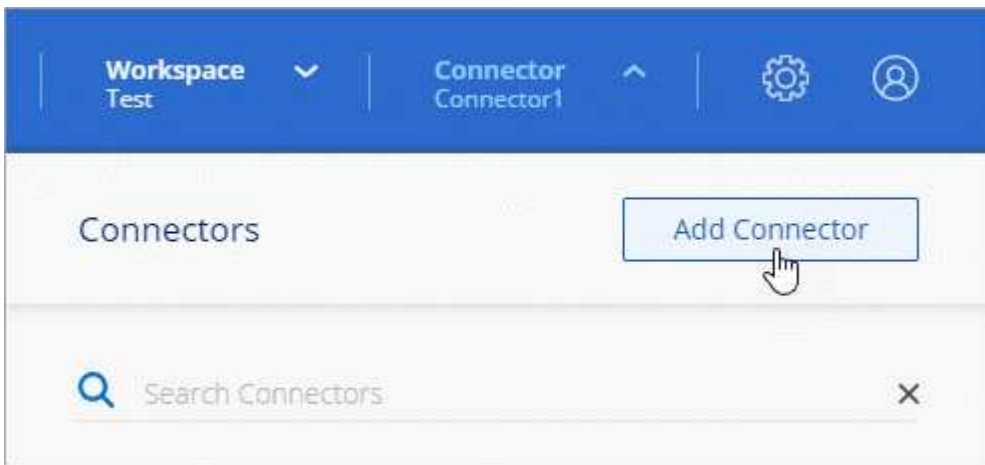

2. Choose **Google Cloud Platform** as your cloud provider.
3. On the **Deploying a Connector** page, review the details about what you'll need. You have two options:
  - a. Select **Continue** to prepare for deployment by using the in-product guide. Each step in the in-product guide includes the information that's contained on this page of the documentation.
  - b. Select **Skip to Deployment** if you already prepared by following the steps on this page.
4. Follow the steps in the wizard to create the Connector:
  - If you're prompted, log in to your Google account, which should have the required permissions to create the virtual machine instance.

The form is owned and hosted by Google. Your credentials are not provided to NetApp.

- **Details:** Enter a name for the virtual machine instance, specify tags, select a project, and then select the service account that has the required permissions (refer to the section above for details).
- **Location:** Specify a region, zone, VPC, and subnet for the instance.
- **Network:** Choose whether to enable a public IP address and optionally specify a proxy configuration.
- **Firewall Policy:** Choose whether to create a new firewall policy or whether to select an existing firewall policy that allows the required inbound and outbound rules.

[Firewall rules in Google Cloud](#)

- **Review:** Review your selections to verify that your set up is correct.

## 5. Select **Add**.

The instance should be ready in about 7 minutes. You should stay on the page until the process is complete.

### Result

After the process is complete, the Connector is available for use from BlueXP.

### gcloud

#### Before you begin

You should have the following:

- The required Google Cloud permissions to create the Connector and a service account for the Connector VM.
- A VPC and subnet that meets networking requirements.
- An understanding of VM instance requirements.
  - **CPU:** 4 cores or 4 vCPUs
  - **RAM:** 14 GB
  - **Machine type:** We recommend n2-standard-4.

The Connector is supported in Google Cloud on a VM instance with an OS that supports Shielded VM features.

### Steps

1. Log in to the gcloud SDK using your preferred methodology.

In our examples, we'll use a local shell with the gcloud SDK installed, but you could use the native Google Cloud Shell in the Google Cloud console.

For more information about the Google Cloud SDK, visit the [Google Cloud SDK documentation page](#).

2. Verify that you are logged in as a user who has the required permissions that are defined in the section above:

```
gcloud auth list
```

The output should show the following where the \* user account is the desired user account to be logged in as:

#### Credentialed Accounts

ACTIVE ACCOUNT

some\_user\_account@domain.com

\* desired\_user\_account@domain.com

To set the active account, run:

```
$ gcloud config set account `ACCOUNT`
```

Updates are available for some Cloud SDK components. To install them,

please run:

```
$ gcloud components update
```

### 3. Run the `gcloud compute instances create` command:

```
gcloud compute instances create <instance-name>
  --machine-type=n2-standard-4
  --image-project=netapp-cloudmanager
  --image-family=cloudmanager
  --scopes=cloud-platform
  --project=<project>
  --service-account=<service-account>
  --zone=<zone>
  --no-address
  --tags <network-tag>
  --network <network-path>
  --subnet <subnet-path>
  --boot-disk-kms-key <kms-key-path>
```

#### **instance-name**

The desired instance name for the VM instance.

#### **project**

(Optional) The project where you want to deploy the VM.

#### **service-account**

The service account specified in the output from step 2.

#### **zone**

The zone where you want to deploy the VM

#### **no-address**

(Optional) No external IP address is used (you need a cloud NAT or proxy to route traffic to the public internet)

#### **network-tag**

(Optional) Add network tagging to link a firewall rule using tags to the Connector instance

**network-path**

(Optional) Add the name of the network to deploy the Connector into (for a Shared VPC, you need the full path)

**subnet-path**

(Optional) Add the name of the subnet to deploy the Connector into (for a Shared VPC, you need the full path)

**kms-key-path**

(Optional) Add a KMS key to encrypt the Connector's disks (IAM permissions also need to be applied)

For more information about these flags, visit the [Google Cloud compute SDK documentation](#).

Running the command deploys the Connector using the NetApp golden image. The Connector instance and software should be running in approximately five minutes.

4. Open a web browser from a host that has a connection to the Connector instance and enter the following URL:

`https://ipaddress`

5. After you log in, set up the Connector:
  - a. Specify the BlueXP account to associate with the Connector.

[Learn about BlueXP accounts](#).

- b. Enter a name for the system.

**Result**

The Connector is now installed and set up with your BlueXP account.

Open a web browser and go to the [BlueXP console](#) to start using the Connector with BlueXP.

## Manually install the Connector in Google Cloud

To manually install the Connector on your own Linux host, you need to review host requirements, set up your networking, prepare Google Cloud permissions, enable Google Cloud APIs, install the Connector, and then provide the permissions that you prepared.

**Before you begin**

You should review [Connector limitations](#).

### Step 1: Review host requirements

The Connector software must run on a host that meets specific operating system requirements, RAM requirements, port requirements, and so on.

**Dedicated host**

The Connector is not supported on a host that is shared with other applications. The host must be a dedicated host.

## Supported operating systems

- Ubuntu 22.04
- CentOS 7.6, 7.7, 7.8, and 7.9
- Red Hat Enterprise Linux 7.6, 7.7, 7.8, and 7.9

The host must be registered with Red Hat Subscription Management. If it's not registered, the host can't access repositories to update required 3rd-party software during Connector installation.

The Connector is supported on English-language versions of these operating systems.

## Hypervisor

A bare metal or hosted hypervisor that is certified to run Ubuntu, CentOS, or Red Hat Enterprise Linux is required.

[Red Hat Solution: Which hypervisors are certified to run Red Hat Enterprise Linux?](#)

## CPU

4 cores or 4 vCPUs

## RAM

14 GB

## Google Cloud machine type

An instance type that meets the CPU and RAM requirements above. We recommend n2-standard-4.

The Connector is supported in Google Cloud on a VM instance with an OS that supports [Shielded VM features](#)

## Disk space in /opt

100 GiB of space must be available

## Disk space in /var

20 GiB of space must be available

## Docker Engine

Docker Engine version 19.3.1 or later is required on the host before you install the Connector. [View installation instructions](#)

## Step 2: Set up networking

Set up your networking so the Connector can manage resources and processes within your hybrid cloud environment. For example, you need to ensure that connections are available to target networks and that outbound internet access is available.

### Connections to target networks

A Connector requires a network connection to the location where you're planning to create and manage working environments. For example, the network where you plan to create Cloud Volumes ONTAP systems or a storage system in your on-premises environment.

### Outbound internet access

The network location where you deploy the Connector must have an outbound internet connection to

contact specific endpoints.

## Endpoints contacted during manual installation

When you manually install the Connector on your own Linux host, the installer for the Connector requires access to the following URLs during the installation process:

- <https://support.netapp.com>
- <https://mysupport.netapp.com>
- <https://cloudmanager.cloud.netapp.com/tenancy>
- <https://stream.cloudmanager.cloud.netapp.com>
- <https://production-artifacts.cloudmanager.cloud.netapp.com>
- [https://\\*.blob.core.windows.net](https://*.blob.core.windows.net)
- <https://cloudmanagerinfraprod.azurecr.io>

The host might try to update operating system packages during installation. The host can contact different mirroring sites for these OS packages.

## Endpoints contacted from the Connector

The Connector requires outbound internet access to contact the following endpoints in order to manage resources and processes within your public cloud environment for day-to-day operations.

Endpoints	Purpose
<a href="https://www.googleapis.com/compute/v1/">https://www.googleapis.com/compute/v1/</a> <a href="https://compute.googleapis.com/compute/v1">https://compute.googleapis.com/compute/v1</a> <a href="https://cloudresourcemanager.googleapis.com/v1/projects">https://cloudresourcemanager.googleapis.com/v1/projects</a> <a href="https://www.googleapis.com/compute/beta">https://www.googleapis.com/compute/beta</a> <a href="https://storage.googleapis.com/storage/v1">https://storage.googleapis.com/storage/v1</a> <a href="https://www.googleapis.com/storage/v1">https://www.googleapis.com/storage/v1</a> <a href="https://iam.googleapis.com/v1">https://iam.googleapis.com/v1</a> <a href="https://cloudkms.googleapis.com/v1">https://cloudkms.googleapis.com/v1</a> <a href="https://www.googleapis.com/deploymentmanager/v2/projects">https://www.googleapis.com/deploymentmanager/v2/projects</a>	To manage resources in Google Cloud.
<a href="https://support.netapp.com">https://support.netapp.com</a>	To obtain licensing information and to send AutoSupport messages to NetApp support.
<a href="https://*.api.bluexp.netapp.com">https://*.api.bluexp.netapp.com</a> <a href="https://api.bluexp.netapp.com">https://api.bluexp.netapp.com</a> <a href="https://*.cloudmanager.cloud.netapp.com">https://*.cloudmanager.cloud.netapp.com</a> <a href="https://cloudmanager.cloud.netapp.com">https://cloudmanager.cloud.netapp.com</a> <a href="https://netapp-cloud-account.auth0.com">https://netapp-cloud-account.auth0.com</a>	To provide SaaS features and services within BlueXP.  Note that the Connector is currently contacting "cloudmanager.cloud.netapp.com" but it will start contacting "api.bluexp.netapp.com" in an upcoming release.



Endpoints	Purpose
https://*.blob.core.windows.net	To upgrade the Connector and its Docker components.
https://cloudmanagerinfraprod.azurecr.io	

### Proxy server

If your organization requires deployment of a proxy server for all outgoing internet traffic, obtain the following information about your HTTP or HTTPS proxy. You'll need to provide this information during installation.

- IP address
- Credentials
- HTTPS certificate

### Ports

There's no incoming traffic to the Connector, unless you initiate it or if the Connector is used as a proxy to send AutoSupport messages from Cloud Volumes ONTAP to NetApp Support.

- HTTP (80) and HTTPS (443) provide access to the local UI, which you'll use in rare circumstances.
- SSH (22) is only needed if you need to connect to the host for troubleshooting.
- Inbound connections over port 3128 are required if you deploy Cloud Volumes ONTAP systems in a subnet where an outbound internet connection isn't available.

If Cloud Volumes ONTAP systems don't have an outbound internet connection to send AutoSupport messages, BlueXP automatically configures those systems to use a proxy server that's included with the Connector. The only requirement is to ensure that the Connector's security group allows inbound connections over port 3128. You'll need to open this port after you deploy the Connector.

## Step 3: Set up permissions for the Connector

A Google Cloud service account is required to provide the Connector with the permissions that BlueXP needs to manage resources in Google Cloud. When you create the Connector, you'll need to associate this service account with the Connector VM.

### Steps

1. Create a custom role in Google Cloud:
  - a. Create a YAML file that includes the contents of the [service account permissions for the Connector](#).
  - b. From Google Cloud, activate cloud shell.
  - c. Upload the YAML file that includes the required permissions.
  - d. Create a custom role by using the `gcloud iam roles create` command.

The following example creates a role named "connector" at the project level:

```
gcloud iam roles create connector --project=myproject --file=connector.yaml
```

[Google Cloud docs: Creating and managing custom roles](#)

2. Create a service account in Google Cloud and assign the role to the service account:
  - a. From the IAM & Admin service, select **Service Accounts > Create Service Account**.
  - b. Enter service account details and select **Create and Continue**.
  - c. Select the role that you just created.
  - d. Finish the remaining steps to create the role.

[Google Cloud docs: Creating a service account](#)

3. If you plan to deploy Cloud Volumes ONTAP systems in different projects than the project where the Connector resides, then you'll need to provide the Connector's service account with access to those projects.

For example, let's say the Connector is in project 1 and you want to create Cloud Volumes ONTAP systems in project 2. You'll need to grant access to the service account in project 2.

- a. From the IAM & Admin service, select the Google Cloud project where you want to create Cloud Volumes ONTAP systems.
- b. On the **IAM** page, select **Grant Access** and provide the required details.
  - Enter the email of the Connector's service account.
  - Select the Connector's custom role.
  - Select **Save**.

For more details, refer to [Google Cloud documentation](#)

## Result

The service account for the Connector VM is set up.

## Step 4: Set up shared VPC permissions

If you are using a shared VPC to deploy resources into a service project, then you'll need to prepare your permissions.

This table is for reference and your environment should reflect the permissions table when IAM configuration is complete.

## View shared VPC permissions

Identity	Creator	Hosted in	Service project permissions	Host project permissions	Purpose
Google account to deploy the Connector	Custom	Service Project	<a href="#">Connector deployment policy</a>	compute.network User	Deploying the Connector in the service project
Connector or service account	Custom	Service project	<a href="#">Connector service account policy</a>	compute.network User deploymentmanager.editor	Deploying and maintaining Cloud Volumes ONTAP and services in the service project
Cloud Volumes ONTAP service account	Custom	Service project	storage.admin  member: BlueXP service account as serviceAccount.user	N/A	(Optional) For data tiering and BlueXP backup and recovery
Google APIs service agent	Google Cloud	Service project	(Default) Editor	compute.network User	Interacts with Google Cloud APIs on behalf of deployment. Allows BlueXP to use the shared network.
Google Compute Engine default service account	Google Cloud	Service project	(Default) Editor	compute.network User	Deploys Google Cloud instances and compute infrastructure on behalf of deployment. Allows BlueXP to use the shared network.

### Notes:

1. deploymentmanager.editor is only required at the host project if you are not passing firewall rules to the deployment and are choosing to let BlueXP create them for you. BlueXP will create a deployment in the host project which contains the VPC0 firewall rule if no rule is specified.
2. firewall.create and firewall.delete are only required if you are not passing firewall rules to the deployment and are choosing to let BlueXP create them for you. These permissions reside in the BlueXP account .yaml file. If you are deploying an HA pair using a shared VPC, these permissions will be used to create the firewall rules for VPC1, 2 and 3. For all other deployments, these permissions will also be used to create rules for VPC0.
3. For data tiering, the tiering service account must have the serviceAccount.user role on the service account, not just at the project level. Currently if you assign serviceAccount.user at the project level, the permissions don't show when you query the service account with getIAMPolicy.

## Step 5: Enable Google Cloud APIs

Several Google Cloud APIs must be enabled before you can deploy Cloud Volumes ONTAP systems in Google Cloud.

### Step

1. Enable the following Google Cloud APIs in your project:

- Cloud Deployment Manager V2 API
- Cloud Logging API
- Cloud Resource Manager API
- Compute Engine API
- Identity and Access Management (IAM) API
- Cloud Key Management Service (KMS) API

(Required only if you are planning to use BlueXP backup and recovery with customer-managed encryption keys (CMEK))

[Google Cloud documentation: Enabling APIs](#)

## Step 6: Install the Connector

After the pre-requisites are complete, you can manually install the software on your own Linux host.

### Before you begin

You should have the following:

- Root privileges to install the Connector.
- Details about a proxy server, if a proxy is required for internet access from the Connector.

You have the option to configure a proxy server after installation but doing so requires restarting the Connector.

- A CA-signed certificate, if the proxy server uses HTTPS or if the proxy is an intercepting proxy.

### About this task

The installer that is available on the NetApp Support Site might be an earlier version. After installation, the Connector automatically updates itself if a new version is available.

### Steps

1. Verify that docker is enabled and running.

```
sudo systemctl enable docker && sudo systemctl start docker
```

2. If the `http_proxy` or `https_proxy` system variables are set on the host, remove them:

```
unset http_proxy
unset https_proxy
```

If you don't remove these system variables, the installation will fail.

3. Download the Connector software from the [NetApp Support Site](#), and then copy it to the Linux host.

You should download the "online" Connector installer that's meant for use in your network or in the cloud. A separate "offline" installer is available for the Connector, but it's only supported with private mode deployments.

4. Assign permissions to run the script.

```
chmod +x OnCommandCloudManager-<version>
```

Where <version> is the version of the Connector that you downloaded.

5. Run the installation script.

```
./OnCommandCloudManager-<version> --proxy <HTTP or HTTPS proxy server>
--cacert <path and file name of a CA-signed certificate>
```

The --proxy and --cacert parameters are optional. If you have a proxy server, you will need to enter the parameter(s) as shown. The installer doesn't prompt you to provide information about a proxy.

Here's an example of the command using both optional parameters:

```
./OnCommandCloudManager-V3.9.26 --proxy
https://user:password@10.0.0.30:8080/ --cacert
/tmp/cacert/certificate.cer
```

--proxy configures the Connector to use an HTTP or HTTPS proxy server using one of the following formats:

- http://address:port
- http://username:password@address:port
- https://address:port
- https://username:password@address:port

The user must be a local user. Domain users are not supported.

--cacert specifies a CA-signed certificate to use for HTTPS access between the Connector and the proxy server. This parameter is required only if you specify an HTTPS proxy server or if the proxy is an intercepting proxy.

6. Wait for the installation to complete.

At the end of the installation, the Connector service (occm) restarts twice if you specified a proxy server.

7. Open a web browser from a host that has a connection to the Connector virtual machine and enter the following URL:

`https://ipaddress`

8. After you log in, set up the Connector:
  - a. Specify the BlueXP account to associate with the Connector.
  - b. Enter a name for the system.
  - c. Under **Are you running in a secured environment?** keep restricted mode disabled.

You should keep restricted mode disabled because these steps describe how to use BlueXP in standard mode. You should enable restricted mode only if you have a secure environment and want to disconnect this account from BlueXP backend services. If that's the case, [follow steps to get started with BlueXP in restricted mode](#).

- d. Select **Let's start**.

### Result

The Connector is now installed and is set up with your BlueXP account.

## Step 7: Provide permissions to BlueXP

You need to provide BlueXP with the Google Cloud permissions that you previously set up. Providing the permissions enables BlueXP to manage your data and storage infrastructure in Google Cloud.

### Steps

1. Go to the Google Cloud portal and assign the service account to the Connector VM instance.

[Google Cloud documentation: Changing the service account and access scopes for an instance](#)

2. If you want to manage resources in other Google Cloud projects, grant access by adding the service account with the BlueXP role to that project. You'll need to repeat this step for each project.

### Result

BlueXP now has the permissions that it needs to perform actions in Google Cloud on your behalf.

## Copyright information

Copyright © 2023 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.