


ISZE
Details of RG01 part
Over Fender, Side Bar and Side Step

15th September, 2020

ICL (Thailand) Company Ltd.


Over Fender

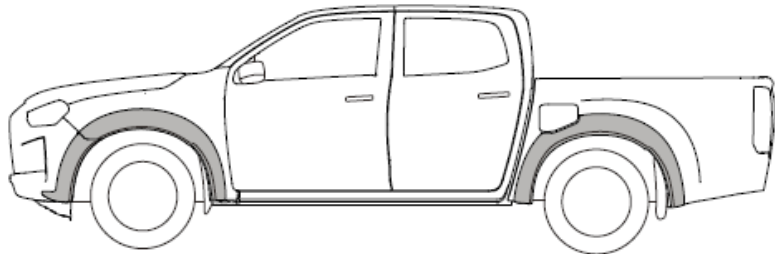

NO.	PART NAME	Q'TY		DRAWING	NO.	PART NAME	Q'TY		DRAWING
①	OVER FENDER FR (LH)	A	1		②	OVER FENDER FR (RH)	A	1	
		B	1				B	1	
③	OVER FENDER RR (LH)		1		④	OVER FENDER RR (RH)		1	
⑤	CLIP A, Ø 8 mm.		6		⑥	CLIP B, Ø 10 mm.		2	
⑦	SCREW M6x20		2		⑧	SPECIAL NUT M6		2	
⑨	BLACK STICKER FR A (LH,RH)		2		⑩	BLACK STICKER FR B (LH,RH)		2	
⑪	BLACK STICKER RR C (LH,RH)		2		⑫	TEMPLATE		1	
⑬	INSTALLATION MANUAL		1						

Part Number	Part Description	Consist of Component NO.
5-8676-2884-1	OVER FENDER SET EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪,⑫,⑬ + TUV.
5-8676-2885-1	OVER FENDER ; FRONT LH EXP SPR	①,⑤X3pcs.,⑥X1pc.,⑨X1pc.,⑩X1pc.,⑫,⑬
5-8676-2886-1	OVER FENDER ; FRONT RH EXP SPR	②,⑤X3pcs.,⑥X1pc.,⑨X1pc.,⑩X1pc.,⑫,⑬
5-8676-2887-1	OVER FENDER RR LH EXP SPR	③,⑦X1pc.,⑧X1pc.,⑪X1pc.,⑫,⑬
5-8676-2888-1	OVER FENDER RR RH EXP SPR	④,⑦X1pc.,⑧X1pc.,⑪X1pc.,⑫,⑬


Side Bar

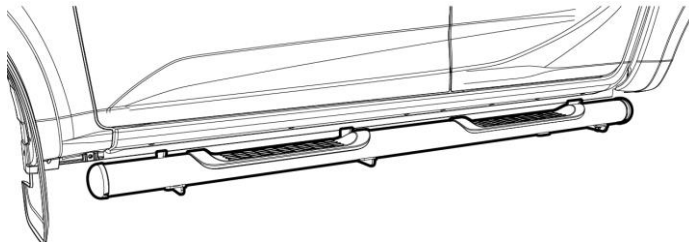

NO.	PART NAME	Q'TY		DRAWING
		RH	LH	
①	SIDE BAR	1	1	
②	BRACKET ①A	1	1	
③	BRACKET ①B	1	1	
④	BRACKET ①D	1	1	
⑤	BOLT M8x25	4	4	
⑥	NUT M8	2	2	
⑦	BOLT M10x25	3	3	
⑧	PLAIN WASHER M10	2	2	
⑨	SPRING WASHER M10	1	1	
⑩	SPECIAL WASHER M10	1	1	
⑪	INSTALLATION MANUAL	1		

Part Number	Part Description	Consist of Component NO.
5-8676-3096-0	SIDE BAR W/STEP SET STEEL EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪+TUV
5-8676-3097-0	SIDE BAR W/STEP LH STEEL EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪ (Qty. of each components, please find in column LH)
5-8676-3098-0	SIDE BAR W/STEP RH STEEL EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪ (Qty. of each components, please find in column RH)
5-8676-3099-0	SIDE BAR W/STEP SET STAINLESS EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪+TUV
5-8676-3100-0	SIDE BAR W/STEP LH STAINLESS EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪ (Qty. of each components, please find in column LH)
5-8676-3101-0	SIDE BAR W/STEP RH STAINLESS EXP	①,②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪ (Qty. of each components, please find in column RH)
5-8676-3460-0	SIDE BAR INSTALLATION KIT LH EXT/CRW EXP	②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪
5-8676-3461-0	SIDE BAR INSTALLATION KIT RH EXT/CRW EXP	②,③,④,⑤,⑥,⑦,⑧,⑨,⑩,⑪

Side Step

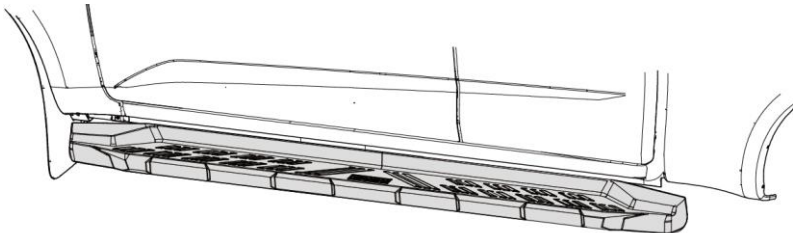

No.	Part Name	Figure	Q'ty	
			LH	RH
①	SIDE STEP : CREW		1	1
②	SIDE STEP : EXTEND/RJ		1	1
③	BRACKET-A (Front)		CREW	1
			EXTEND	1
			RJ	1
④	BRACKET-B (Middle-rear Type A)		CREW	2
			EXTEND	2
			RJ	1
⑤	BRACKET-C (Middle-rear Type B)		CREW	-
			EXTEND	-
			RJ	1
⑥	BOLT FLANGE M8X14		6	6
⑦	BOLT FLANGE M8X25		4	4
⑧	NUT M8		2	2
⑨	INSTALLATION MANUAL		1	

Part Number	Part Description	Consist of Component NO.
5-8676-3186-1	SIDE STEP SET CRW EXP	①,③,④,⑥,⑦,⑧,⑨+ TUV
5-8676-3187-0	SIDE STEP LH CRW EXP	①,③,④,⑥,⑦,⑧,⑨ (Qty. of each components, please find in column LH)
5-8676-3188-0	SIDE STEP RH CRW EXP	①,③,④,⑥,⑦,⑧,⑨ (Qty. of each components, please find in column RH)
5-8676-3189-1	SIDE STEP SET EXT EXP	②,③,④,⑥,⑦,⑧,⑨+ TUV
5-8676-3190-0	SIDE STEP LH EXT EXP	②,③,④,⑥,⑦,⑧,⑨ (Qty. of each components, please find in column LH)
5-8676-3191-0	SIDE STEP RH EXT EXP	②,③,④,⑥,⑦,⑧,⑨ (Qty. of each components, please find in column RH)
5-8676-3462-0	SIDE STEP INSTALLATION KIT EXT/CRW EXP	③,④,⑥,⑦,⑧,⑨ (Qty. of each components for 1 side only)

Thank you