

IMPORTANT SAFETY INSTRUCTIONS

ETW-18-20 BATTERY CHARGER

1. **SAVE THESE INSTRUCTIONS** — They contain important safety and operating instructions for Battery Charger model ETW-18-20.

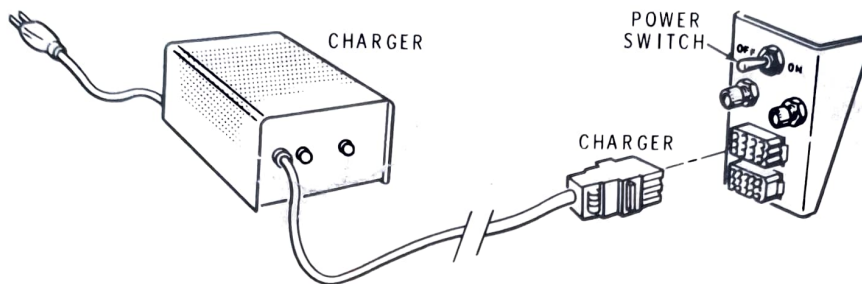


Figure 1

2. This Charger is to be used with HERO 1 only (Model ET-18 or ETW-18).
3. Before you use the Battery Charger, read all the instructions and cautionary markings on the Charger and on HERO 1.
4. Do not expose the Charger to rain or snow.
5. To reduce risk of damage to the electric cord and charging cord, pull on the plug rather than the cord when you disconnect the Charger.
6. Locate cords so they will not be stepped on, tripped over, or otherwise subjected to damage or stress.
7. Do not use an extension cord unless absolutely necessary. If you do use one, be sure the:
 - A. Pins on the extension cord plug are the same number, size, and shape as those of the Charger plug.
 - B. Extension cord is properly wired and in good electrical condition.
 - C. Wire size is at least 18 awg, and no longer than 25 feet.
8. Do not operate the Charger if it has a damaged cord or plugs. Replace them immediately.

9. Do not operate the Charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. Take it to a qualified serviceman.
10. Do not disassemble the Charger. Take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
11. To reduce risk of electric shock, unplug the Charger from the outlet before you attempt to clean it or perform any maintenance on it. Turning off the switch will not reduce this risk.
12. **CAUTION** – To reduce the risk of injury, charge only 4 AH or 3.8 AH rechargeable solid-gel batteries. Other types of batteries may burst and cause personal injury and damage.
13. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.