


To Stepper Motor

TO LIMIT SWITCHES

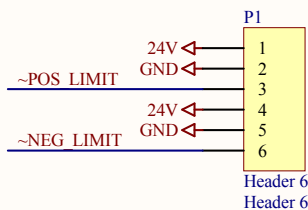


Limit position definitions:


Viewing Lambert from rear:

POS_LIMIT = far Right


NEG_LIMIT = far Left

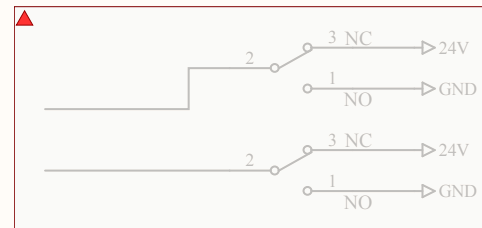

The NC position is where the switch will be when the lightbar is NOT at the limit. When at limit want signal to be GND. This way, a no power situation will tell SW that lightbar is at BOTH limits which is an error condition

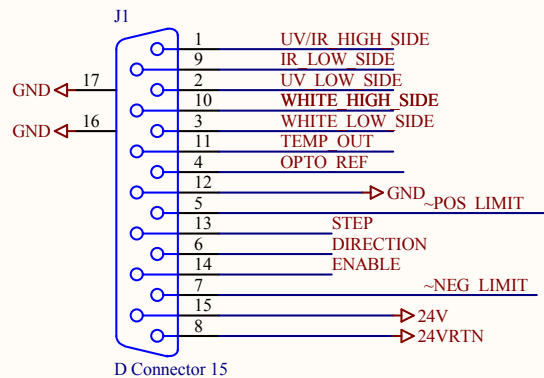

LED strings + temperature

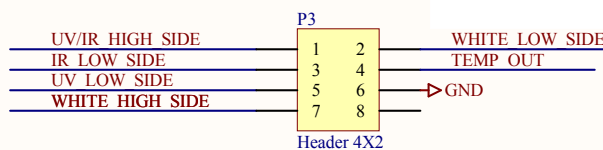

Title		
Interconnect PCB, Lambert 0.4m		
Size	Number	Revision
A		1
Date:	4/12/2010	Sheet of
File:	\\.\Lambert_interconnect_revA.SchDoc	Drawn By: