

✔ Xbox Live service is active. [See details >](#)

Share this page [Share](#)

[Tweet](#)

## Xbox Support

Xbox One

**Xbox 360**

Getting started

Accessories

Apps

**Console**

Error codes

Networking

Security

Store

Warranty and service

Windows Media Center

Xbox Live

Xbox on Windows 10

Games

Billing

My account

Legacy devices

# Set up your Xbox 360 E console

## Overview

Setting up your Xbox 360 E console is easy – just follow these step-by-step instructions.

## Solutions

This topic contains the following sections:

- [Unbox and position the console](#)
- [Plug in the power supply](#)
- [Connect the console to your TV](#)
- [Connect a controller](#)
- [Set your console settings](#)

## Unbox and position the console


### Step 1: Unbox the console



An Xbox 360 E game system typically includes:

1. Console
2. A/V cable (3.5mm composite)
3. Power supply
4. Power cord
5. Wireless controller
6. 2 AA batteries
7. User manual
8. Wired headset (varies by console package)

### Step 2: Remove the protective tape

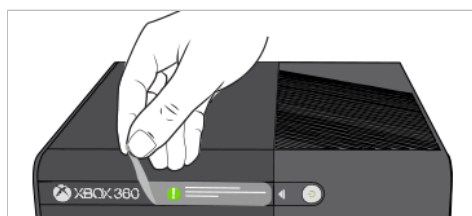

Was this article helpful? [Yes](#) [No](#)

**Step 3: Position the console***Good placement**Poor placement*

Make sure that the location for your console is as follows:

- Stable
- Well-ventilated, relatively cool, and away from direct heat sources
- Uncluttered. Do not put other objects on, under, or right next to the console

You can position the console vertically or horizontally.

**Plug in the power supply**


1. Plug in the power supply.
2. Plug the power cord into the power supply.
3. Plug the power cord into an electrical outlet.

**Connect the console to your TV**

The Xbox 360 E console system includes a Composite Audio/Visual cable. You can use this cable to connect the console to a standard television or monitor. Here's how:

**Notes**

- This Composite Audio/Visual cable does not support high definition (HD) display.
  - If you have a HDTV and want to check the instructions for using an HDMI cable, see [Connect your Xbox 360 console to a TV](#).
1. Connect the small 3.5mm connector to the 3.5mm jack on the back of the console.
  2. Locate the A/V ports on your TV or monitor. Connect the color-coded connectors on the composite A/V cable to the corresponding ports on the TV as follows:
    - **Yellow** = composite video
    - **Red** = right-channel analog audio
    - **White** = left-channel analog audio

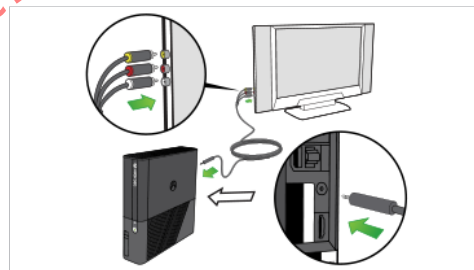

**Note** Monaural (mono) TVs have only one audio port. Connect either the red or white connector to the TV.


3. Turn on the TV and console.

When you turn on the TV and console, you should see the Xbox Dashboard on your display:

Was this article helpful?

Yes

No

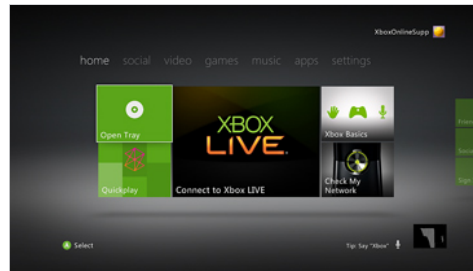

If you don't see the Xbox Dashboard, you might need to [change the video input setting](#). To change the video input setting, refer to your TV or Entertainment Center manual for instructions.

To [improve the video display](#), you can change the default settings.

## Connect a controller

### Connect a wireless controller

1. Turn on the console.
2. Insert the AA batteries into the controller.
3. Turn on your controller by pressing and holding the center Xbox Guide button, until the controller turns on.



If the controller does not turn on, check the batteries. If you're using a rechargeable controller, make sure that it is charged.

4. Press and release the connect button on the console.



5. Within 20 seconds, press and release the connect button on the controller.




### Notes

Was this article helpful? Yes No

For more information, see [Xbox 360 E console setup](#).


- Each connected controller is assigned to one of four positions. Each position corresponds to a lighted section around the controller's Xbox Guide button.

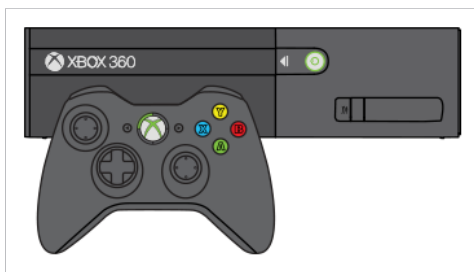

### Connect a wired controller

If you have a wired controller, see [Connect a game controller](#).

### Set your console settings

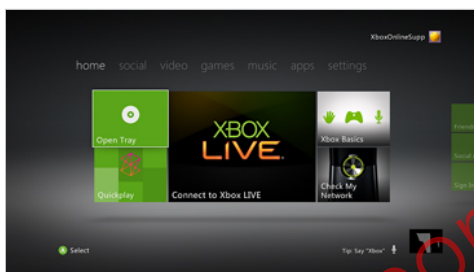

The first time that you start your console, you're prompted to:

- Select your language.
- Create a profile.
- Set up a network connection (optional). For information about how to connect to Xbox Live, see [Wired connection](#) or [Wireless connection](#).

Follow the on-screen instructions to complete these steps.



Now, insert a game disc and you're ready to start playing!

### Related Issues

[Set up your Original Xbox 360 or Xbox 360 S console](#)

[Change your Xbox 360 settings](#)

[Connect your Xbox 360 console to a sound system](#)

[Connect your Xbox 360 S or original Xbox 360 to a TV](#)

[Improve the video quality of an Xbox 360 console](#)

[Back to top](#)

### Support Resources

Was this article helpful?

Yes

No



Error & Status  
Code Search



Repair and service  
center



Manuals and  
warranty info



Post on the  
Community  
Support Forums



Contact Us

Share this page

Share

Tweet

Xbox

Feedback

Support

Photosensitive Seizure Warning

Code of Conduct

Fans

Xbox Wire

For Developers

Games

ID@Xbox

Windows 10

Jobs

Designed for Xbox



English (United States)

Contact us

Privacy & cookies

Terms of use

Trademarks

About our ads

© 2017 Microsoft

Was this article helpful?

Yes

No