

✔ Xbox Live service is active. [See details >](#)

Share this page [Share](#)

[Tweet](#)

Xbox Support

Xbox One

Xbox 360

Getting started

Accessories

Apps

Console

Error codes

Networking

Security

Store

Warranty and service

Windows Media Center

Xbox Live

Xbox on Windows 10

Games

Billing

My account

Legacy devices

Set up your Xbox 360 E console

Overview

Setting up your Xbox 360 E console is easy – just follow these step-by-step instructions.

Solutions

This topic contains the following sections:

- [Unbox and position the console](#)
- [Plug in the power supply](#)
- [Connect the console to your TV](#)
- [Connect a controller](#)
- [Set your console settings](#)

Unbox and position the console


Step 1: Unbox the console



An Xbox 360 E game system typically includes:

1. Console
2. A/V cable (3.5mm composite)
3. Power supply
4. Power cord
5. Wireless controller
6. 2 AA batteries
7. User manual
8. Wired headset (varies by console package)

Step 2: Remove the protective tape

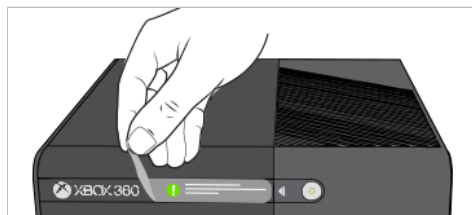

Was this article helpful? [Yes](#) [No](#)

©2023 Chris deMaagd. All rights reserved.

Step 3: Position the console*Good placement**Poor placement*

Make sure that the location for your console is as follows:

- Stable
- Well-ventilated, relatively cool, and away from direct heat sources
- Uncluttered. Do not put other objects on, under, or right next to the console

You can position the console vertically or horizontally.

Plug in the power supply


1. Plug in the power supply.
2. Plug the power cord into the power supply.
3. Plug the power cord into an electrical outlet.

Connect the console to your TV

The Xbox 360 E console system includes a Composite Audio/Visual cable. You can use this cable to connect the console to a standard television or monitor. Here's how:

Notes

- This Composite Audio/Visual cable does not support high definition (HD) display.
 - If you have a HDTV and want to check the instructions for using an HDMI cable, see [Connect your Xbox 360 console to a TV](#).
1. Connect the small 3.5mm connector to the 3.5mm jack on the back of the console.
 2. Locate the A/V ports on your TV or monitor. Connect the color-coded connectors on the composite A/V cable to the corresponding ports on the TV as follows:
 - **Yellow** = composite video
 - **Red** = right-channel analog audio
 - **White** = left-channel analog audio

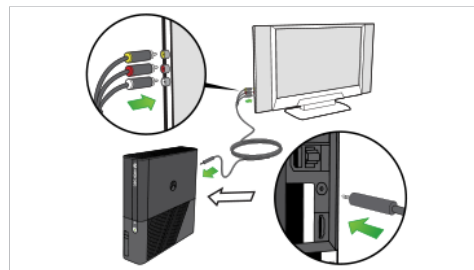


Note Monaural (mono) TVs have only one audio port. Connect either the red or white connector to the TV.

3. Turn on the TV and console.

When you turn on the TV and console, you should see the Xbox Dashboard on your display:

Was this article helpful? Yes No

©2023 Chris deMaagd. All rights reserved.

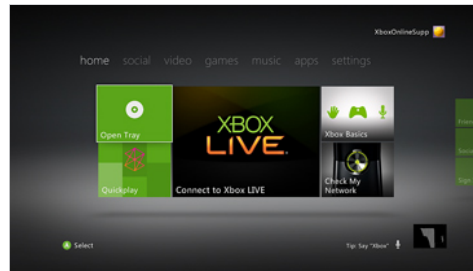

If you don't see the Xbox Dashboard, you might need to [change the video input setting](#). To change the video input setting, refer to your TV or Entertainment Center manual for instructions.

To [improve the video display](#), you can change the default settings.

Connect a controller

Connect a wireless controller

1. Turn on the console.
2. Insert the AA batteries into the controller.
3. Turn on your controller by pressing and holding the center Xbox Guide button, until the controller turns on.



If the controller does not turn on, check the batteries. If you're using a rechargeable controller, make sure that it is charged.

4. Press and release the connect button on the console.



5. Within 20 seconds, press and release the connect button on the controller.




Notes

Was this article helpful? Yes No

©2023 Chris deMaagd. All rights reserved.


- Each connected controller is assigned to one of four positions. Each position corresponds to a lighted section around the controller's Xbox Guide button.

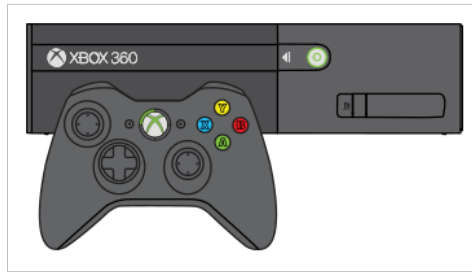

Connect a wired controller

If you have a wired controller, see [Connect a game controller](#).

Set your console settings

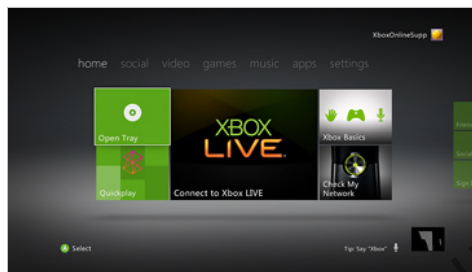

The first time that you start your console, you're prompted to:

- Select your language.
- Create a profile.
- Set up a network connection (optional). For information about how to connect to Xbox Live, see [Wired connection](#) or [Wireless connection](#).

Follow the on-screen instructions to complete these steps.



Now, insert a game disc and you're ready to start playing!

Related Issues

[Set up your Original Xbox 360 or Xbox 360 S console](#)

[Change your Xbox 360 settings](#)

[Connect your Xbox 360 console to a sound system](#)

[Connect your Xbox 360 S or original Xbox 360 to a TV](#)

[Improve the video quality of an Xbox 360 console](#)

[Back to top](#)

Support Resources

Was this article helpful?

Yes

No

©2023 Chris deMaagd. All rights reserved.



Error & Status
Code Search



Repair and service
center



Manuals and
warranty info



Post on the
Community
Support Forums



Contact Us

Share this page

Share

Tweet

Xbox
Feedback
Support
Photosensitive Seizure Warning
Code of Conduct

Fans
Xbox Wire

For Developers
Games
ID@Xbox
Windows 10
Jobs
Designed for Xbox

 English (United States)

[Contact us](#) [Privacy & cookies](#) [Terms of use](#) [Trademarks](#) [About our ads](#) © 2017 Microsoft

Was this article helpful? [Yes](#) [No](#)

©2023 Chris deMaagd. All rights reserved.