


Beti Rev 1.02

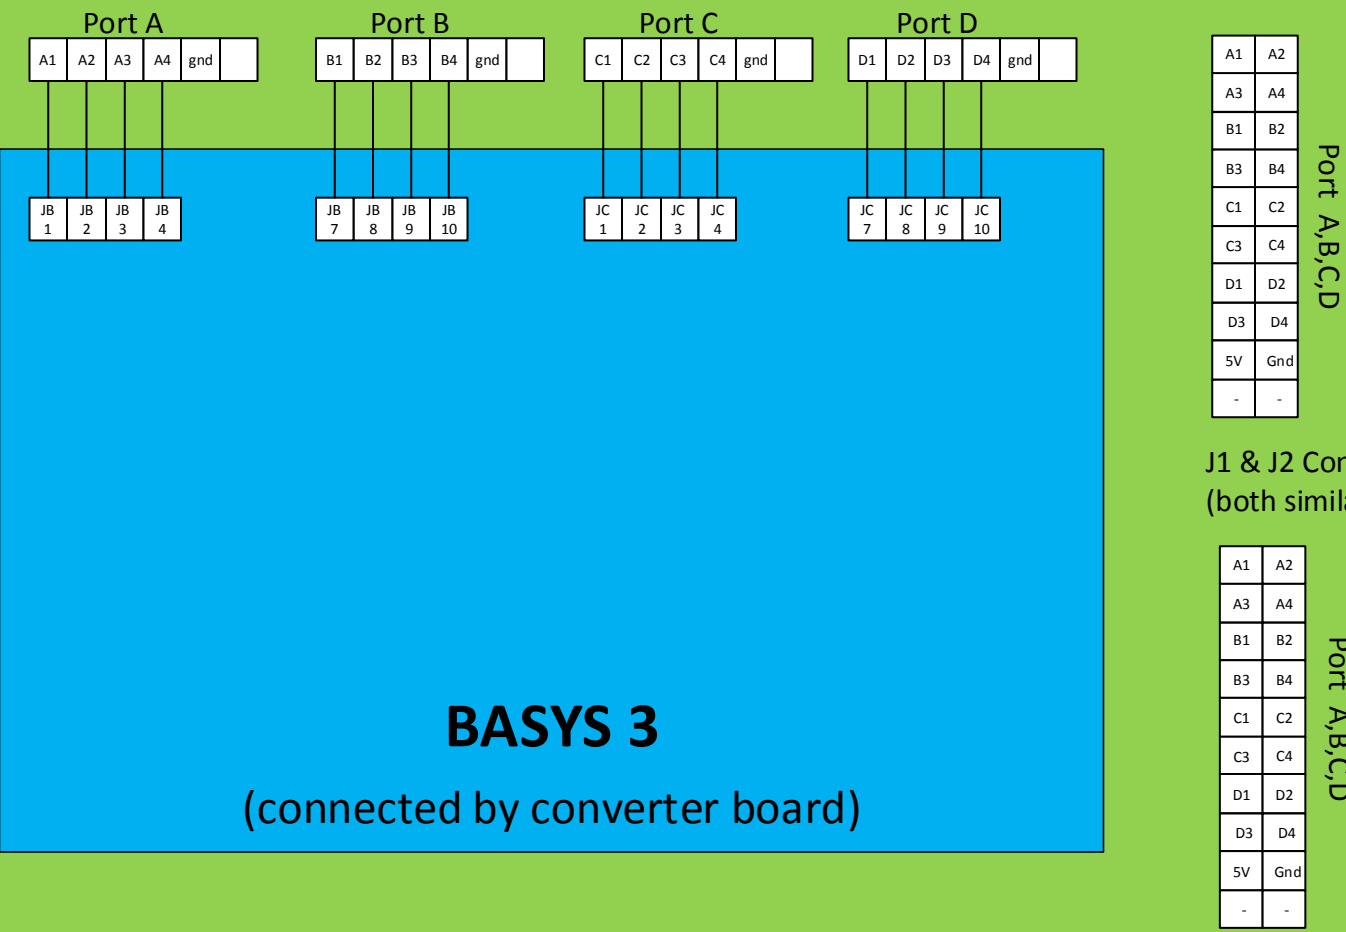

- All pins on Beti's ports are connected internally (for example all A1 pins inside Port A, J1 and J2 connectors are connected internally).
- For matching BASYS3 ports to FPGA pins refer to manual of BASYS3 (for example JB7 is connected to FPGA pin A15).
- To connect BASYS3 to modules (like keyboard matrix, stepper motor,...) use J1 and J2 connectors and parallel cables.