




Data is averaged over selected channels by this function. After averaging, selected channels are removed from the data, and a new channel is added to the data. The data size is changed by this function.

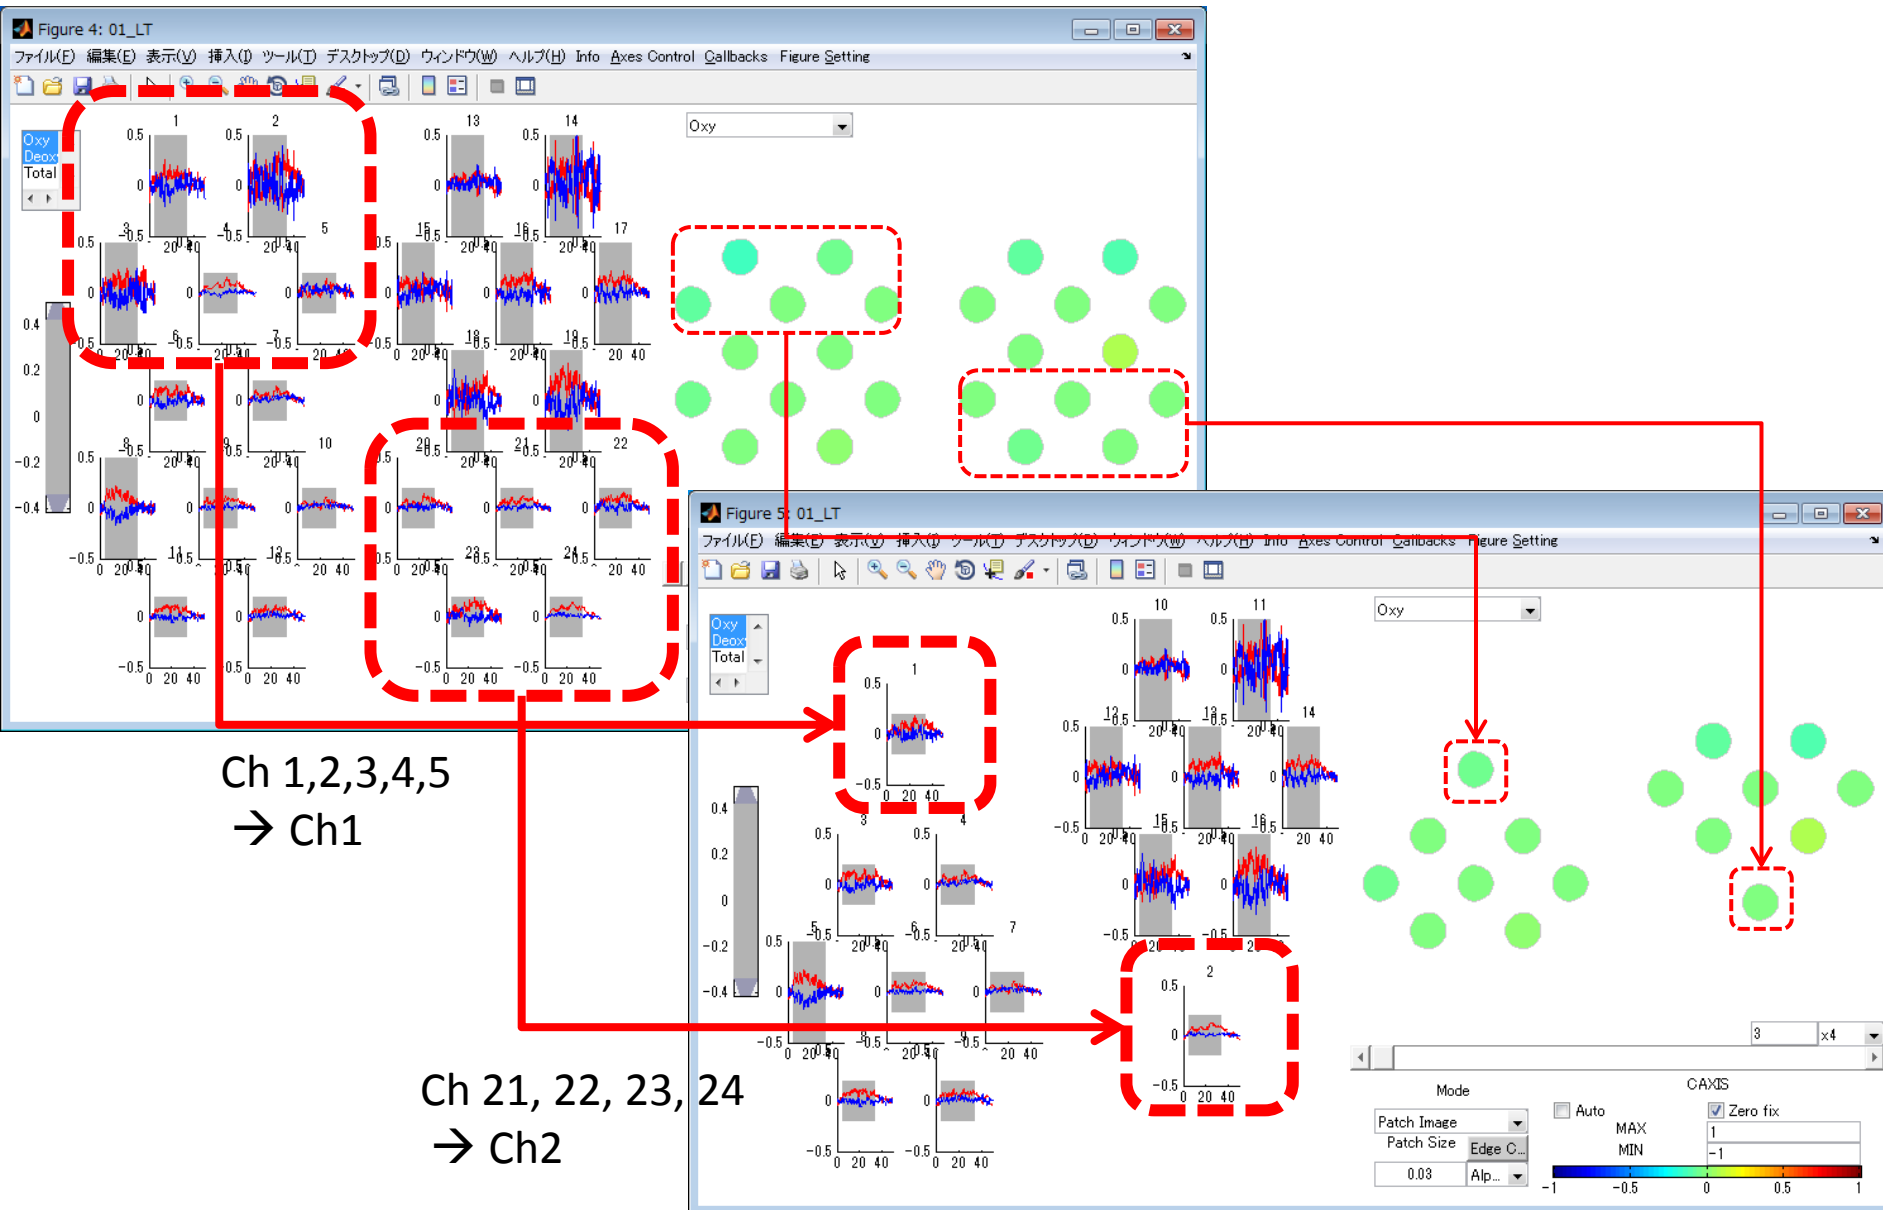

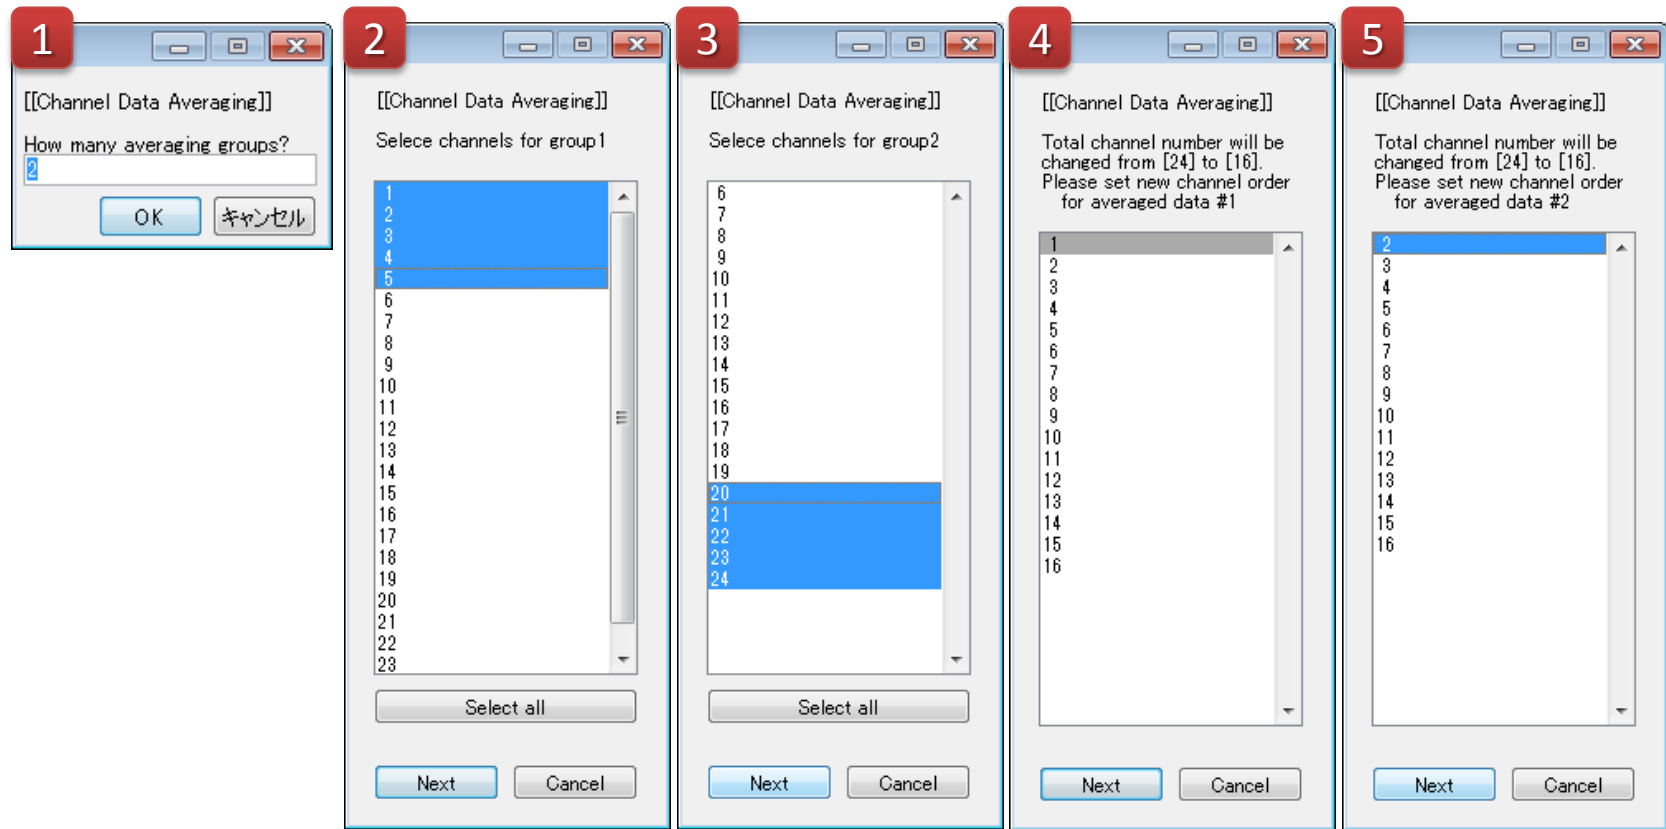

1. Input number of averaging groups.
2. Select channels for 1st averaging group.
3. Select channels for 2nd averaging group.
4. Set a new channel order for 1st averaging group.
5. Set a new channel order for 2nd averaging group.
6. Confirm settings.

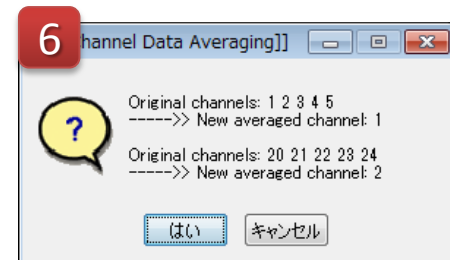

"はい" = "Yes"
 "キャンセル" = "Cancel"