




Trouble Shooting Sewing Machine




Needle Getting Stuck in the Material


- Make sure you are using the correct size needle and thread combination in your machine.
- The stitch is too fine. Lengthen the stitch length.
- The thread is tangled in the bobbin case area.
- Turn machine off, raise the needle and the presser foot.
- Loosen the presser foot screw and the needle clamp screw to remove the presser foot holder and the needle from the machine.

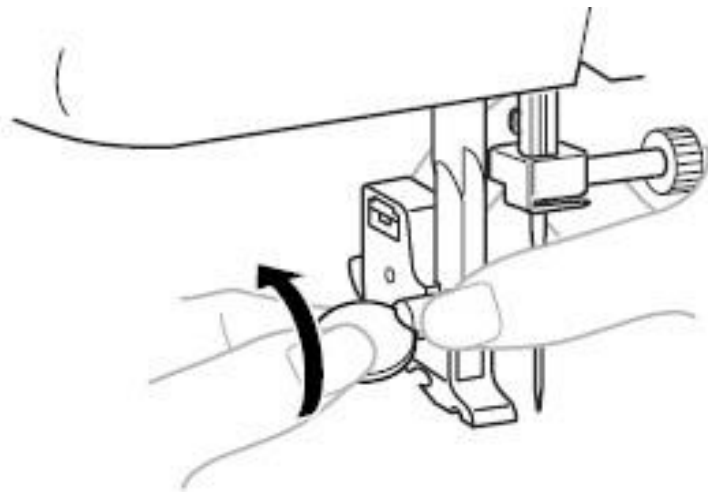


- Use the oval screwdriver to remove the two screws securing the needle plate.

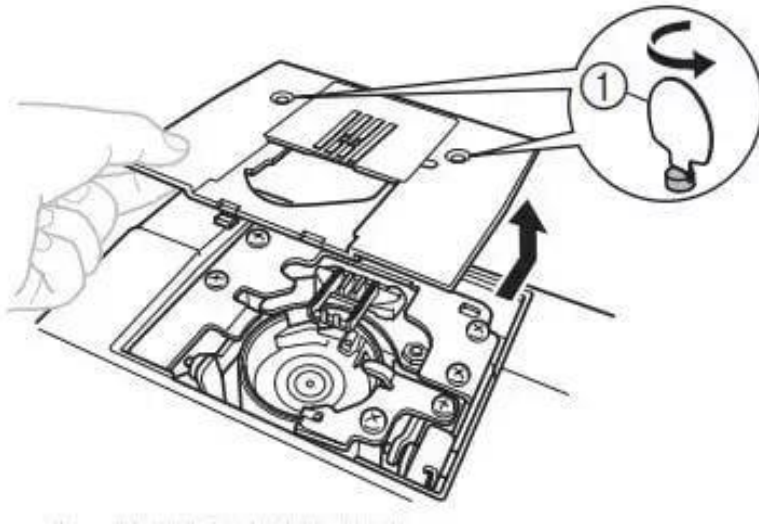


- Grasp the bobbin case, and then lift it out to the left.

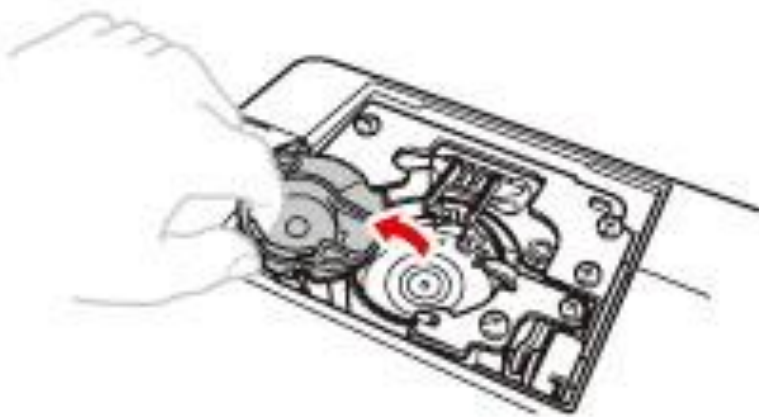


- Use a cleaning brush or a vacuum cleaner to remove any dust from the race.

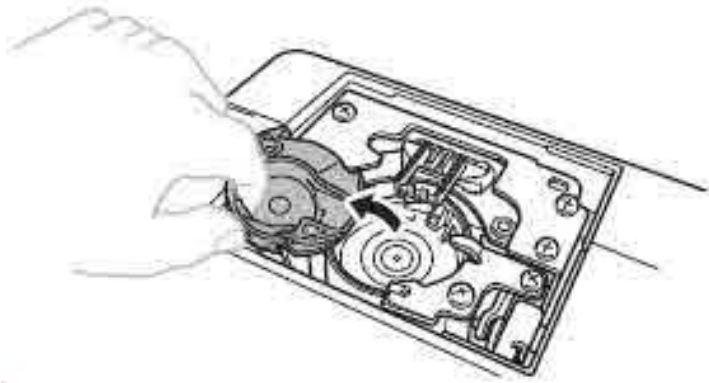

- Insert the bobbin case so that the marks on the bobbin case align with the mark on the machine.

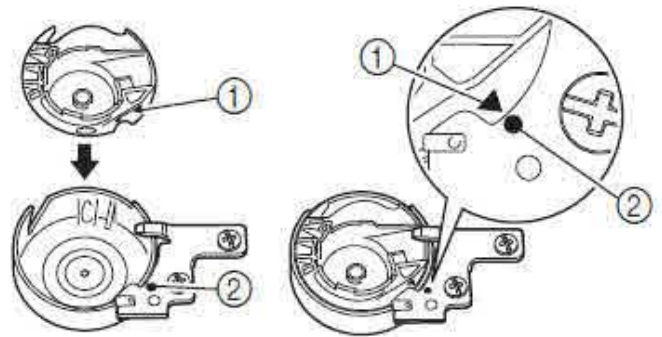


- Align the ▲ and ● marks.

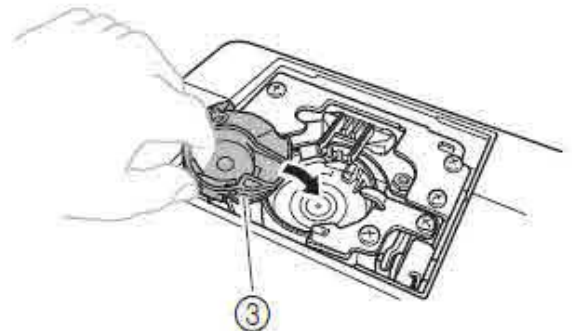

- ① ▲ mark
- ② ● mark
- ③ Bobbin case

- Make sure that the indicated points are aligned before installing the bobbin case.

- Now install the needle plate, tightening both screws.

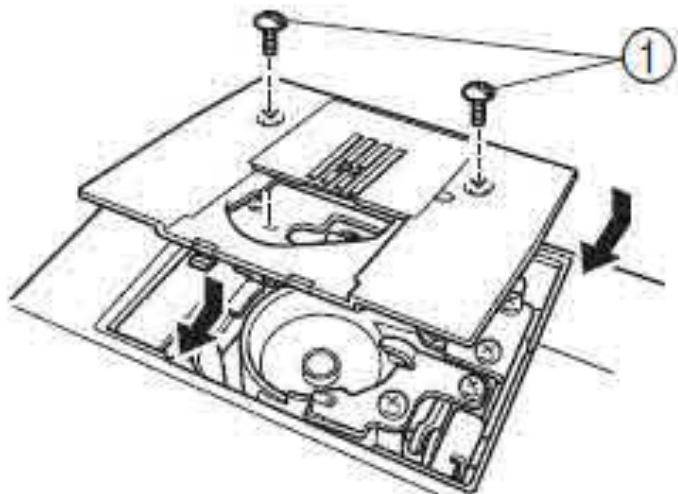

① Screws

REFERENCES:

https://support.brother.ca/app/answers/detail/a_id/122671/~why-is-the-needle-hitting-the-needle-plate%3F