

YOUR CURRENT VEHICLE

2018 Chrysler Pacifica

Seat Belt Retractor - Third Row Outboard

SEAT BELT RETRACTOR - THIRD ROW OUTBOARD

REMOVAL


WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.


Listen

Dictionary


Translate

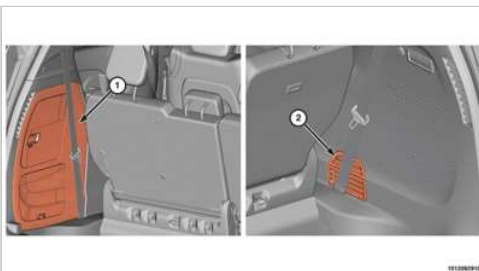

1. Remove the appropriate left or right trim panel (1 or 2) to access the seat belt lower anchor bolt.

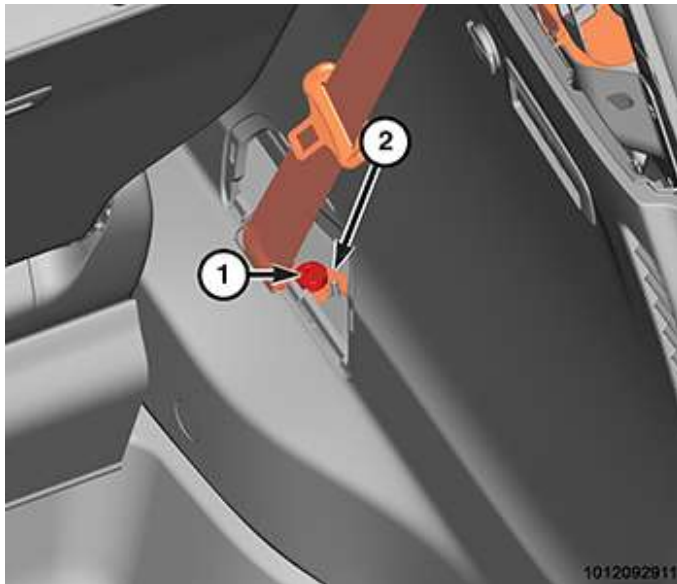

2. Remove the bolt (1) that secures the third row outboard seat belt lower anchor (2) near the rear of the wheel housing.
3. Remove the appropriate left or right quarter trim panel and D-pillar trim panel. ([Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation](#)).

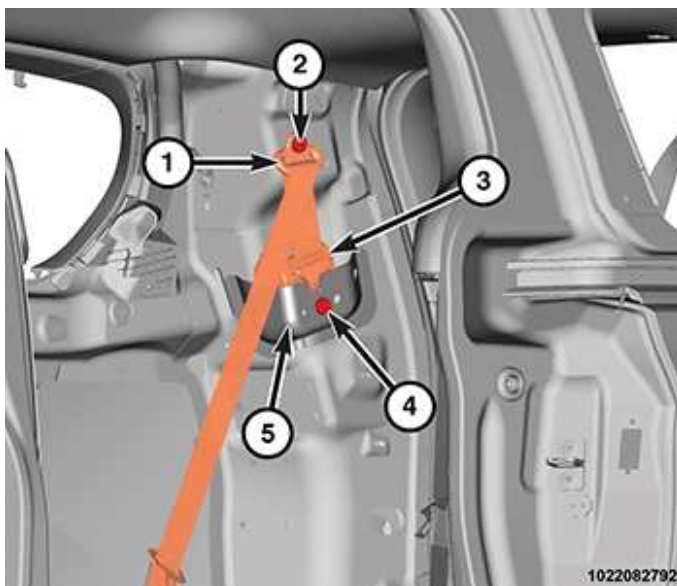


4. Remove the bolt (2) that secures the seat belt turning loop (1) to the D-pillar.
5. Remove the bolt (4) that secures the retractor (3) to the bracket (5) on the D-pillar.
6. Remove the third row outboard seat belt and retractor from the vehicle as a unit.


INSTALLATION

WARNING


To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

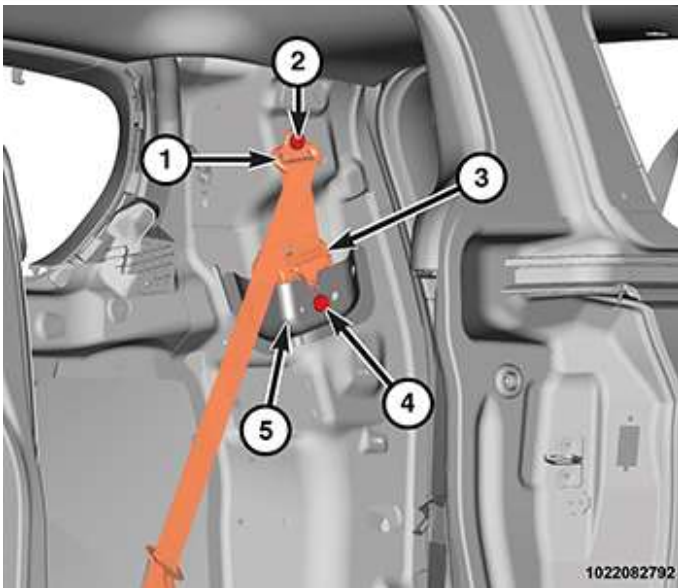

1. Position the third row outboard seat belt and retractor (3) to the bracket (5) on the D-pillar as a unit.
2. Install the bolt (4) that secures the retractor (3) to the bracket (5) on the inner body quarter panel. Tighten the bolt to the proper [\(Torque Specifications\)](#).
3. Position the seat belt turning loop (1) to the D-pillar. Be certain the seat belt webbing between the retractor and the turning loop is not twisted.
4. Install the bolt (2) that secures the turning loop (3) to the D-pillar. Tighten the bolt to the proper [\(Torque Specifications\)](#).
5. Install the quarter trim panel and D-pillar trim panel. [\(Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation\)](#).

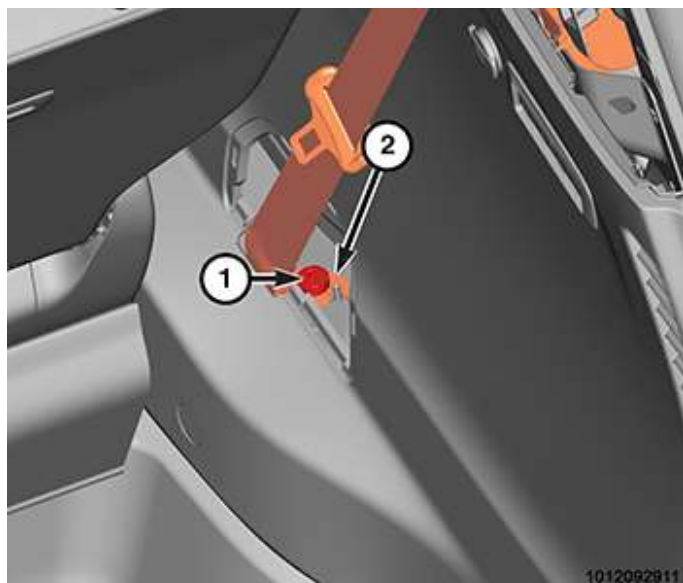

6. Install the bolt (1) that secures the lower anchor (2) near the rear of the wheel housing. Tighten the screw to the proper [\(Torque Specifications\)](#).

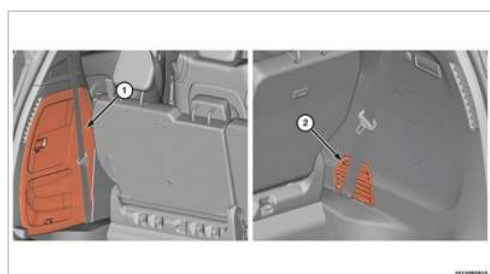

7. Install the appropriate left or right trim panel (1 or 2) for the seat belt lower anchor bolt.