

YOUR CURRENT VEHICLE

2018 Chrysler Pacifica


Seat Belt Buckle - Second Row Removable Center Seat

SEAT BELT BUCKLE - SECOND ROW REMOVABLE CENTER SEAT

REMOVAL


WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

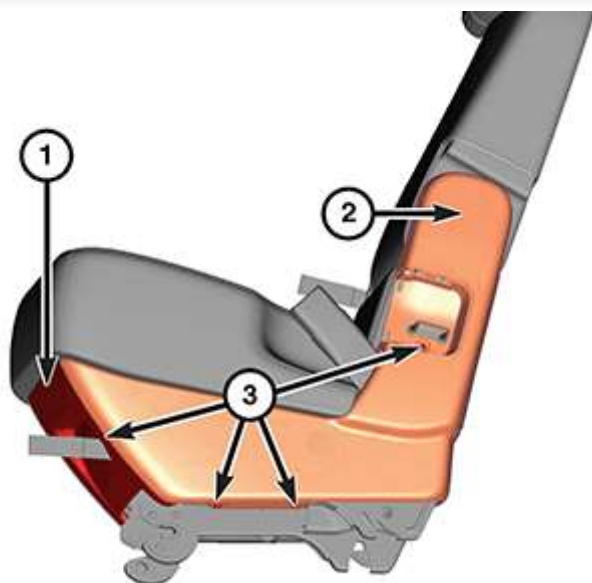

1013082544

1. Remove the second row center seat from the vehicle. ([Refer to Body/Seats/SEAT/Removal and Installation](#))([Refer To List 1](#)).
2. Remove the front cover (1) from the seat to access the hidden screw for the seat side cover (2).
3. Remove the four screws (3) for the seat side cover (2) from the left side of the second row center seat.

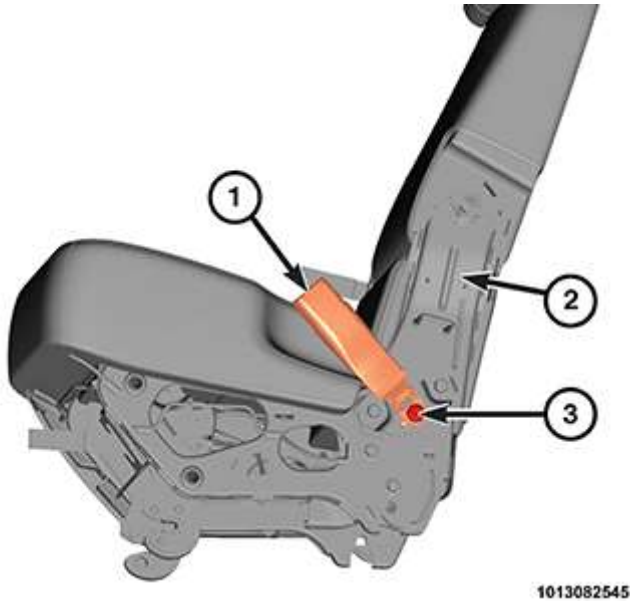


4. Remove the screw (3) that secures the seat belt buckle (1) anchor plate to the side of the seat cushion frame (2).
5. Remove the buckle unit from the seat.


INSTALLATION

WARNING

To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Mopar® Parts Catalog. Failure to follow these instructions may result in possible serious or fatal injury.

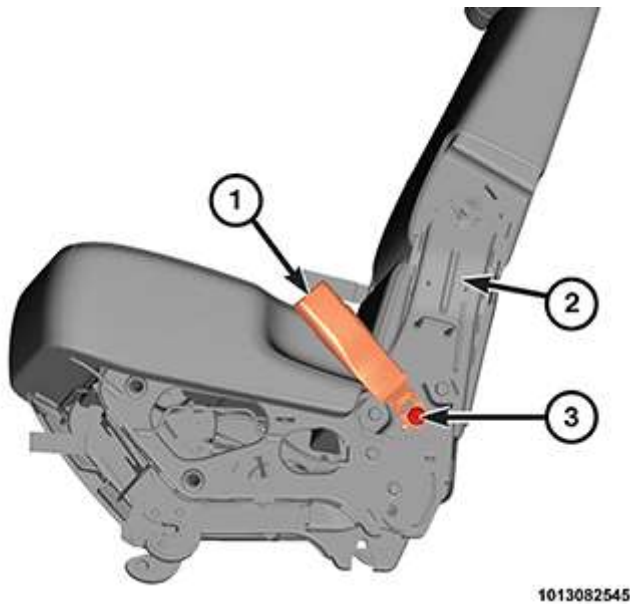

1. Position the second row center seat belt buckle (1) anchor plate onto the side of the seat cushion frame (2).
2. Install the screw (3) that secures the buckle anchor plate to the seat. Tighten the screw to the proper [\(Torque Specifications\)](#).

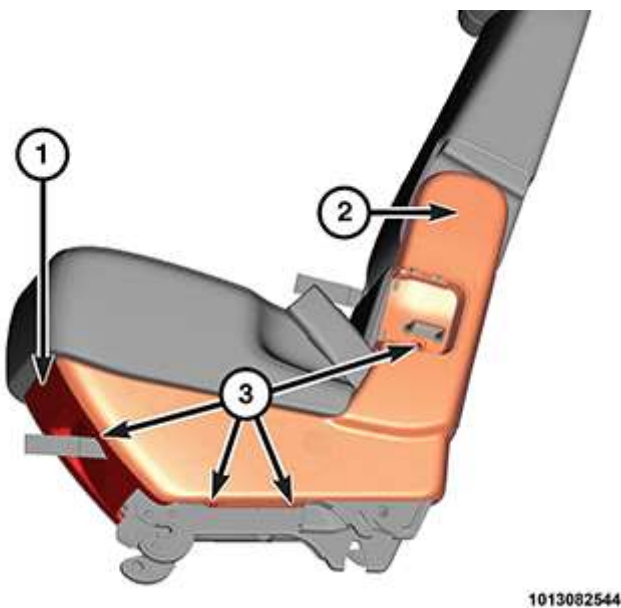

3. Position the seat side cover and install the four screws (3) for the seat side cover (2) that secure the cover to the left side of the second row center seat.
4. Install the front cover (1) for the seat.
5. Install the second row center seat in the vehicle. [\(Refer to Body/Seats/SEAT/Removal and Installation\)](#) [\(Refer To List 1\)](#).

Refer To List:

List 1

- [23 - Body / Seats, First Row / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation](#)