

YOUR CURRENT VEHICLE

2018 Chrysler Pacifica


Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

WARNING

Disable the airbag system before attempting any component diagnosis or service of the front seats, when equipped with front seat air bags. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions may result in accidental airbag deployment and possible serious or fatal injury.

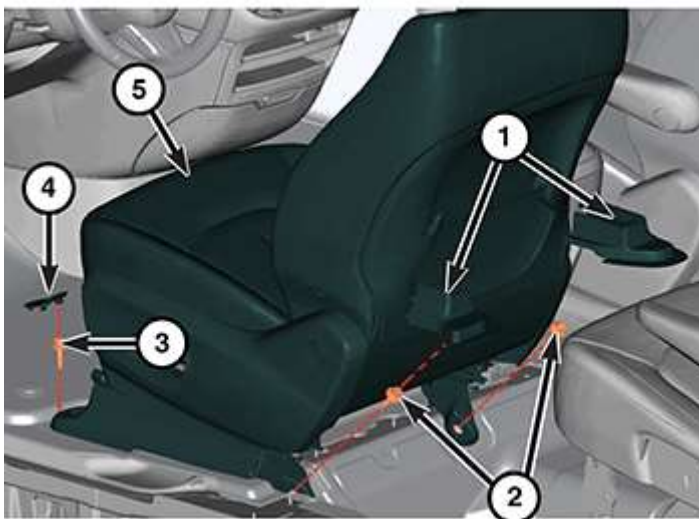


2319082136

1. Before proceeding with the following repair procedure, review all warnings and cautions ([Refer to Body/Seats - Warning](#)).
2. Remove the load floor frame ([Refer to Body/Interior/LOAD FLOOR, Frame/Removal and Installation](#)).
3. Remove the rear seat bolts (2).

4. Move the front seat to the full rearward position.
5. Disconnect and isolate the negative battery cable.
6. Remove the bolt covers (4) then the front seat bolts (3).
7. Tilt the seat up and disconnect the wire harness connectors then remove the seat.

INSTALLATION

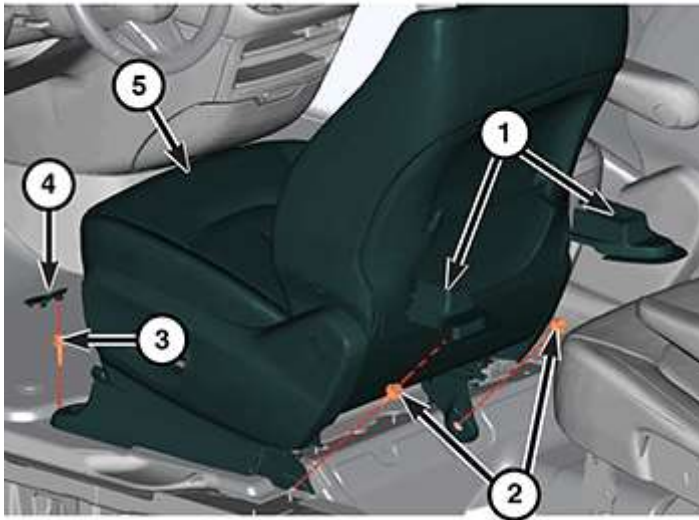

2319082136

1. Before proceeding with the following repair procedure, review all warnings and cautions ([Refer to Body/Seats - Warning](#)).
2. Position the front seat (5) into the vehicle.
3. Connect the wire harness connectors.
4. Install the front seat bolts (3) and tighten to the proper ([Torque Specifications](#)).
5. Install the bolt covers (4).
6. Connect the negative battery cable and move the front seat to the full forward position. Disconnect and isolate the negative battery cable.
7. Install the front seat bolts (2) and tighten to the proper ([Torque Specifications](#)).
8. Install the load floor frame ([Refer to 23 - Body/Interior/LOAD FLOOR, Frame/Removal and Installation](#)).
9. Connect the negative battery cable.

10. The supplemental restraint system verification test procedure should be performed following service of any supplemental restraint system component ([Refer to DTC-Based Diagnostics/CONTROLLER, Occupant Restraint \(ORC\) - Standard Procedure](#)).