

YOUR CURRENT VEHICLE


2018 Chrysler Pacifica

Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

1. Power down the 12-volt system (Refer to 08 - Electrical/Standard Procedure).
2. Remove the effected third row power folding seat, ([Refer to Body/Seats/SEAT/Removal and Installation](#)) ([Refer To List 1](#)).
3. Remove the seat cushion and cover assembly, ([Refer to 23 - Body/Seats/COVER, Seat Cushion, Front/Removal and Installation](#))([Refer To List 2](#)).
4. Disengage the actuator cable from the actuator (1).
5. Disconnect the actuator assembly electrical connector.

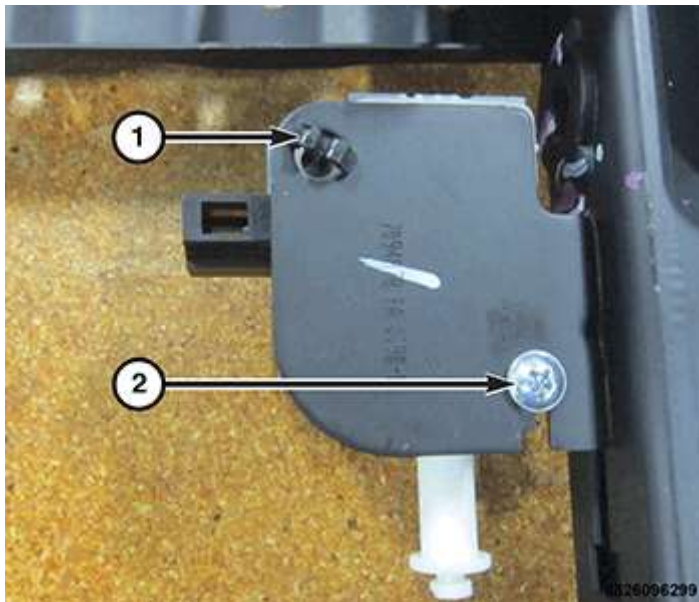

6. Remove the screw (2) securing the head rest actuator to the actuator bracket.
7. Pinch the actuator to actuator bracket hold down retainer (1) to release and remove the actuator from the vehicle.

INSTALLATION

1. Position the headrest release actuator onto the actuator bracket and secure using one screw and one retainer.
2. Connect the headrest actuator cable.
3. Connect the electrical connector to the actuator assembly.
4. Install the seat cushion and cover assembly, ([Refer to 23 - Body/Seats/COVER, Seat Cushion, Removal and Installation](#))([Refer To List 2](#)).
5. Install the third row power folding seat, ([Refer to 23 - Body/Seats/SEAT/Removal and Installation](#))([Refer To List 1](#)).
6. Power up the 12-volt system ([Refer to 08 - Electrical/Standard Procedure](#)).
7. Perform the third row power folding seat recliner calibration, ([Refer to Electrical/8N - Power Systems/Power Seats - Standard Procedure](#))([Refer To List 3](#)). Verify proper seat operation.

Refer To List:

List 1

- [23 - Body / Seats, First Row / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation](#)

List 2

- [23 - Body / Seats, First Row / COVER, Seat Cushion, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / COVER, Seat Cushion Second Row Center / Removal and Installation](#)
- [23 - Body / Seats, Second Row, Stow-n-Go / COVER, Seat Cushion, Stow-n-Go / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Stow-n-Go / COVER, Seat Cushion / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Power Folding / COVER, Seat Cushion / Removal and Installation](#)

List 3

- [08 - Electrical / 8N - Power Systems / Power Seats, Front / Standard Procedure](#)
- [08 - Electrical / 8N - Power Systems / Power Seats, Third Row / Standard Procedure](#)