

YOUR CURRENT VEHICLE


**2018 Chrysler Pacifica**

## Removal & Installation

### REMOVAL AND INSTALLATION

#### REMOVAL

#### REMOVAL

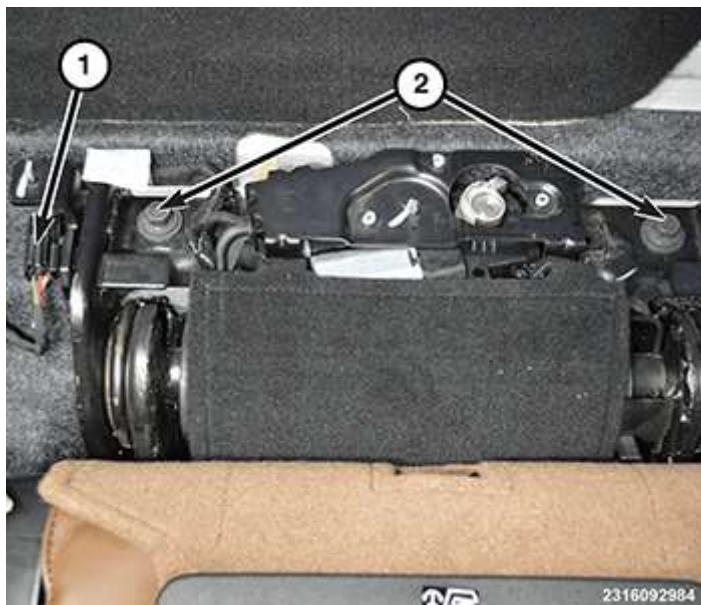


1. Remove the load floor frame ([Refer to Body/Interior/LOAD FLOOR/Removal and Installation](#)).
2. Disconnect the wire harness connector (1).
3. Remove the two bolts (2) at the rear of the seat.



4. Using a wrench, rotate the shaft (2) on the **LEFT SIDE** of the seat to release the seat mechanism and raise the seat (1) to the full upright position.


#### NOTE

Make sure the seat locks in the full upright position.

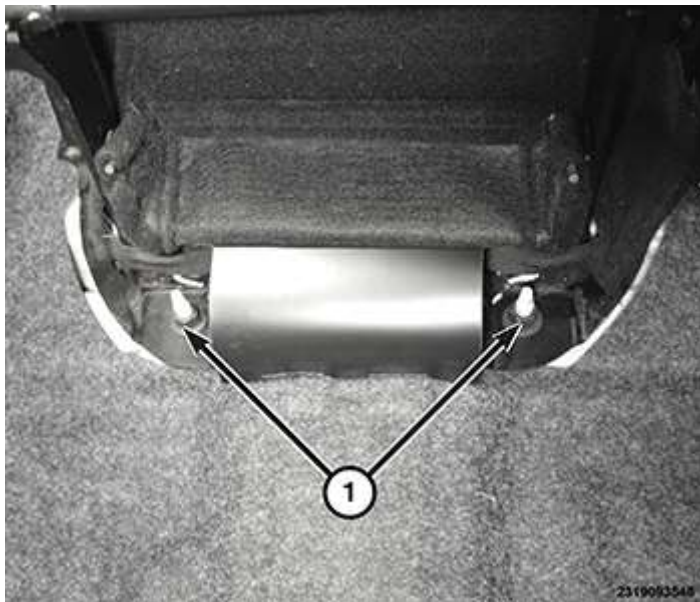

5. Remove the two nuts (1) and remove the seat.


#### INSTALLATION

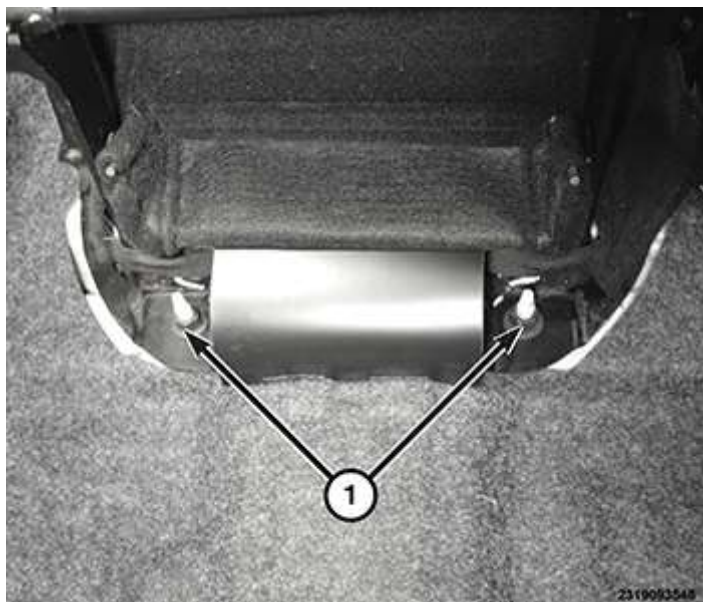

1. Place the seat into the vehicle and install the two Stow-n-Go seat nuts (1). Tighten to the proper [\(Torque Specifications\)](#).



2. Using a wrench, rotate the shaft (2) on the **LEFT SIDE** of the seat to release the seat mechanism and lower the seat (1) into the floor.

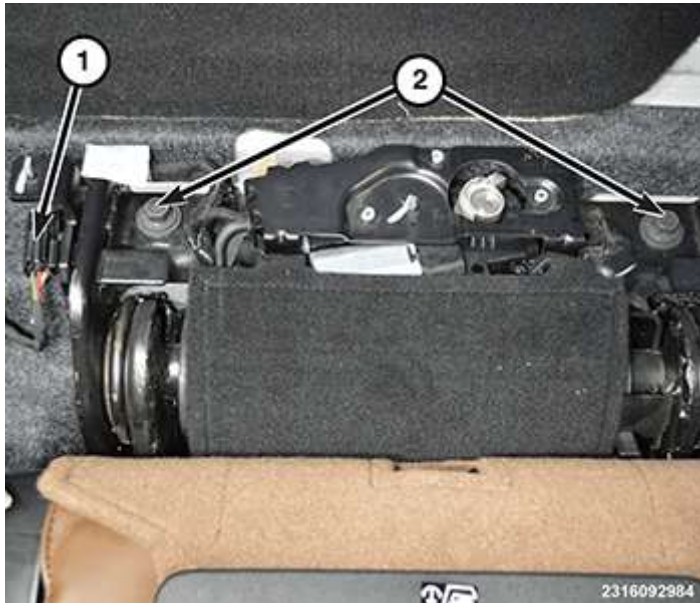

3. Install the two Stow-n-Go seat bolts (2) and tighten to the proper [\(Torque Specifications\)](#) .
4. Connect the wire harness connector (1).
5. Install the load floor frame [\(Refer to 23 - Body/Interior/LOAD FLOOR/Removal and Installation\)](#).