
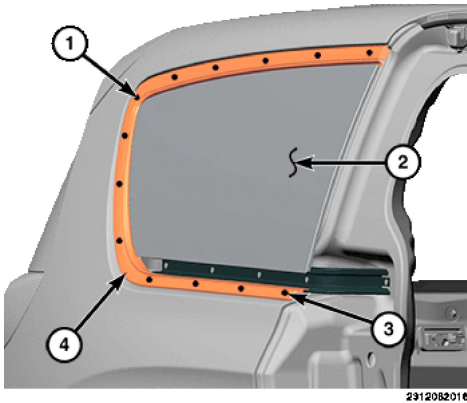


**Removal & Installation****REMOVAL AND INSTALLATION****REMOVAL**

1. Remove the door ([Refer to Body/Doors - Sliding/DOOR, Sliding/Removal and Installation](#)).


2. Using trim stick

Trim Stick

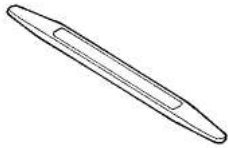

or equivalent, release the nine upper push pin fasteners (1), the four lower tabs (3) and remove the window molding (4).

3. Remove the quarter glass ([Refer to Body/Stationary Glass/GLASS, Quarter/Removal and Installation](#)).(Refer To List 1)

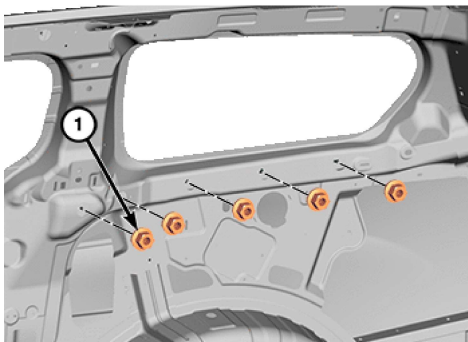


4. Remove the quarter trim panel ([Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation](#)).

5. Remove the center track nuts (1).

Listen

Dictionary


Translate

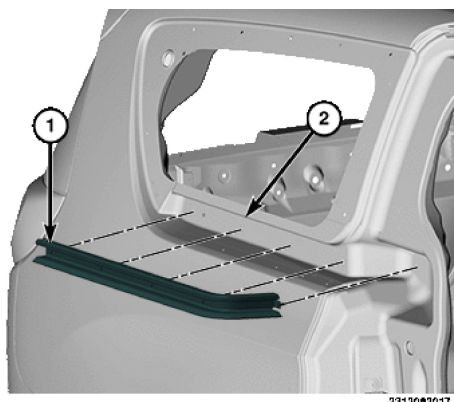

2312092017

6. Remove the track (1) from the body side cavity (2).

#### INSTALLATION

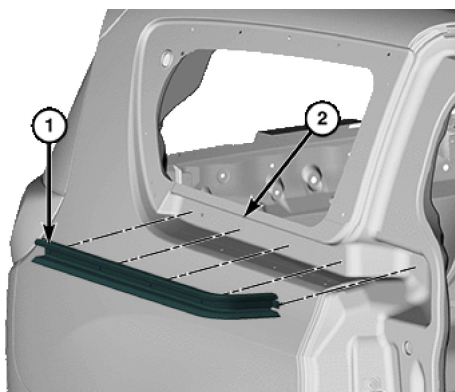


2312092017

#### NOTE

A suitable body sealant should be used when installing the center track.


1. Install the center track (1) into the body side cavity (2).

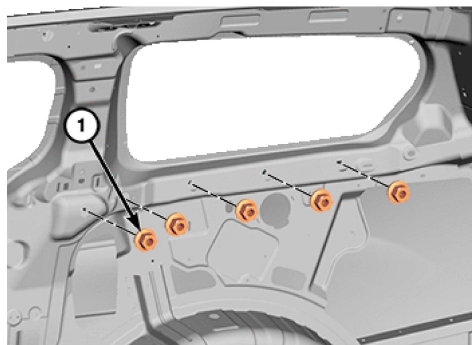

2312092019

2. Install the center track nuts (1) and tighten to the proper [Torque Specifications](#).

3. Install the quarter trim panel [Refer to 23 - Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation](#).

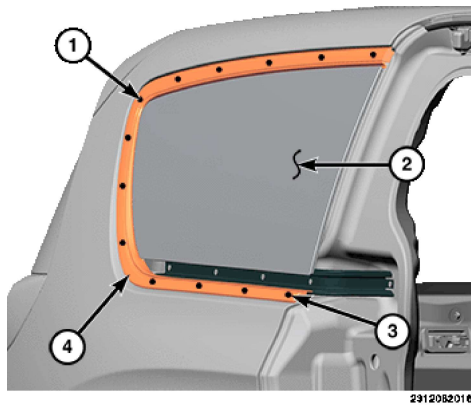

4. Install the quarter glass ([Refer to Body/Stationary Glass/GLASS, Quarter/Removal and Installation](#)).(Refer To List 1)
5. Install the glass molding (1) and seat the nine upper push pin fasteners (1) and the four lower tabs (3) fully.
6. Install the door ([Refer to Body/Doors - Sliding/DOOR, Sliding/Removal and Installation](#)).

**Refer To List:**

## List 1

- [23 - Body / Stationary Glass / GLASS, Liftgate / Removal and Installation](#)
- [23 - Body / Stationary Glass / GLASS, Quarter / Removal and Installation](#)
- [23 - Body / Stationary Glass / GLASS, Sunroof / Removal and Installation](#)