
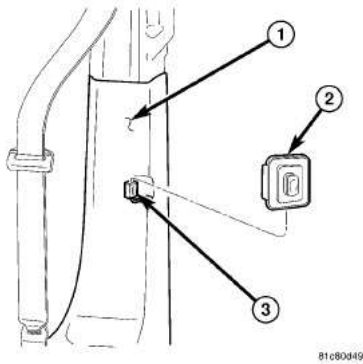


Removal & Installation**REMOVAL AND INSTALLATION****REMOVAL**

1. Disconnect and isolate the battery negative cable.

2. Using a trim stick (special tool #

Trim Stick

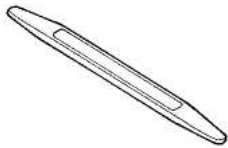


) or equivalent, gently pry the leading upper edge of the B-pillar switch (2) away from the B-pillar trim (1).

3. Once the upper edge is free from the B-pillar trim, rock the switch out of the switch opening.

4. Disconnect the B-pillar switch electrical connector (3).

5. Remove the B-pillar switch from the vehicle.

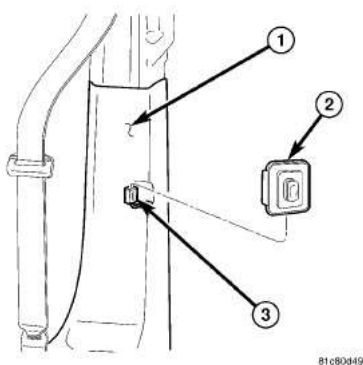INSTALLATION

1. Position the B-pillar switch (2) into the vehicle.

2. Connect the B-pillar switch electrical connector (3).
3. Hook the lower edge of the B-pillar switch (2) onto the B-pillar trim panel (1) and push the switch firmly into position.
4. Connect the battery negative cable.