

YOUR CURRENT VEHICLE

2018 Chrysler Pacifica

Second Row Seat Release Actuator Switch


2ND ROW SEAT RELEASE ACTUATOR SWITCH

REMOVAL


1. Remove the appropriate front seat cover and cushion and place it on a workbench. (Refer to 23 - Cover, Seat Cushion, Front/Removal and Installation).
2. Remote the seat frame top front metal cover to gain access to the switch.



3. Loosen the large nuts (1) at each front side of the seat frame.

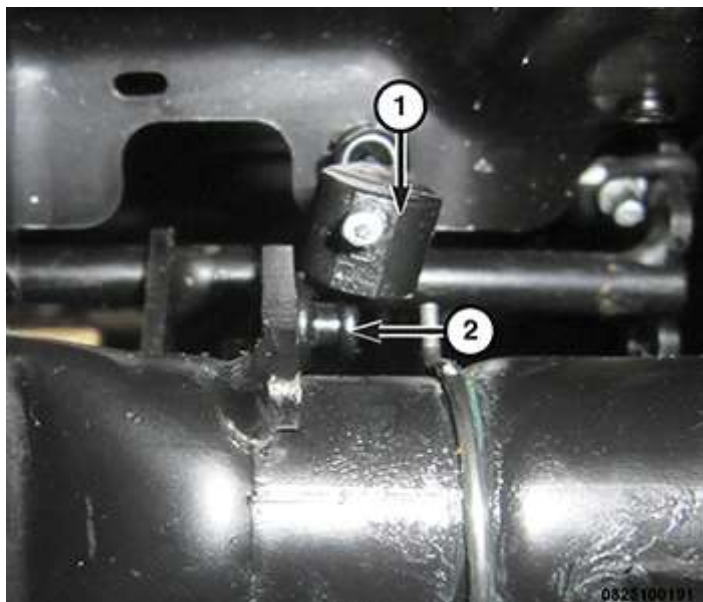

4. At the right front of the frame, remove the cable lock tab (1) from the stud (2).

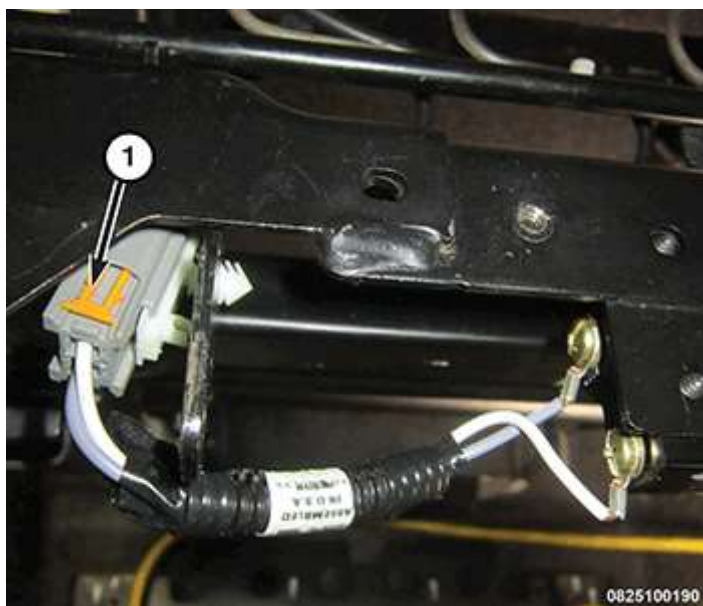

5. Disconnect the wiring harness connector (1) from the seat release actuator switch harness.



6. Position the seat all the way forward to access the switch (2) bolts.
7. Remove the two lower and two side switch retaining bolts (1).
8. Remove the switch from the vehicle.

INSTALLATION

1. Install the seat release switch to the seat frame and secure using four bolts.
2. Connect the seat switch electrical connector harness to the body wiring harness connection.
3. Connect the cable lock tab.
4. Tighten both side seat nuts.
5. Install the seat frame top front metal cover.
6. Install the seat cover and cushion. (Refer to 23 - Cover, Seat Cushion, Front/Removal and Installation)