

Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

NOTE

The procedure for replacing the seat leg latch release actuator and cable assembly is the same for both the 60 and 40 third row power folding seats. The following steps should be performed only on the seat with the inoperative seat leg latch release actuator and cable assembly.

1. Remove the affected third row power folding seat, ([Refer to Body/Seats/SEAT/Removal and Installation](#))([Refer To List 1](#)).
2. Remove the seat cushion and cover assembly, ([Refer to 23 - Body/Seats/COVER, Seat Cushion, Front/Removal and Installation](#))([Refer To List 2](#)).

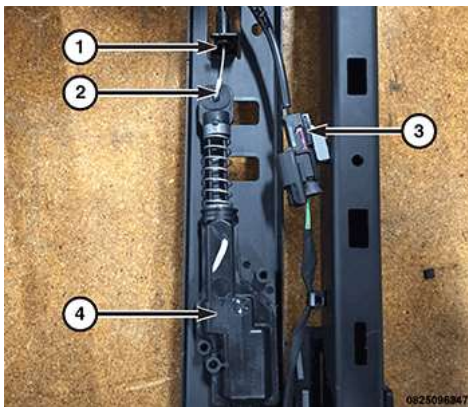

3. Disconnect the wiring harness connector (3) from the actuator.
4. Release the actuator cable from the guide (1).
5. Disconnect the cable assembly (2) from the actuator.



6. Remove two bolts (1) securing the actuator to the seat track frame.
7. Remove the actuator from the vehicle.

INSTALLATION

1. Seat the actuator to the track and secure using two bolts.

2. Connect the actuator cable to the actuator.
3. Connect the electrical connector to the actuator.
4. Install the seat cushion and cover assembly, ([Refer to 23 - Body/Seats/COVER, Seat Cushion, Removal and Installation](#))(Refer To List 2).
5. Install the third row power folding seat, ([Refer to 23 - Body/Seats/SEAT/Removal and Installation](#))(Refer To List 1).
6. Perform the third row power folding seat recliner calibration, ([Refer to Electrical/8N - Power Systems/Power Seats - Standard Procedure](#))(Refer To List 3). Verify proper seat operation.

Refer To List:

List 1

- [23 - Body / Seats, First Row / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation](#)

List 2

- [23 - Body / Seats, First Row / COVER, Seat Cushion, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / COVER, Seat Cushion Second Row Center / Removal and Installation](#)
- [23 - Body / Seats, Second Row, Stow-n-Go / COVER, Seat Cushion, Stow-n-Go / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Stow-n-Go / COVER, Seat Cushion / Removal and Installation](#)
- [23 - Body / Seats, Third Row, Power Folding / COVER, Seat Cushion / Removal and Installation](#)

List 3

- [08 - Electrical / 8N - Power Systems / Power Seats, Front / Standard Procedure](#)
- [08 - Electrical / 8N - Power Systems / Power Seats, Third Row / Standard Procedure](#)