



### TERMINATION STEPS

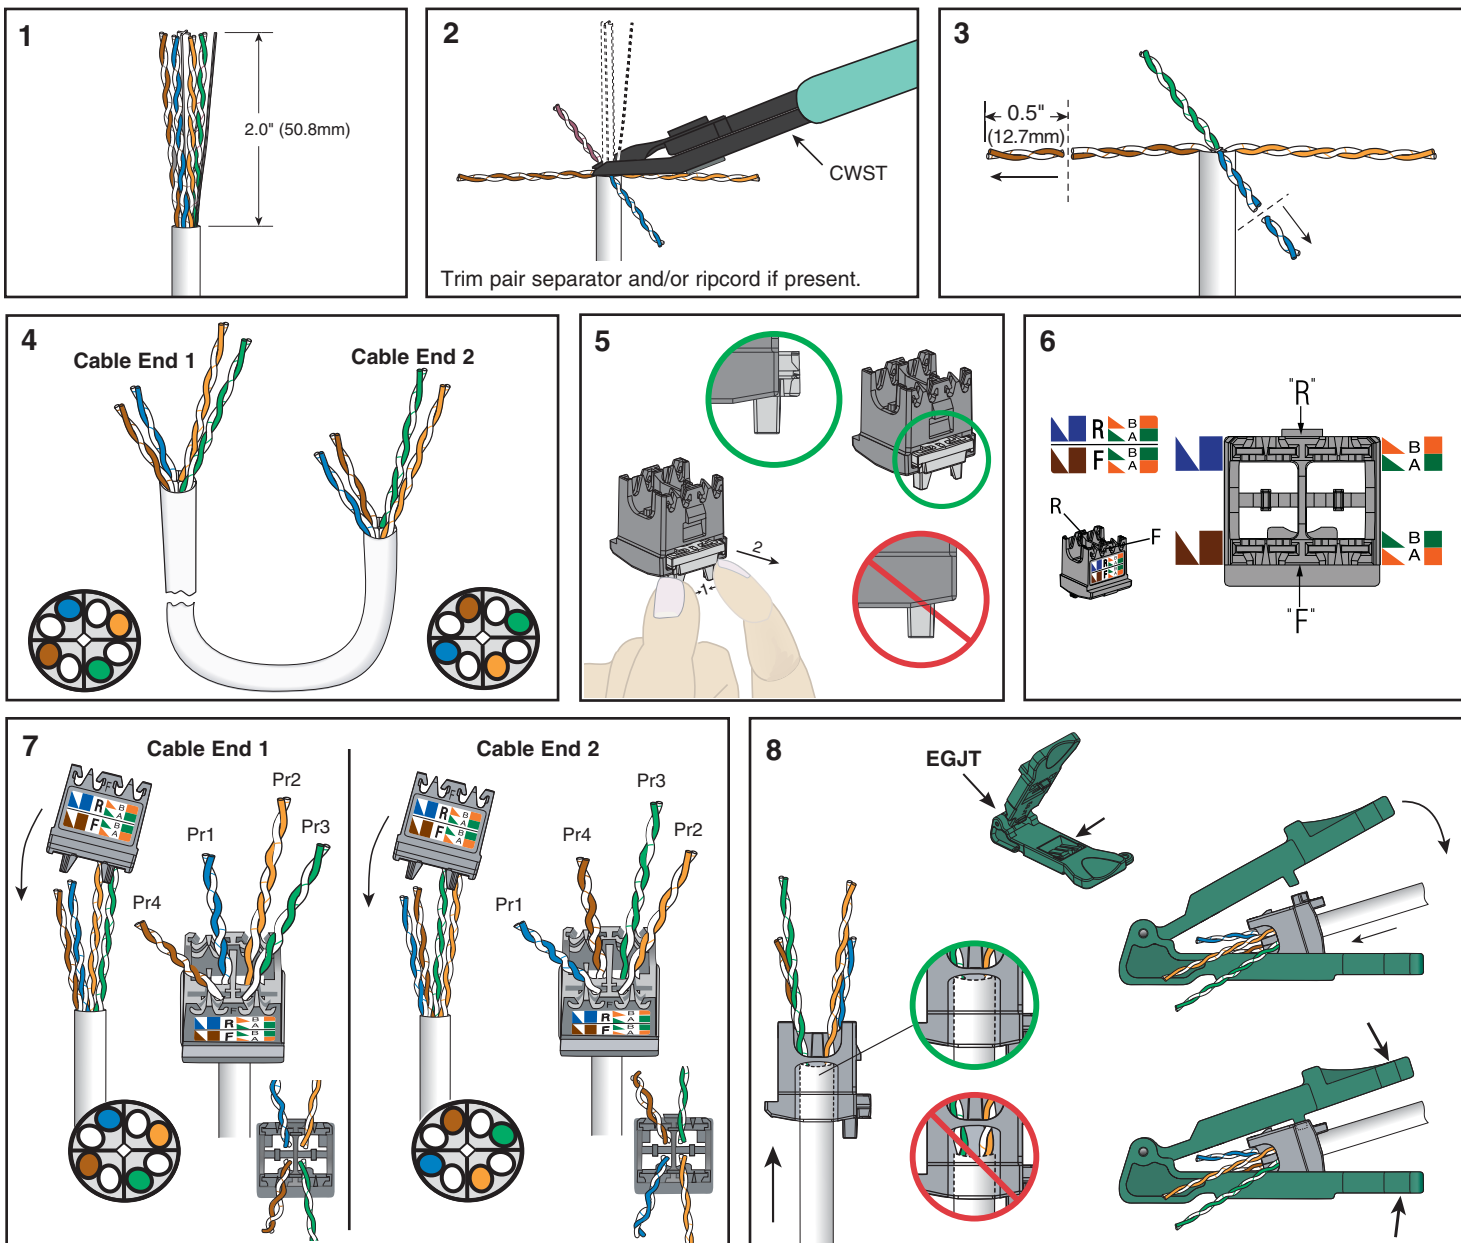


Note: For bulk packaged TG Style Jack Modules add -24 to end of part number.

\*\* Denotes color.

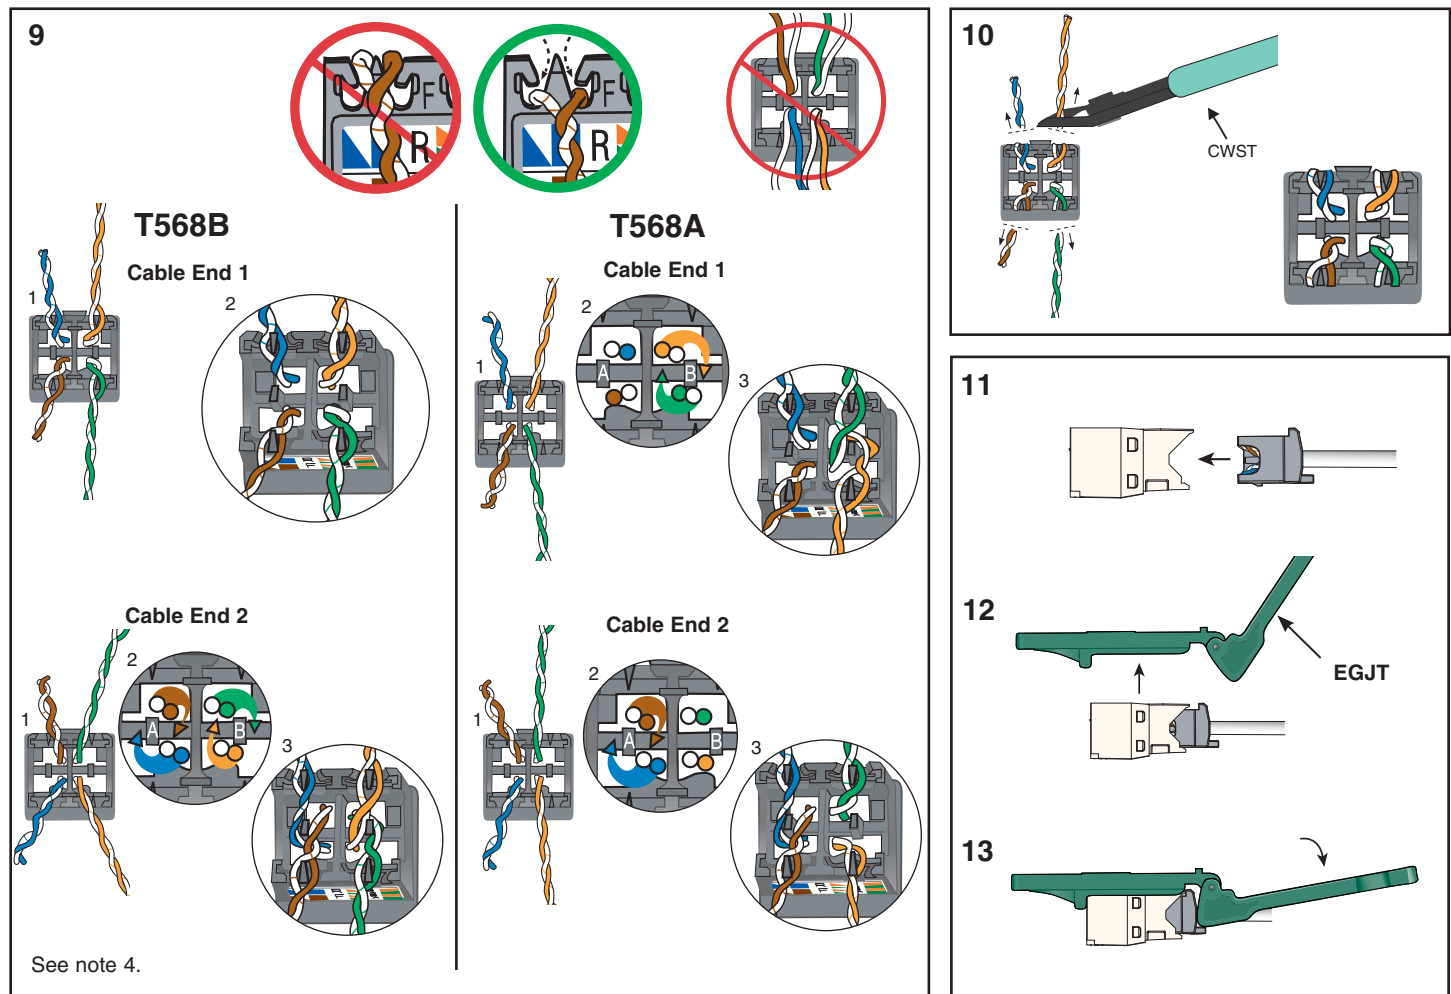

## REMOVAL STEPS

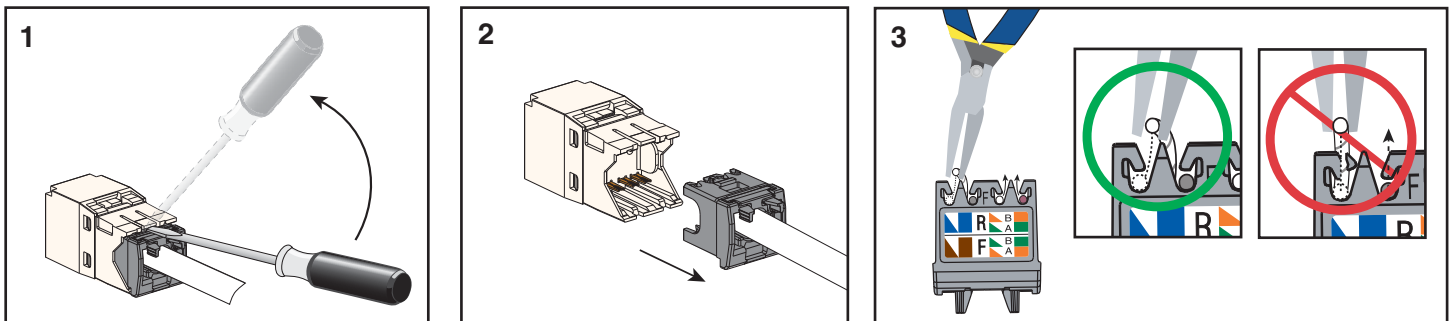**Notes:**

- For specified performance, follow ANSI/NECA/BICSI-568-2006 installation guidelines.
- Jack Modules can terminate 22-26 AWG solid or stranded IWC data cable with 0.062 (1.57 mm) maximum insulated conductor outside diameter.
- Jack Modules may be re-terminated a minimum of 20 times.
- On cable end 2 for A & B wiring and cable end 1 of A wiring, wrap the designated pairs around the proper center dividing post (A or B) and terminate in the proper location.
- For technical and performance information, consult Panduit Technical Support.

**As with all Communication Components, the following statements apply:**

- Never install communications wiring during a lightning storm.
- Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
- Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
- Use caution when installing or modifying communication wiring.

For Instructions in Local Languages  
and Technical Support:

[http://www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**

[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654