



# User Manual

## Shield Sealer

Model: SNS700



Thank you for purchasing the Vacuum Packaging Unit. You are about to revolutionize your home with one of the strongest vacuum packaging systems available. With the help of the Vacuum Sealer, you will now be able to keep food fresher, longer in the refrigerator, freezer and pantry. The Vacuum Sealer system effectively removes air and extends freshness up to five times longer than normal preservation methods. Beyond that, the Vacuum Sealer can be used to preserve and organize household items like keepsakes, small toys and easy-to-lose items. You will soon find your Vacuum Sealer to be so versatile and convenient; it will never leave your countertop.

By using vacuum bags and canisters, you can significantly extend food life, maintain food quality, reduce freezer burn, and reduce food waste and costs.

The style of the Vacuum Sealer is clean and simple with a lightweight, compact design. Its unique slanted layout design and wide vacuum trough makes it easy to load bags and ensure a positive seal every time. Only high quality, fully tested and rated components have been used in the construction in order to ensure the best performance.

Read and follow all directions for usage and maintenance carefully and you'll benefit from years of trouble-free and cost effective vacuum packaging.

## **Table of Contents**

Vacuum Packaging and Food Safety .....	3-4
The Vacuum Sealer Features .....	5-6
Safety & Maintenance .....	7
Operating Instructions .....	8-15
Food Storage & Safety Information .....	16
Vacuum Packaging Tips .....	17
Troubleshooting .....	18-20

## ***Vacuum Packaging and Food Safety***

Vacuum packaging extends the life of foods by removing most of the air from sealed containers and prevents fresh air escaping into the sealed containers, thereby reducing oxidation. Vacuum packaging helps preserve flavor and overall quality. It also helps inhibit the growth of aerobic microorganisms, which can lead to the problems noted below under certain conditions:

**Mold** – Mold cannot grow in a low oxygen environment; therefore vacuum packaging can virtually eliminate it.

**Yeast** – Results in fermentation, which can be identified by smell and taste. Yeast needs water, sugar and a moderate temperature to grow. It can also survive with or without air. Slowing the growth of yeast requires refrigeration, while freezing stops it completely.

**Bacteria** – Results in an unpleasant odor, discoloration and/or soft or slimy texture. Under the right conditions, clostridium botulinum (the organism that causes Botulism) can grow without air and cannot be detected by smell or taste. Although it is extremely rare, it can be very dangerous.

As with any other storage container, it is important to inspect food for spoilage prior to consuming.

To preserve foods safely, it is important to maintain low temperatures. You can significantly reduce the growth of microorganisms at temperatures of 4°C or below. Freezing at -17°C does not kill microorganisms, but stops them from growing. For long-term storage, always freeze perishable foods that have been vacuum packaged.

It is important to note that vacuum packaging cannot reverse the deterioration of foods. It can only slow down changes in quality. It is difficult to predict how long foods will retain their top-quality flavor, appearance or texture because it depends on the


age and the condition of the food on the day it was vacuumed packaged.

**Note:** vacuum packaging is not a substitute for refrigeration or freezing. Any perishable foods that require refrigeration must still be refrigerated or frozen after vacuum packaging.

### **Preparation Guidelines**

Vegetables need to be blanched before vacuum packaging. This process stops the enzyme action, which leads to loss of flavor, color and texture. To blanch vegetables, place them in boiling water or in the microwave until they are cooked, but still crisp. Then, immerse the vegetables in cold water to stop the cooking process. Finally, dry the vegetables on a towel before vacuum packaging. Cruciferous vegetables (broccoli, sprouts, cabbage, cauliflower, kale, turnips) naturally emit gases during storage. Therefore, after blanching, they must be stored in the freezer only.

## The Vacuum Sealer Features

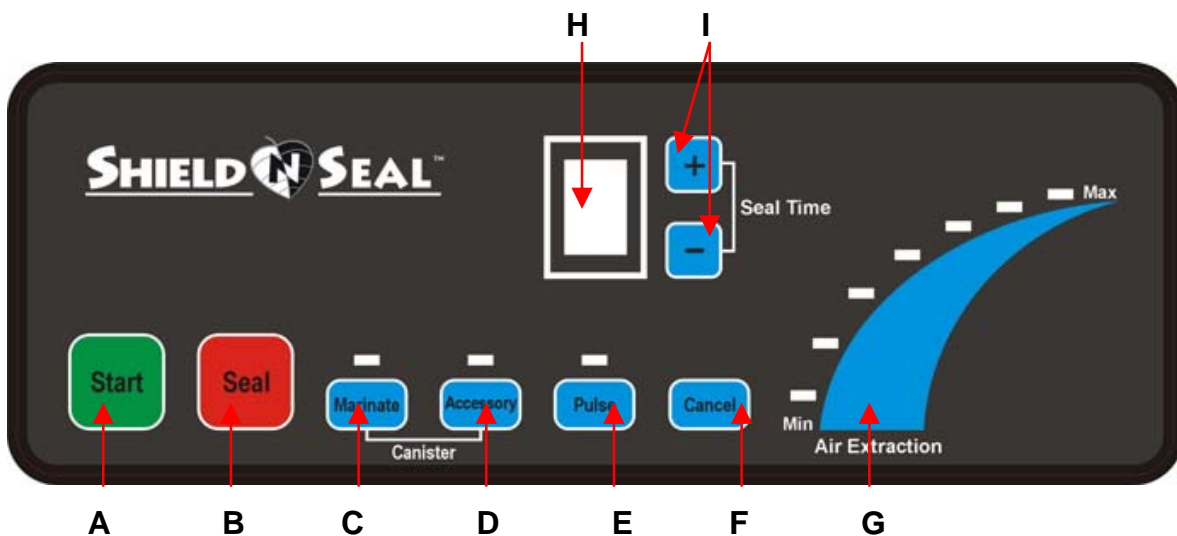

### A. Auto Vacuum Button (Start)

Press "Start" button, machine will vacuum and seal automatically. This button is only for vacuum bag/roll.

### B. Seal Button (Seal)

1. Press "Seal" button to stop vacuum cycle and instantly seal the bag to prevent crushing delicate items.
2. Make custom-sized bags.

**C. Marinate Mode (Marinate)**

Marinate mode is for repeating the cycle of vacuuming and releasing air to canister, allowing foods to get optimum pickle infusion in the least amount of time.

**D. Accessory Vacuum Button (Accessory)**

Only for vacuum canister, bottle stopper and other accessories; press “Accessory” button, the machine starts vacuum cycle. After the vacuum cycle, machine will stop automatically WITHOUT seal.

**E. Pulse Vacuum Button (Pulse)**

Use “Pulse” button to prevent crushing delicate items. Press “Pulse” button by fingers, the machine will vacuum little by little according to your pressing on the button.

**F. Cancel Button (Cancel)**

Immediately halts all function and opening the Vacuum Chamber.

**G. Vacuum Process Indicator lights**

Displays vacuum levels as the bag/canister is evacuated

**H. Digital Display**

1. Display the seal time under the current situation. Seal time is adjustable from 0-6 seconds. Default setting is 4 seconds.
2. When it displays “E”, machine is in protective status.

**I. Seal Time Adjusting Button (“+” or “-”)**

Simply adjust the seal time “up” or “down” by using “+” or “-” buttons. When it is adjusted to 0, machine will not seal.

## **Technical Data**

Voltage: 120Vac 60Hz	Power: 670W
Pressure: $\geq$ -27.5”Hg / -931mbar	Weight: 7.3Kg
Max Bag Seal Width: 390mm	Pump: dual
Seal Wire Width: 5mm	Size: 483x205x198mm

## ***Safety***

For your safety, follow these precautions when using your Vacuum Sealer:

- Read Owner's Manual and carefully before using the machine for the first time.
- Do not use the Vacuum Sealer on wet or hot surfaces, or near a heat source.
- Do not immerse machine or power cord in water or any other liquid.
- Plug Vacuum Sealer into grounded power sources only, do not use extension cord.
- To disconnect, unplug directly from power source. Do not disconnect by pulling on cord.
- Do not operate appliance with damaged power cord.
- Only use the Vacuum Sealer for its intended use.
- Only use Vacuum bags, accessories and attachments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## ***Maintenance***

- Unplug before cleaning.
- Regularly clean appliance with damp cloth and mild soap to remove crumbs, dust, debris.
- Vacuum chamber is removable to clean any liquids that may have escaped from Vacuum bag during process.



# ***Operating Instructions***

## **Preparations**

- Plug in machine.
- Press “Power” switch, digital display is on, fan starts, illuminator is on. Now the machine is ready for all cycles. (The illuminator and fan will stop automatically if no action within 10 minutes. Press any button to restart the machine, then the illuminator and fan will start again.)

## **How To Make Bag From Roll**

1. Choose roll with suitable width.
2. Place one open end of the bag into the vacuum chamber (please make sure the open end is across the seal wire).
3. Press “Seal” button, Vacuum chamber will close automatically, seal time will count down to 0 from default setting, showing on digital display. After this cycle, the Vacuum chamber will open automatically and beep.  
\*\* Press Cancel button to stop the machine’s all working processes.
4. Take out the roll end and check the seal.  
**NOTE:** A positive seal will look “clear” upon inspection. If the seal is spotty, incomplete, wrinkle, white or milky, please cut the seal and restart the sealing process.
5. After end is sealed, measure bag to size of item, allowing 4.5cm of space and cut roll. Place item in bag and follow “how to vacuum and seal with bags”.

## **How To Vacuum And Seal With Bags**

1. Choose suitable vacuum bag, place item in bag.
2. Allow at least 4.5cm space after item is put in bag, to ensure better vacuum.
3. Put the open end of bag across the chamber seal gasket. Please make sure that the open end is within the vacuum chamber.
4. Press the Easy Start button at the right side of the machine (or press the Start button on the control panel)
5. Vacuum chamber will close automatically, the machine goes to vacuum cycle. Vacuum process indicator lights will be on from Min to Max, indicating the process of the vacuum. (If the pressure does not reach standard of -20"Hg, the indicator light will stop at the fourth light). After the vacuum process, all indicator lights will be off. Then the machine goes to sealing cycle.
6. When enter into the sealing process, seal time will be shown on the Digital Display and count down from default setting to 0.  
\*\* Seal time is adjustable from 0-6 seconds, default setting is 4 seconds. If the setting time is 0, the machine will not seal.
7. After the sealing cycle, the Vacuum chamber will open automatically and beep.
8. Take out the bag and check the vacuum and seal.  
**NOTE:** A positive seal will look "clear" upon inspection. If the seal is spotty, incomplete, wrinkle, white or milky, please cut the seal and restart the sealing process.
9. Please store the vacuum items properly after seal. All perishable foods must be refrigerated or frozen to prevent spoilage.
10. Press "Cancel" button to stop the machine's all working processes. If instant seal is needed, simply press "Seal" button.

## **How To Use “Pulse” Vacuum Function**

Since the pressure under the “Pulse” vacuum function is set to be high, sometimes it is easy to destroy some delicate items by high pressure in the vacuum bag. In this case, you can use the “Pulse” vacuum function to control the vacuum time and pressure, and prevent crushing delicate items. When packing some juicy foods, you can also use this function and prevent liquid being sucked out.

1. Put the items in bag and then put the open end of the bag across the chamber seal gasket, please make sure that the open end of the bag within the vacuum chamber.
2. Press the “Pulse” button continually, till it reaches the pressure that you want. You can watch the vacuum bag to decide the pressure. During this process, you can stop vacuum by stop pressing this button; and press it again to vacuum again.
3. When the pressure reaches what it needs, press “Seal” button to start sealing. When enter into the sealing process, seal time will be shown on the Digital Display and count down from default setting to 0.

\*\* seal time is adjustable from 0-6 seconds, default setting is 4 seconds. If the setting time is 0, the machine will not seal.

4. After the sealing cycle, the Vacuum chamber will open automatically and beep.

\*\* Press “Cancel” button to stop the machine’s all working processes.

## **Bag Guidelines**

- Package the freshest foods possible. The Vacuum Sealer allows you to maintain the food’s freshness up to five times longer than under normal stored conditions.
- Delicate foods, moist foods and foods that need to hold their shape require pre-freezing. Foods like meat, berries and bread can be frozen for up to 24 hours without harm of freezer burn. Once food is hard, it is ready to be vacuum

packaged.

- If packaging fresh meats without pre-freezing, place a folded paper towel in between the meat and the top of the bag. This will help absorb moisture.
- To vacuum liquids like soups, stews and casseroles, pre-freeze in a dish or ice cube tray. Once frozen, vacuum package, label and stack in your freezer.
- For objects with sharp points or edges (bones, pasta, rice) pad the edges with paper towels to prevent the bag from puncturing.
- Vacuum bags are reusable, boilable and microwavable. We do not recommend reusing bags that have been boiled or micro-waved. Do not reuse bags that have been used to store fresh fish or greasy foods.
- Vegetables must be blanched before being packaged. Place in boiling water or microwave until heated through but still crunchy. Vacuum package as normal.

**\*\* Never vacuum package mushrooms or garlic.\*\***

## **How To Use With Canister**

SNS700 is also used for canisters. The knob on the top of the lid controls vacuuming, closes and locks vents inside lid after vacuuming, and opens the vents to allow air back in the canister and releases the lid to access the contents.

1. Place the items into the canister. Make sure the canister lid is dry and the lid gasket is without any powder or food debris. Also please allow some space after the items are put into the canister. And then close the lid.
2. Turn the knob to "Vacuum" position.
3. Connect the hose to the Accessory port on the machine and the port on the canister lid.

4. Press “Accessory” button, slightly press the canister lid for 3-5s. The machine starts vacuum process.  
\*\* Press “Cancel” button to stop the machine’s all working processes.
5. After the vacuum cycle, the machine will stop automatically. Remove the hose from the canister and turn the knob to “Lock” position. Store canister in refrigerator.
6. To open vacuum canister, twist knob to “Open” position. With proper care, the canisters may be reused many times.

## **How To Marinate Foods**

There is a special function in SNS700—the marinate mode, with two options of Quick Marinate Mode (15mins) and Normal Marinate Mode (27mins). In the marinate mode, the machine can run two cycles of vacuuming and releasing air to the canister, allowing foods to get optimum pickle infusion in the least amount of time. Vacuum status keeps for about 4mins (Quick Marinate Mode)/8mins (Normal Marinate Mode) before releasing air, between each cycle. When marinate is complete, the machine will beep.

Vacuum canister is a perfect partner to marinating foods. The reason that foods can be marinated in such a short time is that, it opens the micro-holes of the foods, allowing pickle infusion very quickly.


**Important tips: when using canister for marinating, there should be a knob on the canister lid. Make sure the canister lid is in “Open” status but NOT “Vacuum” status when it is in the marinate process.**

1. Put items in the canister. Make sure there is no powder or food debris on the canister lid gasket. Also please allow some space after the items are put into the canister.

2. Turn the knob to “Open” position.
3. Connect the hose to the Accessory port on the machine and the port on the canister lid.
4. Press “Marinate” button, choose the marinate option. Press once for Quick Marinate Mode, “1” will appear on the digital display; press twice for Normal Marinate Mode, “2” will appear on the digital display.
  - \*\* In Quick Marinate Mode, the cycle is about 15mins.
  - \*\* In Normal Marinate Mode, the cycle is about 27mins. Longer marinate time will make much perfect marinated foods.
5. Press “Start” button, slightly press the canister lid for 3-5s. When it reaches the pressure, the machine will stop automatically. Vacuum process indicator lights will be on from Min to Max in turn, and repeat. After 4mins (Quick Marinate Mode) or 8mins (Normal Marinate Mode), it stops counting, vacuum status is complete.
6. When vacuum status is complete; the canister starts to release air. Vacuum process indicator lights will be on from Min to Max in turn, and repeat. After 30s, it stops counting; releasing air is complete.
7. The machine vacuums the canister again. The above mentioned cycle will be run two times.
8. When marinate process is complete, 0 will appear on the digital display and illuminate and the machine will beep. Turn the canister knob to “Lock” position, remove the hose from canister. Now the delicacy is ready.
  - \*\* Press “Cancel” button to stop the machine’s all working processes.

## **Canister Guidelines**

- Use only canisters designed for vacuum packaging. Other containers can implode under the vacuum pressure of the Vacuum Sealer.
- Cool liquids in refrigerator before vacuum packaging. Hot foods should be cooled before vacuum packaging.
- Do not freeze vacuum canister. Suggested lowest temperature is  $-18^{\circ}\text{C}$ . Too low (lower than  $-18^{\circ}\text{C}$ ) or too high (higher than  $100^{\circ}\text{C}$ ) temperature will make the canister materials endure lower pressure or melt.
- 3-5s before the machine's vacuum process, slightly press the canister lid with your hands.
- Hand wash canister lid. Do not put in dishwasher and micro-oven. The canister itself is dishwasher safe and micro-oven safe. Suggested highest temperature is  $100^{\circ}\text{C}$ .
- If liquids are caught in the accessory hose, run warm water through hose. Be sure hose is not attached to accessory port.
- Powdered or granulated foods should be covered with a paper towel before vacuuming to prevent food from traveling into the vacuum mechanism.
- Vacuum packaging is not a substitute for canning. Perishable foods still need to be refrigerated or frozen.

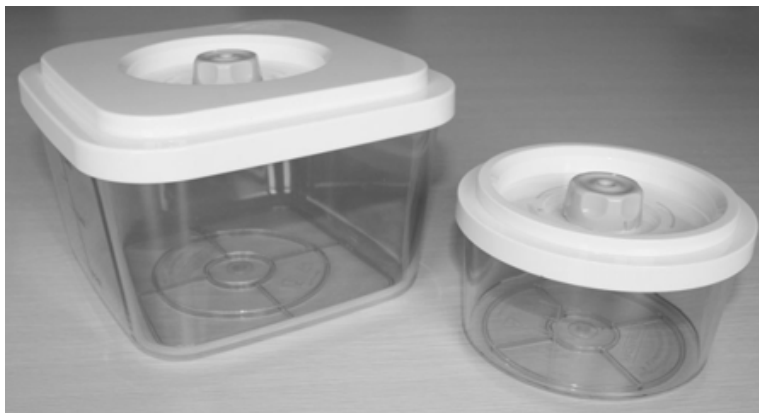

## **How To Use With Vacuum Bottle Stoppers**

SNS700 can vacuum bottle with bottle stoppers. If you cannot finish a bottle of wine at one time, or you need to preserve a bottle of non-carbonic acid drink, edible oil, a bottle of juice or any liquid else that is stored in a bottle, you can use the SNS700 to vacuum the bottle with a bottle stopper.

1. Plug the vacuum bottle stopper to the bottle. Please allow at least 2.5cm distance between the bottom of the stopper and the surface of the liquid.
2. Connect the hose to the accessory port of the machine and the other end to the port of the bottle stopper.
3. Press "Accessory" button, the machine starts to vacuum.  
\*\* Press "Cancel" button to stop the machine's all working processes.
4. After the vacuum cycle is complete, the machine will stop automatically.  
Remove the hose from the stopper.
5. Put the bottle vertically in a plane surface. Make sure the liquid does not touch the stopper.
6. Simply remove the stopper if you want to open the bottle.



## ***Food Storage and Safety Information***

The Vacuum Sealer will revolutionize the way you buy and store food. Because vacuum packaging works to eliminate freezer burn and slow food spoilage, you are now able to take advantage of buying food in bulk without the threat of food waste.

Vacuum packaging with the Vacuum Sealer removes up to 90% of the air from the package. This will help keep food fresher up to 5 times longer than under normal circumstances. Dry foods like pasta, cereals and flour will stay fresh from start to finish. Plus vacuum packaging prevents weevils and other insects from infesting dry goods. Package only the freshest foods possible.

However, please keep in mind that not all foods benefit from vacuum packaging. Never vacuum package garlic or fungi like mushrooms. A dangerous chemical reaction takes place when air is removed, causing these foods to be dangerous if ingested. Vegetables should be blanched before packaging to kill any enzymes that may cause deterioration of out-gassing when vacuumed.

<b>Foods</b>	<b>Vacuum Freezer Storage</b>	<b>Vacuum Fridge Storage</b>	<b>Typical Storage</b>
<b>Fresh Beef &amp; Veal</b>	1-3 years	1 month	1-2 weeks
<b>Ground Meat</b>	1 year	1 month	1-2 weeks
<b>Fresh Pork</b>	2-3 years	2-4 weeks	1 week
<b>Fresh Fish</b>	2 years	2 weeks	3-4 days
<b>Fresh Poultry</b>	2-3 years	2-4 weeks	1 week
<b>Smoked Meats</b>	3 years	6-12 weeks	2-4 weeks
<b>Fresh Produce, Blanched</b>	2-3 years	2-4 weeks	1-2 weeks
<b>Fresh Fruits</b>	2-3 years	2 weeks	3-4 days
<b>Hard Cheeses</b>	6 months	6-12 weeks	2-4 days
<b>Sliced Deli Meats</b>	not recommended	6-12 weeks	1-2 weeks
<b>Fresh Pasta</b>	6 months	2-3 weeks	1 week

## ***Vacuum Packaging Tips***

Vacuum packaging greatly extends the shelf life of foods, but your Vacuum Sealer can also be used in many other areas of the house besides the kitchen.

### ***Vacuum packaging is great for camping and outdoor activities!***

- For a quick & reusable ice pack, fill a vacuum bag about half full with water and a few tablespoons of rubbing alcohol. Seal the bag - don't vacuum it - and place in the freezer. The alcohol keeps the water from freezing completely, resulting in a flexible ice pack to wrap around sore joints and minor injuries.
- Vacuum package pre-made meals in advance for camping outings for quick and easy dinners in the great outdoors.
- Vacuum package meats and other items for scent-free storage.
- Create your own dry packs by vacuum packaging essentials like matches, dry socks and a map for emergencies.

### ***Around The House***

- Organize 'junk' drawers and keep easy to lose items like nails and screws safe by vacuum packaging them in a vacuum bag. That way, items are clearly visible and organized within the bag.
- Don't worry about polishing silver ever again! Simply vacuum package rarely used silverware in vacuum bags to prevent the oxidation that causes tarnishing.
  - \*\* Hint: place a folded paper towel in between sharp edges of the silverware and the vacuum bag to prevent puncturing.

## ***Trouble Shooting***

Under the proper circumstances, your Vacuum Sealer will give you many top-notch vacuum performances. In some instances, problems may arise. Please consult the trouble shooting menu before calling customer support.

### **Note:**

- \* **Suggest stopping for about 20 seconds between each working cycle.**
- \* **When machine is under long time working and is overheat, the thermal overload will start to protect the machine. “E” appears on the digital display. In this case please shut down the machine and cut off the electricity, and allow the machine rest for about 20mins. And then re-connect and re-start the machine.**
- \* **There will be error “E” shown on the digital display when the vacuum chamber is taken out or not well locked but any of the “Start” “Seal” or “Pause” button is pressed. Please put back the vacuum chamber and well lock it, the machine will start working again.**
- \* **When LED display shows "E1" signal, please contact specialized persons to repair it.**

### ***The Vacuum Sealer won't turn on***

- **Ensure that the machine is properly plugged into a grounded outlet.**
- **Check the power cord for tears and frays. Do not use machine if power cord is damaged.**
- **Check if the vacuum chamber is well locked.**

***The Vacuum Sealer doesn't pull a complete vacuum with bags***

- To vacuum and seal properly, edge of bag must be across the seal bar. Make sure bag is inside the chamber seal gasket and that there are no wrinkles in the bag along the seal bar.
- If packaging from a roll bag, make sure first seal is complete and that there are no gaps in either seal.
- The Vacuum Sealer and vacuum bag need to be clean, dry and free of debris for the vacuum process to be successful. Wipe surface of seal bar and inside of bag and try again.
- Check if the seal gasket is well installed or damaged.

***Vacuum bag loses vacuum after being sealed***

- Sharp items can puncture small holes in bags. To prevent this, cover sharp edges with paper towel and vacuum in a new bag.
- Some fruits and vegetables can release gases (out-gassing) if not properly blanched or frozen before packaging. Open bag. If you think food spoilage has begun, discard food. If food spoilage has not yet begun, consume immediately. If in doubt, discard food.
- Check if the heat seal pad is well installed or damaged.

***The Vacuum Sealer is not vacuuming canisters properly***

- The accessory hose may not be properly attached. Ensure the hose is completely inserted into the lid of the canister and the accessory port and try again.
- Make sure the canister lid is turned to the "Vacuum" setting (In Marinate Mode

to “Open” setting).

- Leave adequate head space at the top of the canister.
- Make sure there isn't any damage to the canister and lid. Sometimes hairline cracks can develop in canisters. When this happens the canister is no longer air tight and should be discarded.
- Twist knob on lid of canister to make sure it is attached securely.

***In seldom cases some of the programs may be error and lead to that the machine cannot work well***

- Cut the electricity then re-connect it.

Thank you for purchasing the Shield Sealer SNS 700.

***Happy Vacuuming!***



VACUUM SEALING & STORAGE PRODUCTS

SAVENSEAL.COM LTD.

## LIMITED WARRANTY

The SHIELD SEALER™ SNS 700 warranty covers defects in material and workmanship of the product under normal use for a period of one [1] year from the date of retail purchase. The warranty does not cover damages resulting from: misuse; abuse; immersion; normal wear and tear, neglect, including failure to clean product regularly in accordance with manufacturer's instructions, any use not in conformity with the printed directions; unauthorized modification; or, improperly installed maintenance kit.

Should this sealer require service [or replacement at our option] while under warranty, DO NOT RETURN APPLIANCE TO STORE. Please contact SHIELDNSEAL® for authorization and troubleshooting at:

SHIELDNSEAL®  
P.O. Box 2471  
Nevada City, California 95959  
(855) 770-SEAL (7325)

NOTE\* Must provide provide proof of purchase; warranty covers original owner only.

There are no implied or express warranties except as listed above. This warranty gives you specific legal rights which may vary from state to state. NOT LEGAL FOR TRADE.