

Exam Code: HP0-P12

Exam Name: Servicing HP Integrity Entry-Level Servers

Vendor: HP

Version: DEMO

Part: A

1: How do you upgrade the FPGA firmware on an HP Integrity rx6600 server?

- A.via the console cable, upload using Xmodem
- B.via the iLO2-MP LAN, upload using FTP
- C.via the iLO2-MP LAN, upload using HTTP
- D.via the console cable, upload using HyperTerminal

Correct Answers: B

2: Click the Exhibit button. After inserting a CD into the DVD drive, what should be done first to access the information?

```
fs0 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E012691EE2,Lun0)/HD(Part1,SigF0B58DCE-4E59-4FC7-8299-A74E825F5C68)
fs1 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01120D402,Lun0)/HD(Part1,Sig86C72286-8F79-11DB-8002-D6217B60E588)
fs2 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01120D402,Lun0)/HD(Part3,Sig86C722E0-8F79-11DB-8004-D6217B60E588)
fs3 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01264C262,Lun0)/HD(Part1,SigADC7E6BA-B196-11DB-8002-D6217B60E588)
blk0 : Acpi(HWP0002,PNP0A03,0)/Pci(2|1)/Usb(0, 0)
blk1 : Acpi(HWP0002,PNP0A03,0)/Pci(2|1)/Usb(0, 0)/CDROM(Entry0)
blk2 : Acpi(HWP0002,PNP0A03,0)/Pci(2|1)/Usb(0, 0)/CDROM(Entry1)
blk3 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E012691EE2,Lun0)
blk4 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E012691EE2,Lun0)/HD(Part1,SigF0B58DCE-4E59-4FC7-8299-A74E825F5C68)
blk5 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E012691EE2,Lun0)/HD(Part2,SigF917D08F-D111-4F0C-B801-F275360DF951)
blk6 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01120D402,Lun0)
blk7 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01120D402,Lun0)/HD(Part1,Sig86C72286-8F79-11DB-8002-D6217B60E588)
blk8 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01120D402,Lun0)/HD(Part2,Sig86C722AE-8F79-11DB-8003-D6217B60E588)
blk9 : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01120D402,Lun0)/HD(Part3,Sig86C722E0-8F79-11DB-8004-D6217B60E588)
blkA : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01264C262,Lun0)
blkB : Acpi(HWP0002,PNP0A03,400)/Pci(1|0)/Sas(Addr5000000E01264C262,Lun0)/HD(Part1,SigADC7E6BA-B196-11DB-8002-D6217B60E588)
```

A.type fs0: (this will move the focus to the CDROM file system)

B.type map -r (then the CDROM file system will show up)

C.type cdrom: (this will go directly to what is on the CDROM)

D.type fs4: (fs3 is the last file system listed, so the CDROM file system must be the next one)

Correct Answers: B

3: After pressing the doorbell (attention) button during the replacement of a hotplug PCI-X card, when can you physically replace the card?

A.immediately

B.after the double beep


C.after closing the Module Release Lock (MRL)

D.when the power LED goes from blinking to steady off

Correct Answers: D


4: Click the Task button. You must install a single processor on an Integrity rx4640 server. Click on the front-side processor socket that should be populated first.

Select the processor socket that should be populated first. Click the Done button when finished.

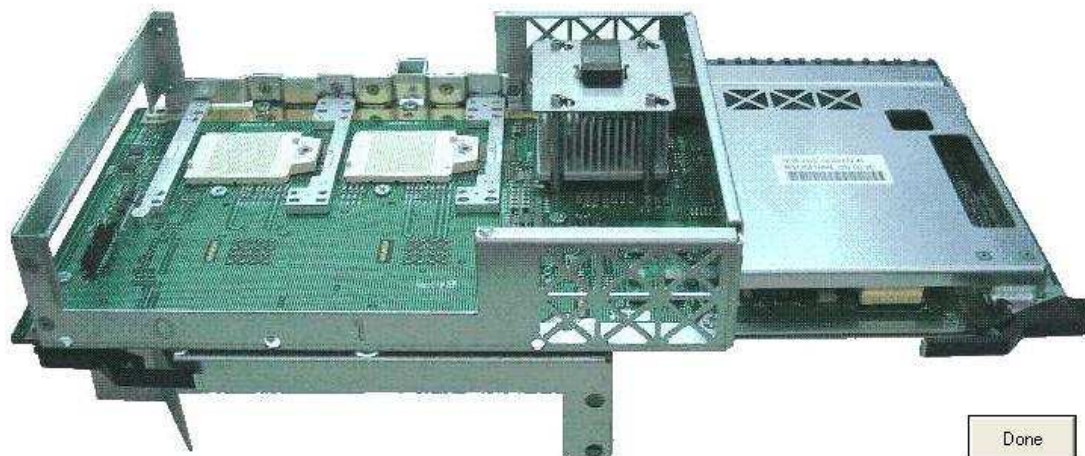

Correct Answers:

Select the processor socket that should be populated first. Click the Done button when finished.

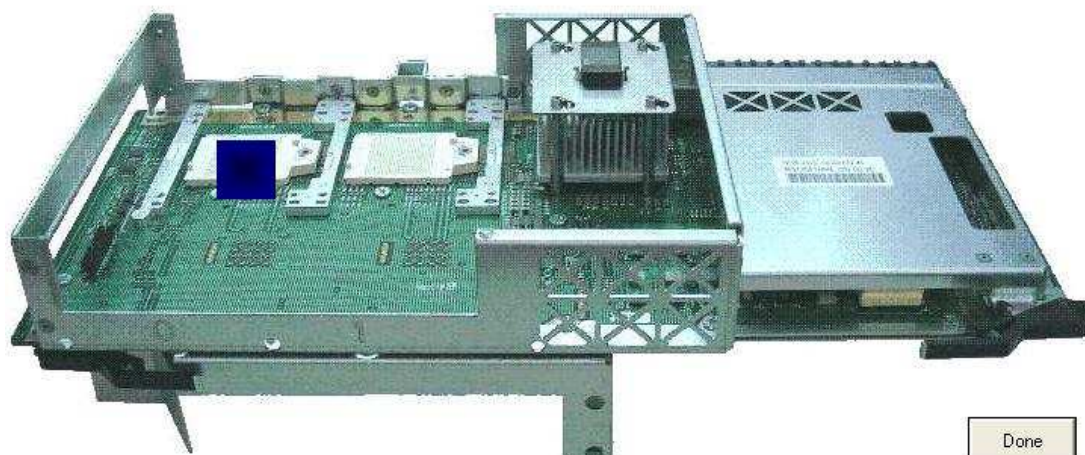

5: Your customer has an HP Integrity rx3600 system that boots up every time power is re-applied. Which MP command is used to disable this function?

- A.PC
- B.PR
- C.PS
- D.TC

Correct Answers: B

6: How are the default console input and output settings changed in the EFI?

- A.Enter the EFI shell and enter the FS1:command.
- B.Use the EFI menus to go to boot configuration.
- C.Use the EFI menus to go to system configuration.
- D.Edit the EFI configuration in hyperterminal settings on the console.

Correct Answers: B

7: After replacing a QLogic Fibre Channel Adapter in an rx6600 server, all three LEDs on the Adapter blink two times, pause, and then blink two times again. What must be done to resolve this issue?

- A.Update driver in OS.
- B.Exchange the DOA Adapter.
- C.Update firmware on the Adapter.
- D.Check the Fibre cable connection.

Correct Answers: C

8: You have been sent to a customer site to exchange a failed disk drive on an HP Integrity rx6600 server. After you pull out the failed disk drive you recognize that the replacement part is not the correct part. What is the recommended action in this situation?

- A.leave the slot empty
- B.reseat the failed disk drive
- C.continue with the replacement
- D.put a disk drive slot cover in the empty slot

Correct Answers: D

9: What is Intel's implementation of the operating system and platform-independent boot and pre-boot interface for HP Integrity servers?

- A.EFI
- B.BCH
- C.BMC
- D.POSSE

Correct Answers: A

10: What are valid power states for the HP Integrity rx4640 server? (Select three.)

- A.Off
- B.Limited

C.Full power

D.Powersave

E.Always On

F.Standby power

Correct Answers: A C F