

CPLD CONTROL TOOL SPECIFICATION

User's Manual: Software

M3/H3/V3M/V3H Starter Kit
V3U Falcon
S4 Spider

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

CONFIDENTIAL

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

CONFIDENTIAL

Trademark

- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.
- Windows and Windows Media are registered trademarks of Microsoft Corporation in the United States and other countries.
- Other company names and product names mentioned herein are registered trademarks or trademarks of their respective owners.
- Registered trademark and trademark symbols (® and ™) are omitted in this document

CONFIDENTIAL

How to Use This Manual

- **[Readers]**

This manual is intended for engineers who want to automate the development on R-Car M3/H3/V3M/V3H Starter Kit and V3U Falcon board.

- **[Purpose]**

This manual is intended to give users an understanding of the functions of the CPLD control tool and to serve as a reference for developing other automation systems later.

- **[How to Read This Manual]**

It is assumed that the readers of this manual have general knowledge in the fields of electrical

— Engineering, logic circuits, microcontrollers, and Linux.

→ Read this manual in the order of the CONTENTS.

— To know the electrical specifications of R-Car M3/H3/V3M/V3H Starter Kit and V3U Falcon.

→ See the R-Car M3/H3/V3M/V3H Starter Kit and V3U Falcon Schematic and Hardware Manual.

- **[Conventions]**

The following symbols are used in this manual.

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with Note in the text

Caution: Information requiring particular attention

Remark: Supplementary information

Numeric representation: Binary ... xxxx, 0bxxxx, or xxxxB

Decimal ... xxxx

Hexadecimal ... 0xxxxx or xxxxH

Data type: Double word ... 64 bits

Word ... 32 bits

Half word ... 16 bits

Byte ... 8 bits

CONFIDENTIAL

Table of Contents

1. Overview	1
1.1 Overview	1
1.2 Function	1
1.3 Reference	1
1.3.1 Related Documents	1
1.4 Notice	2
1.5 Terminology	2
2. Operating Environment	3
2.1 Hardware Environment	3
2.2 Flowchart	4
3. Command Specification	5
3.1 CPLD help command	5
3.1.1 Synopsis	5
3.1.2 Description	5
3.1.3 Command option	5
3.1.4 Notice	5
3.2 CPLD list command	5
3.2.1 Synopsis	5
3.2.2 Description	5
3.2.3 Command option	5
3.2.4 Notice	5
3.3 CPLD change serial command	6
3.3.1 Synopsis	6
3.3.2 Description	6
3.3.3 Command option	6
3.3.4 Notice	6
3.4 CPLD read command	7
3.4.1 Synopsis	7
3.4.2 Description	7
3.4.3 Command option	7
3.4.4 Notice	7
3.5 CPLD write command	8
3.5.1 Synopsis	8
3.5.2 Description	8
3.5.3 Command option	8
3.5.4 Notice	8
3.6 CPLD write non-volatile command	9
3.6.1 Synopsis	9
3.6.2 Description	9
3.6.3 Command option	9
3.6.4 Notice	9
4. Integration	10
4.1 Folder Structure	10
4.2 Hardware Connection	11
4.3 Installation Procedure	12
4.3.1 Dependency software, library	12
4.3.2 CPLD control tool	17

CONFIDENTIAL

5. Sample log 18

1. Overview

1.1 Overview

This specification describes the simplified CPLD control tool (hereinafter, this tool) functions for R-Car M3/H3/V3M/V3H Starter Kit, V3U Falcon and S4 Spider. This tool works on Linux environment.

1.2 Function

This tool supports the reading/writing matter of CPLD registers, based on that, users can control the target board in many functions: resetting, SoC boot mode configuration, LPDDR4 frequency, on-board peripheral configuration, etc...

1.3 Reference

1.3.1 Related Documents

The following table shows the document related to this module.

Table 1-1 Related document

Number	Issue	Title
-	Renesas Electronics	R-Car M3/H3/V3M/V3H Starter Kit/S4 Spider User's Manual
-	Renesas Electronics	R-CarH3-SiP System Evaluation Board Salvator-X Hardware Manual RTP0RC7795SIPB0010S
-	Renesas Electronics	R-CarM3-SiP System Evaluation Board Salvator-X Hardware Manual RTP0RC7796SIPB0011S
-	Renesas Electronics	R-CarV3U-SiP System Evaluation Board Falcon Hardware Manual
-	Renesas Electronics	R-CarS4-SiP System Evaluation Board Spider Hardware Manual

1.4 Notice

- This tool was only tested on M3/H3 Starter Kit and one-passed tested for V3M/V3H Starter Kit and V3U Falcon. The detail testing will be conducted when more devices are available.
- Make sure that the CPLD firmware version of the devices matches the following table:

Table 1-2 CPLD firmware version

Board name	Version date (yyyy/mm/dd)
M3/H3 Starter Kit	2019/04/08
V3M Starter Kit	2020/08/18
V3H Starter Kit	2021/06/14
V3U Falcon	2021/05/18
S4 Spider	2020/07/21

- Privilege for USB access: since this tool will access to USB devices on Linux system, users need root permission to execute it successfully, users can select either one of two methods:
 - o Run the tool with sudo command.
 - o Configure Ubuntu Linux to allow a particular user can run the tool without sudo command:
 1. Add the user to group dialout:


```
$sudo usermod -aG dialout $USER
```
 2. Create file "/etc/udev/rules.d/10-cpld-control.rules" (need to run as root permission) with content as below:


```
ATTRS{idProduct}=="6001", ATTRS{idVendor}=="0403", MODE="660", GROUP="dialout"
ATTRS{idProduct}=="6010", ATTRS{idVendor}=="0403", MODE="660", GROUP="dialout"
ATTRS{idProduct}=="6011", ATTRS{idVendor}=="0403", MODE="660", GROUP="dialout"
ATTRS{idProduct}=="6014", ATTRS{idVendor}=="0403", MODE="660", GROUP="dialout"
```
 3. Reload udev rules:


```
$sudo udevadm control --reload
$sudo udevadm trigger
```

1.5 Terminology

The following table shows the terminology related to this module.

Table 1-3 Terminology

Terms	Explanation
CPLD	Complex Programmable Logic Device
SPI	Serial Peripheral Interface
SMI	Serial Management Interface
I ² C	Inter-Integrated Circuit
MPSSE	Multi-Protocol Synchronous Serial Engine
FTDI	Future Technology Devices International, is a Scottish privately held semiconductor device company, specializing in Universal Serial Bus (USB) technology

2. Operating Environment

2.1 Hardware Environment

The following table lists the hardware needed to use this module.

Table 2-1 Hardware specification

Name	Version	Manufacture
The above-mentioned R-Car boards	-	Renesas Electronics
Ubuntu PC (x86/x64) or FEAT box (ARM/ARM64) or another Linux device	-	-

Module Configuration

Figure 2-1 shows the software configuration in which this module is used.

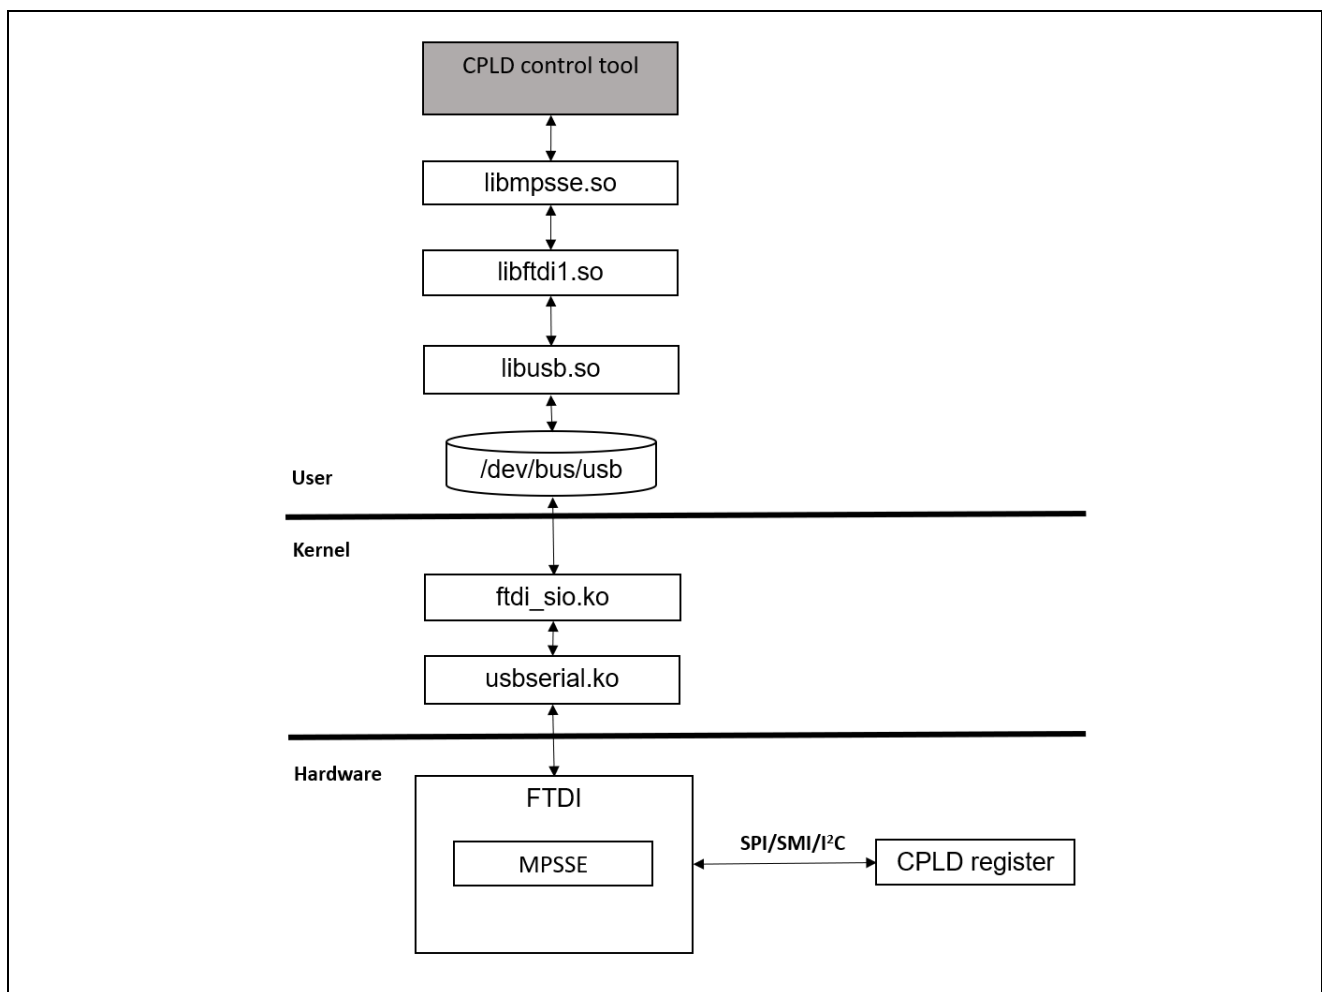


Figure 2-1 Software block diagram

(*) SPI protocol is used for H3/M3 Starter Kit, SMI protocol is used for V3M Starter Kit and I²C protocol is used for V3U Falcon/V3H Starter Kit/S4 Spider

2.2 Flowchart

This section describes the basic sequences of the simplified version of CPLD control tool

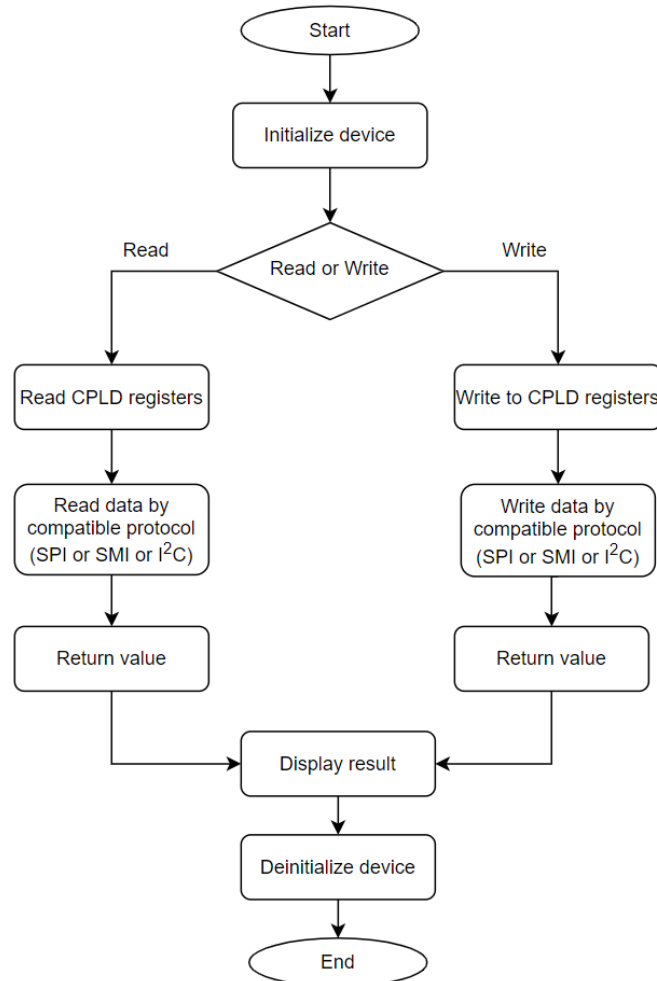


Figure 2-2 Flowchart of CPLD control tool

Notice:

- Users need to send the address of CPLD register as input parameter. The CPLD registers are described in the document mentioned in chapter 1.3.1 Related Documents.
- The communication protocol is implemented by software, depends on which board is using, the tool will select the suitable protocol automatically.

3. Command Specification

This chapter describes the command specifications of CPLD control tool. Beside the two essential commands are reading and writing CPLD register, there are also some additional commands for supporting purpose.

3.1 CPLD help command

A common help option

3.1.1 Synopsis

```
# cpld-control -h
```

3.1.2 Description

Display a simple description for all the supported commands and their syntax.

3.1.3 Command option

-h: option “Help”

3.1.4 Notice

None

3.2 CPLD list command

List all the available devices

3.2.1 Synopsis

```
# cpld-control -l
```

3.2.2 Description

This command is used to list all the available FTDI devices which are plugged in. Because a board controller can control many boards via CPLD, we need know the FTDI device serial number of each board to avoid the wrong destination mistake.

3.2.3 Command option

-l: option “List”

3.2.4 Notice

- This command will access USB devices on Linux system, users need Privilege for USB access. Please refer to chapter 1.4 Notice for the detail
- This function searches the FTDI device based on the Vendor ID and the Product ID. If there are many boards using the same FTDI devices are plugged in at the same time, they will still be listed sufficiently.

3.3 CPLD change serial command

Change the serial number or FTDI device.

3.3.1 Synopsis

```
# cpld-control -c <Board name> <Old FTDI serial number> <New FTDI serial number>
```

3.3.2 Description

This command is used to change the serial number of FTDI device on the boards. Users are recommended to change the default serial number to their expected number.

3.3.3 Command option

-c: option “Change serial number”

<Board name>: The name of the using board.

M3SK: M3 Starter Kit

H3SK: H3 Starter Kit

V3MSK: V3M Starter Kit

V3HSK: V3H Starter Kit

V3U: V3U Falcon

S4: S4 Spider

Example:

Change serial number of board V3U from 000001 to 000040:

```
$sudo ./cpld-control -c V3U 000001 000040
```

3.3.4 Notice

- The serial number can be alphabet, digit or special character and should not have whitespace character.
- This command will access to USB devices on Linux system, users need Privilege for USB access. Please refer to chapter 1.4 Notice for the detail.
- The serial number should be set to a unique number for each board to avoid the wrong destination mistake.
- If there are many boards having the same serial number are plugged in at the same time, the command will change only one of them.

3.4 CPLD read command

Read the specific CPLD registers or all registers.

3.4.1 Synopsis

```
# cpld-control -r <Board name> <FTDI serial> <register1> <register2> <register3>...
```

3.4.2 Description

This command is used to read the register value of CPLD. It can be used to read a specific register or all registers of CPLD. Users must specify FTDI serial number they are using and the address of the registers they want to read.

3.4.3 Command option

-r: option "Read"

<Board name>: The name of the using board.

M3SK: M3 Starter Kit

H3SK: H3 Starter Kit

V3MSK: V3M Starter Kit

V3HSK: V3H Starter Kit

V3U: V3U Falcon

S4: S4 Spider

<FTDI serial>: the serial number of the FTDI chip is being used. It can be acquired by the CPLD list command.

<register1> <register2> <register3>...: the register addresses. No register address means users want to read all of them.

Example:

Read all V3U (serial 000001) CPLD registers value:

```
$sudo ./cpld-control -r V3U 000001
```

Read V3U (serial 000001) CPLD Dip switch 50 register value:

```
$sudo ./cpld-control -r V3U 000001 0x0020
```

3.4.4 Notice

- The register addresses must be in hexadecimal values and must not exceed 64bits.
- This command will access to USB devices on Linux system, users need Privilege for USB access. Please refer to chapter 1.4 Notice for the detail.
- In case users want to interact with many boards, they need to make sure each board have the unique FDTI serial number. Article 3.3 CPLD change serial command can be the help.
- If users specify an invalid address, the tool will return error and stop.

3.5 CPLD write command

Write the desired values to the specific registers

3.5.1 Synopsis

```
# cpld-control -w <Board name> <FTDI serial> <register1> <value1> <register2> <value2> <register3> <value3>...
```

3.5.2 Description

This command is used to write the desired value to the specific registers of CPLD. It can be used to write to a specific register or many registers of CPLD. Users must specify FTDI serial number they are using and the address of the registers they want to write to.

3.5.3 Command option

-w: option "Write"

<Board name>: The name of the using board.

M3SK: M3 Starter Kit

H3SK: H3 Starter Kit

V3MSK: V3M Starter Kit

V3HSK: V3H Starter Kit

V3U: V3U Falcon

S4: S4 Spider

<FTDI serial>: the serial number of the FTDI chip is being used. It can be acquired by the CPLD list command.

<register1> <register2> <register3>...: the registers addresses.

<value1> <value2> <value3>...: the desired values.

Example:

Write the value 0x01 to V3U (serial 000001) CPLD register address 0x0024 to reset V3U board:

```
$sudo ./cpld-control -w V3U 000001 0x0024 0x01
```

3.5.4 Notice

- The register addresses and values must be in hexadecimal values and must not exceed 64bits.
- This command will access to USB devices on Linux system, users need Privilege for USB access. Please refer to chapter 1.4 Notice for the detail.
- In case users want to interact with many boards, they need to make sure each board have the unique FDTI serial number. Article 3.3 CPLD change serial command can be the help.
- If users specify an invalid address, the tool will return error and stop.
- If users specify an overflow value of the register, it will be truncated and the least significant bit will be considered as the value. For example: the register I2C address on CPLD of V3U (address 0x0022) is an 8-bit register. If users specify a 9-bit value (0x1FF) for it, then the written value is truncated (0xFF).

3.6 CPLD write non-volatile command

Write the desired values to the specific registers

3.6.1 Synopsis

```
# cpld-control -wnv <Board name> <FTDI serial> <register1> <value1> <register2> <value2> <register3>
<value3>...
```

3.6.2 Description

This command is used to write the desired value to the specific registers of CPLD and the value will be kept after power cycle. It can be used to write to a specific register or many registers of CPLD. Users must specify FTDI serial number they are using and the address of the registers they want to write to.

This function is only supported by V3M/V3H Starter Kit, V3U Falcon and S4 Spider

There is only an amount of registers that can be written non-volatile and the amount is also different in each board.

3.6.3 Command option

-wnv: option "Write non-volatile"

<Board name>: The name of the using board.

V3MSK: V3M Starter Kit

V3HSK: V3H Starter Kit

V3U: V3U Falcon

S4: S4 Spider

<FTDI serial>: the serial number of the FTDI chip is being used. It can be acquired by the CPLD list command.

<register1> <register2> <register3>...: the registers addresses.

<value1> <value2> <value3>...: the desired values.

Example:

Write the value 0x0100 to V3U (serial 000001) CPLD register address 0x1000 to save the PCB version (1.0)

```
$sudo ./cpld-control -wnv V3U 000001 0x1000 0x0100
```

3.6.4 Notice

- The register addresses and values must be in hexadecimal values and must not exceed 64bits.
- This command will access to USB devices on Linux system, users need Privilege for USB access. Please refer to chapter 1.4 Notice for the detail.
- In case users want to interact with many boards, they need to make sure each board have the unique FTDI serial number. Article 3.3 CPLD change serial command can be the help.
- If users specify an invalid address, the tool will return error and stop.
- If users specify an overflow value of the register, it will be truncated, and the least significant bit will be considered as the value. For example: the register PCB version on CPLD of V3U (address 0x1000) is a 16-bit register. If users specify a 17-bit value (0x12345) for it, then the written value is truncated (0x2345)

4.Integration

4.1 Folder Structure

The CPLD control tool directory configuration is shown below.

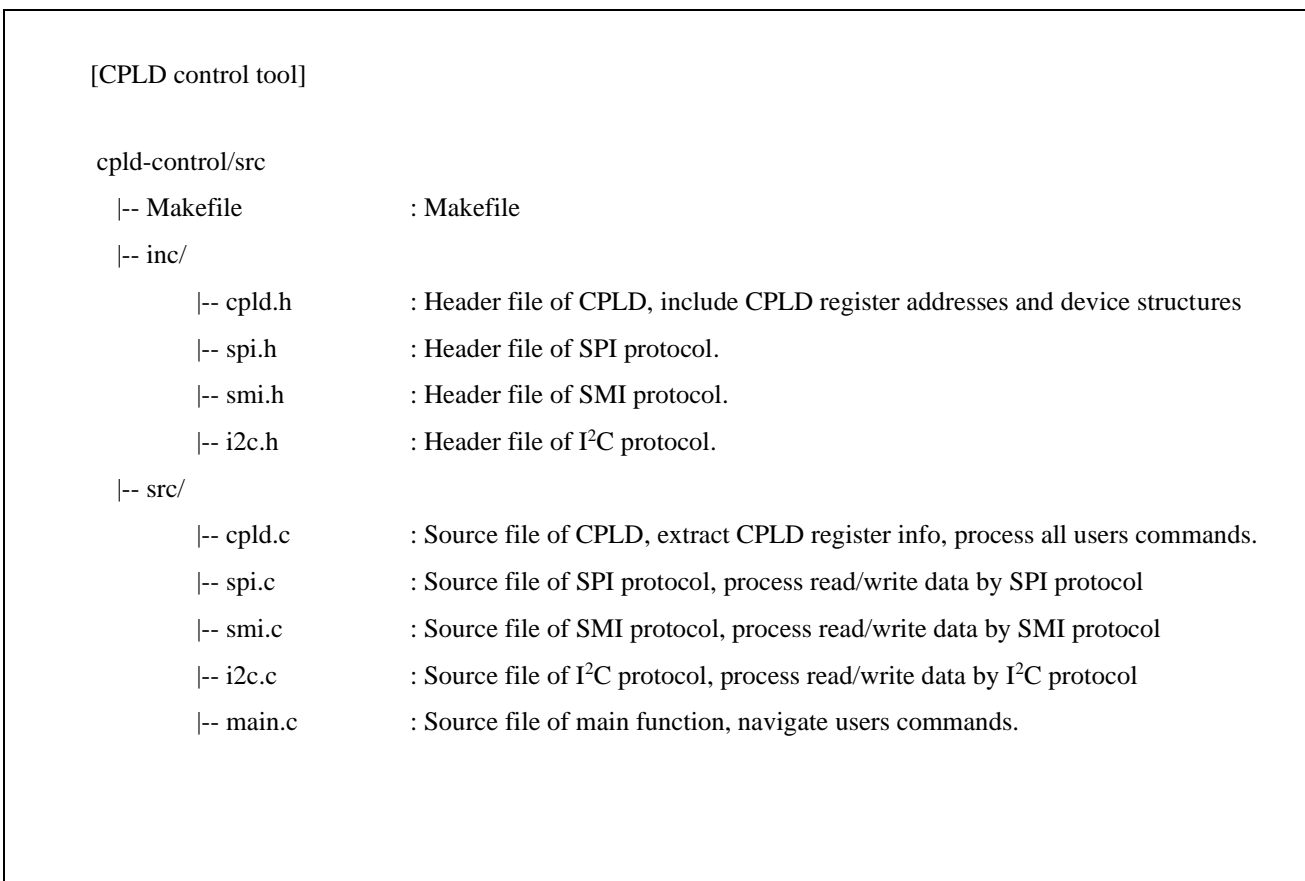


Figure 4-1 Folder structure (R-Car M3/H3/V3M/V3H Starter Kit, V3U Falcon, S4 Spider)

4.2 Hardware Connection

The CPLD tool can be compiled and executed on any Linux device (PC, FEAT box, etc...) and control target board via USB Serial interface.

The below figure shows an example of hardware layout on V3U Falcon board. It's similar to M3/H3/V3M/V3H Starter Kit/S4 Spider.

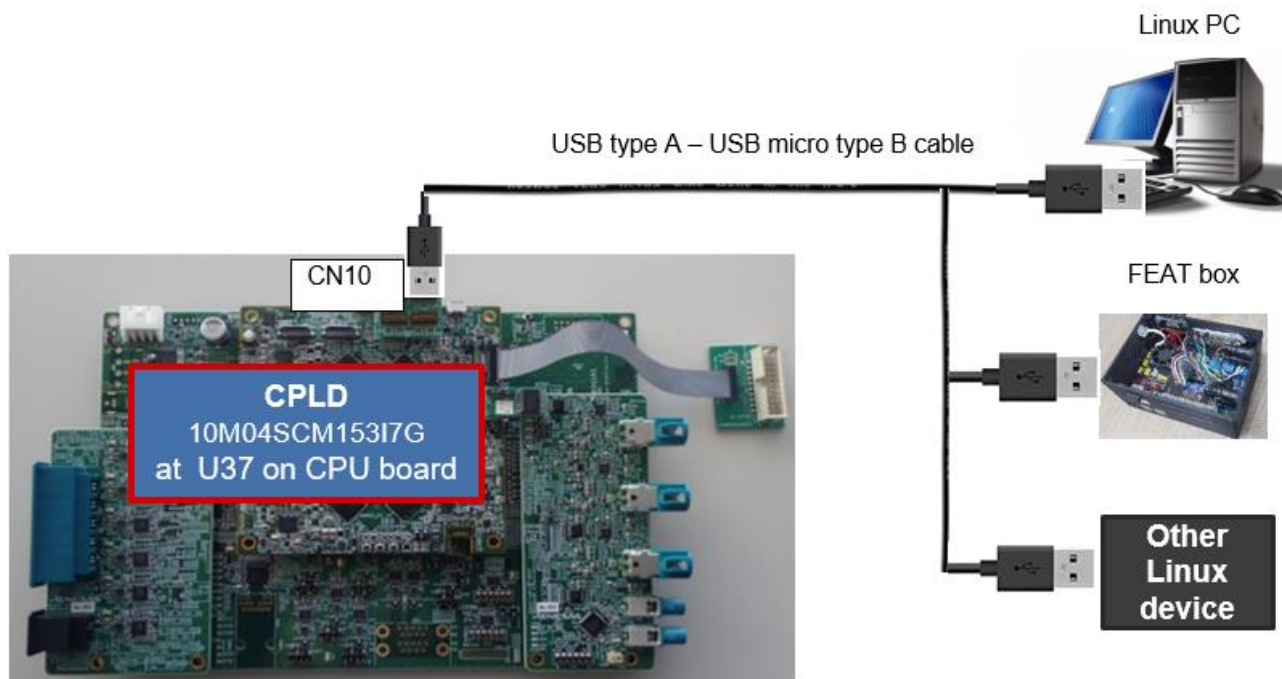


Figure 4-2 Hardware connection layout on V3U Falcon

4.3 Installation Procedure

4.3.1 Dependency software, library

- **libusb-1.0.23**

(1) The libusb-1.0.23 can be download from this repository:

<https://github.com/libusb/libusb/releases/download/v1.0.23/libusb-1.0.23.tar.bz2>

(*) Make sure that the libudev-dev is installed or udev usage is disabled by option --enable-udev

(2) Set the path (environment variable) to the compiler

```
$ export CC=/(Specify the path to the compiler to use)
```

Example

```
$ CC=gcc
```

(3) Run the build

```
$/configure
```

Or

```
$/configure --enable-udev=no (to disable udev usage)
```

```
$ make
```

```
$ make install
```

- **libconfuse-2.5**

(1) The libconfuse-2.5 can be download from this repository:

<https://www.intra2net.com/en/developer/libftdi/download/confuse-2.5.tar.gz>

(2) Set the path (environment variable) to the compiler

```
$ export CC=/(Specify the path to the compiler to use)
```

Example

```
$ CC=gcc
```

(3) Run the build

```
$/configure
```

```
$ make
```

```
$ make install
```

(4) Notice

When facing an issue with script config.guess as below

```
Checking build system type... support/config.guess: unable to guess system type
```

```
This script, last modified 2004-03-12, has failed to recognize the operating system you are using. It is  
advised that you download the most up to date version of the config scripts from
```

Users can copy the guess script in their environment to this build folder by the command:

```
$ cp /usr/share/misc/config.guess support/config.guess
```

Then retry the step (3)

- **libftdi1-1.5**

(*) Make sure that all dependencies, especially libusb-1.0.23 and libconfuse-2.5 is already installed.

(1) The libftdi1 can be download from this repository:

<https://www.intra2net.com/en/developer/libftdi/download/libftdi1-1.5.tar.bz2>

(2) Set the path (environment variable) to the compiler

```
$ export CC=/(Specify the path to the compiler to use)
```

Example

```
$ CC=gcc
```

(3) Run the build

```
$ cd libftdi1-1.5/
```

```
$ mkdir build
```

```
$ cd build
```

```
$ cmake ..
```

```
$ make
```

```
$ make install
```

- **libmpsse-1.3**

(*) Make sure that all dependencies, especially libftdi1-1.5 is already installed.

(*) Make sure that swig (<http://www.swig.org/download.html>) is installed or disable python usage by option --disable-python

(1) The libmpsse-1.3 can be download from this repository:

<https://storage.googleapis.com/google-code-archive-downloads/v2/code.google.com/libmpsse/libmpsse-1.3.tar.gz>

(2) Set the path (environment variable) to the compiler

```
$ export CC=/(Specify the path to the compiler to use)
```

Example

```
$ CC=gcc
```

(3) Run configure file

```
$ cd src/
```

```
$/configure
```

Or

```
$/configure --disable-python (to disable python usage)
```

(4) Edit Makefile and build

Add “-DLIBFTDI1=1” to Makefile of MPSSE line #32 to prevent error using old version of libftdi (libftdi-0.x)

```
$vi Makefile
```

Add (CC) \$(CFLAGS) \$(LDFLAGS) **-DLIBFTDI1=1** -c fast.c to line #32 and save.

```
$ make
```

```
$ make install
```

NOTE: After compiling and installing all new shared libraries, command “ldconfig” should be executed to create a necessary links and cache to them

- **ftdi_sio and usbserial driver**

Most Linux distro with kernel version at least 2.4.3 will include these drivers by default.

Users can check to see if the driver is loaded:

```
$dmesg | grep -i ftdi
```

And they should see something like:

```
usb 1-11: Manufacturer: FTDI
ftdi_sio 1-11:1.0: FTDI USB Serial Device converter detected
usb 1-11: FTDI USB Serial Device converter now attached to ttyUSB0
```

If the device is not recognized by the kernel. Please troubleshoot and then try to manually load it.

For more information, you can read the summary about ftdi_sio and usbserial driver on <http://ftdi-usb-sio.sourceforge.net/>

4.3.2 CPLD control tool

(1) Set the path (environment variable) to the compiler

```
$ export CC=/(Specify the path to the compiler to use)
```

Example

```
$ CC=gcc
```

(2) Run the build

```
$ cd source
```

```
$ make clean
```

```
$ make
```

If the build is successful, the binary file named “cpld-control” will be generated.

5. Sample log

The display sample on V3U Falcon of this tool is shown below.

```
$sudo ./cpld-control -h
CPLD control version 1.7

The valid <Board name>: M3SK, H3SK, V3HSK, V3MSK, V3U, S4

./cpld-control -h ..... Print this help.
./cpld-control -l ..... List available devices.
./cpld-control -c <Board name> <Old serial number> <New serial number>... Change FTDI serial number
./cpld-control -r <Board name> <FTDI iSerial> ..... Print all CPLD registers.
./cpld-control -r <Board name> <FTDI iSerial> <reg>* ..... Print 1 CPLD register.
                        *One or more <reg> can be specified.
./cpld-control -w <Board name> <FTDI iSerial> [<reg> <val>]* ..... Write CPLD register(s).
                        *One or more [<reg> <val>] pairs can be specified.
./cpld-control -wnv <Board name> <FTDI iSerial> [<reg> <val>]* ..... Write non-volatile CPLD register(s).
                        *One or more [<reg> <val>] pairs can be specified.

$ sudo ./cpld-control -l
FT232R: 0861
FT2232: 40

$ sudo ./cpld-control -c V3U 40 000040
Using device V3U with iSerial: 40

Serial number has been changed, please run cpld-control -l to re-check!

$ sudo ./cpld-control -l
FT232R: 0861
FT2232: 000040

$ sudo ./cpld-control -r V3U 000040
Using device V3U with iSerial: 000040

PRODUCT      0x0000: 0xB8A779A0
VERSION      0x0004: 0x20200728
MODE_SET     0x0008: 0x000000000006100A8
MODE_NEXT    0x0010: 0x000000000006100A8
MODE_LAST    0x0018: 0x000000000006100A8
DIPSW50      0x0020: 0xD4
I2C_ADDR     0x0022: 0xE0
```



```

RESET      0x0024: 0x40
POWER_CFG  0x0025: 0x01
PERI_CFG   0x0030: 0x08
UART_CFG   0x0036: 0x00
UART_STATUS 0x0037: 0x00
CNT_POWER  0x0080: 0x00000000
CNT_RESET  0x0084: 0x00000000
PCB_VERSION 0x1000: 0x0000
SOC_VERSION 0x1002: 0x0000
PCB_SN      0x1004: 0xFFFFFFFF
MAC         0x1008: 0xFFFFFFFFFFFFFF

```

```
$ sudo ./cpld-control -w V3U 000040 0x0008 0x00010000006100BE 0x0024 0x01
```

```
Using device V3U with iSerial: 000040
```

```
Writing register 0x0008 with value 0x00010000006100BE
```

```
Writing register 0x0024 with value 0x01
```

```

PRODUCT      0x0000: 0xB8A779A0
VERSION      0x0004: 0x20200728
MODE_SET      0x0008: 0x00010000006100BE
MODE_NEXT     0x0010: 0x00010000006100BE
MODE_LAST     0x0018: 0x00010000006100BE
DIPSW50      0x0020: 0xD4
I2C_ADDR     0x0022: 0xE0
RESET        0x0024: 0x40
POWER_CFG    0x0025: 0x01
PERI_CFG     0x0030: 0x08
UART_CFG     0x0036: 0x00
UART_STATUS  0x0037: 0x00
CNT_POWER    0x0080: 0x00000000
CNT_RESET    0x0084: 0x00000000
PCB_VERSION  0x1000: 0x0000
SOC_VERSION  0x1002: 0x0000
PCB_SN       0x1004: 0xFFFFFFFF
MAC          0x1008: 0xFFFFFFFFFFFFFF

```

```
$ sudo ./cpld-control -wnv V3U 000040 0x1002 0x0100
```

```
Using device V3U with iSerial: 000040
```

```
Writing register 0x1002 with value 0x0100
```

```

PRODUCT      0x0000: 0xB8A779A0
VERSION      0x0004: 0x20200728

```

CONFIDENTIAL

CPLD CONTROL TOOL SPECIFICATION

5. Sample log

MODE_SET	0x0008: 0x00010000006100BE
MODE_NEXT	0x0010: 0x00010000006100BE
MODE_LAST	0x0018: 0x00000000006100A8
DIPSW50	0x0020: 0xD4
I2C_ADDR	0x0022: 0xE0
RESET	0x0024: 0x40
POWER_CFG	0x0025: 0x01
PERI_CFG	0x0030: 0x08
UART_CFG	0x0036: 0x00
UART_STATUS	0x0037: 0x00
CNT_POWER	0x0080: 0x00000000
CNT_RESET	0x0084: 0x00000000
PCB_VERSION	0x1000: 0x0000
SOC_VERSION	0x1002: 0x0100
PCB_SN	0x1004: 0xFFFFFFFF
MAC	0x1008: 0xFFFFFFFFFFFF

CONFIDENTIAL

REVISION HISTORY		CPLD CONTROL TOOL SPECIFICATION	
Rev.	Date	Description	
		Page/Article	Summary
1.0	Sep 02, 2020	—	New creation
1.3	Sep 25, 2020	1.4	Remove half-powered USB restriction, already implemented a work-around for it Add udev rule part
		4.3.1	Libconfuse: add method to fix issue config.guess
		5	Update display sample of version 1.3
1.4	Oct 30, 2020	1.4	Add notice about the CPLD firmware version for each board
		4.1	Remove file CPLD_register.txt in folder structure (this info is now in source code)
		4.3.2	Remove the restriction of the stored place of CPLD_register.txt file.
1.5	Dec 02, 2020	—	Add board V3M Starter Kit
		3.6	Add command CPLD write non-volatile
		5	Add new sample log
1.6	July 16, 2021	—	Modify the protocol for V3MSK to SMI
1.7	Aug 04, 2020	—	Add board S4 Spider

CONFIDENTIAL

CPLD CONTROL TOOL SPECIFICATION
User's Manual: Software

Publication Date: Rev.1.7 Aug. 2021

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics Corporation

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

Renesas Electronics America Inc. Milpitas Campus

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.

Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics America Inc. San Jose Campus

6024 Silver Creek Valley Road, San Jose, CA 95138, USA

Tel: +1-408-284-8200, Fax: +1-408-284-2775

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3

Tel: +1-905-237-2004

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany

Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 101-T01, Floor 1, Building 7, Yard No. 7, 8th Street, Shangdi, Haidian District, Beijing 100085, China

Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai 200333, China

Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan

Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, #06-02 Singapore 339949

Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit No 3A-1 Level 3A Tower 8 UOA Business Park, No 1 Jalan Pengaturcara U1/51A, Seksyen U1, 40150 Shah Alam, Selangor, Malaysia

Tel: +60-3-5022-1288, Fax: +60-3-5022-1290

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India

Tel: +91-80-67208700

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea

Tel: +82-2-558-3737, Fax: +82-2-558-5338



ルネサスエレクトロニクス株式会社

■営業お問合せ窓口

<http://www.renesas.com>

※営業お問合せ窓口の住所は変更になることがあります。最新情報につきましては、弊社ホームページをご覧ください。

ルネサス エレクトロニクス株式会社 〒135-0061 東京都江東区豊洲3-2-24（豊洲フォレシア）

■技術的なお問合せおよび資料のご請求は下記へどうぞ。
総合お問合せ窓口：<https://www.renesas.com/contact/>

CPLD CONTROL TOOL SPECIFICATION



Renesas Electronics Corporation