


SPI INTERFACE DEVICES

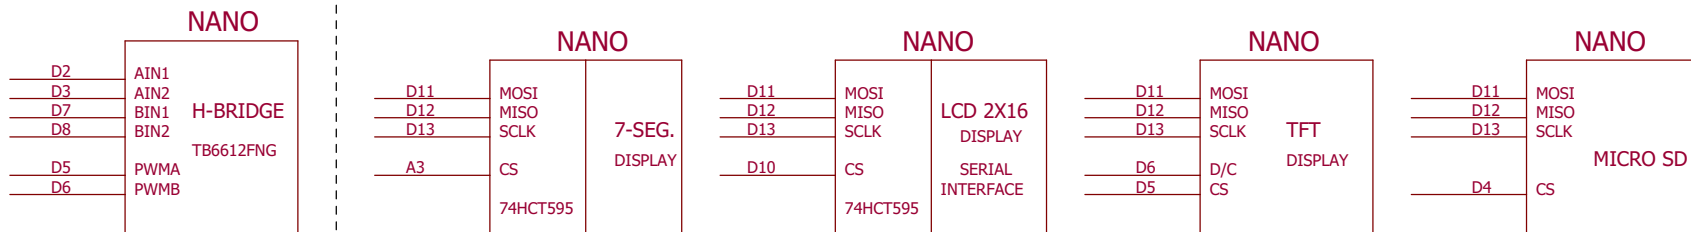

Arduino NANO module lacks I/O pins for the trainer.

So the CS and D/C pins of the TFT display are shared with the PWM1 and PWM2 pins of the H-Bridge.

You can only use either one any time, but not both at the same time.

Do not plug in a TFT display when H-Bridge is used.

Do not connect motors when TFT display is used.