


LOCATION

Engine Room No.1 Junction Block

- ECU-B1 Fuse
- RAD NO.1 Fuse


LHD Models

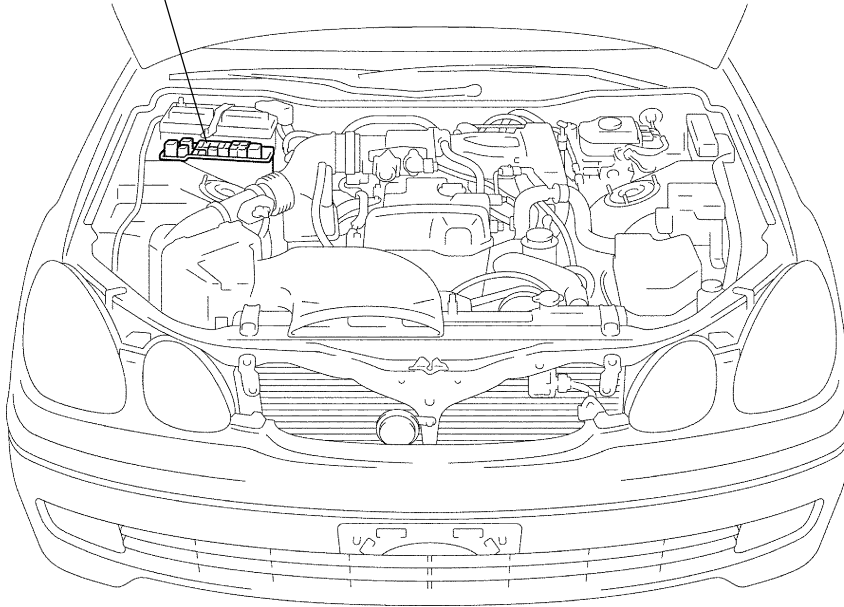


Engine Room No.1 Junction Block

- ECU-B1 Fuse
- RAD NO.1 Fuse

RHD Models

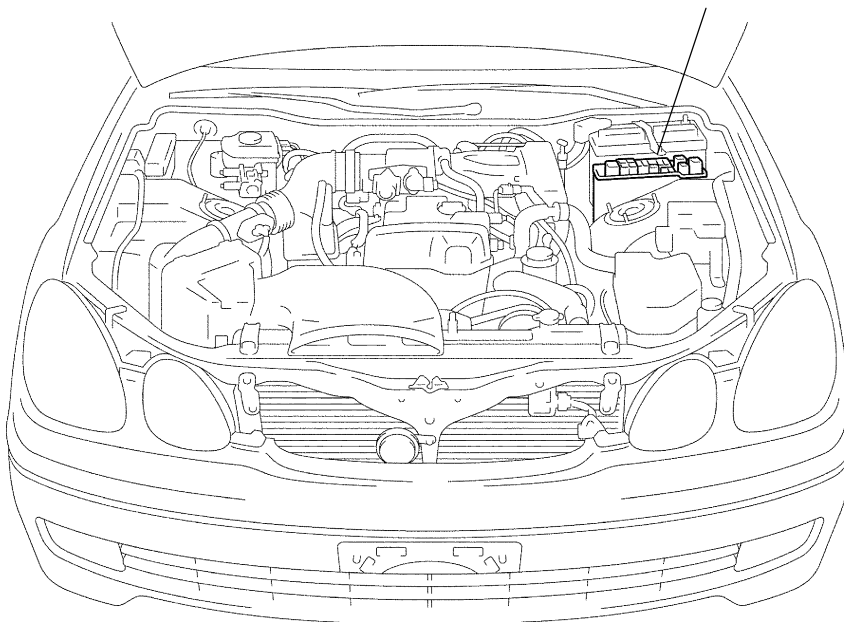

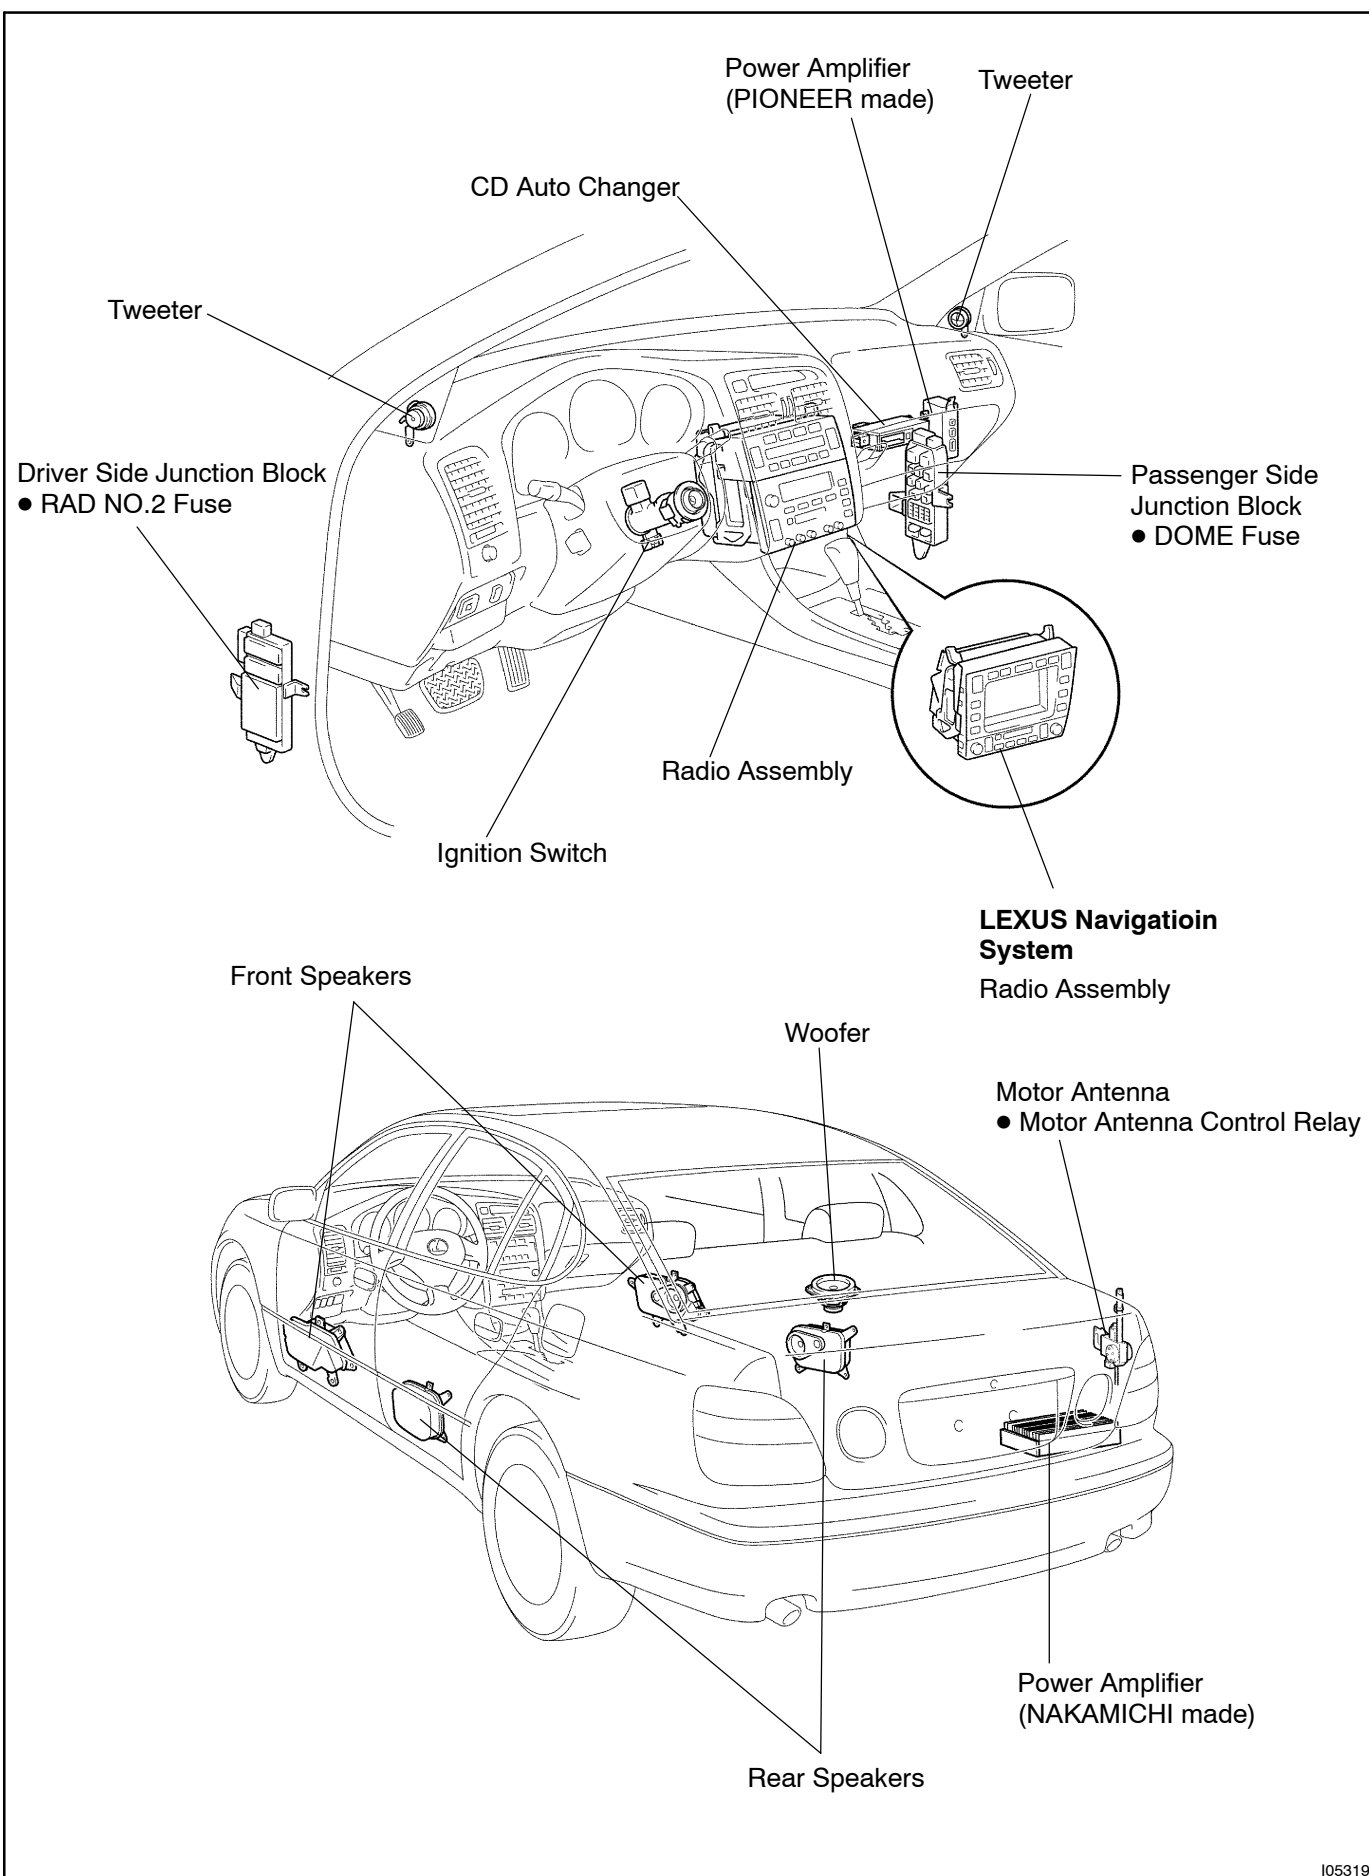

I05319