


BE1YV-01

INTERIOR LIGHT SYSTEM INSPECTION

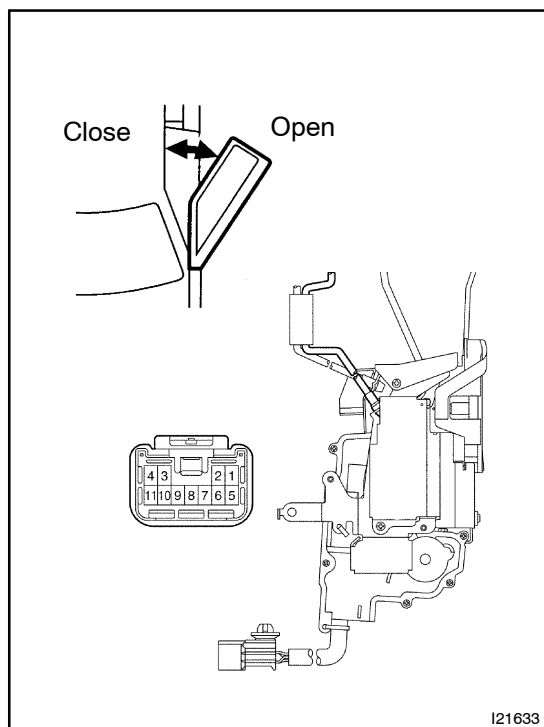

1. w/ Double locking system: INSPECT FRONT DOOR COURTESY SWITCH CONTINUITY


- Connect the connector to the driver door ECU or front passenger door ECU.
- Check that continuity exists between terminals 4 and 11 when door is opened.
- Check that no continuity exists between terminals 4 and 11 when door is closed.

If continuity is not as specified, replace the door lock assembly.

2. w/ Double locking system: INSPECT FRONT DOOR COURTESY SWITCH CIRCUIT

Driver side: (See page DI-646)

Passenger side: (See page DI-680)

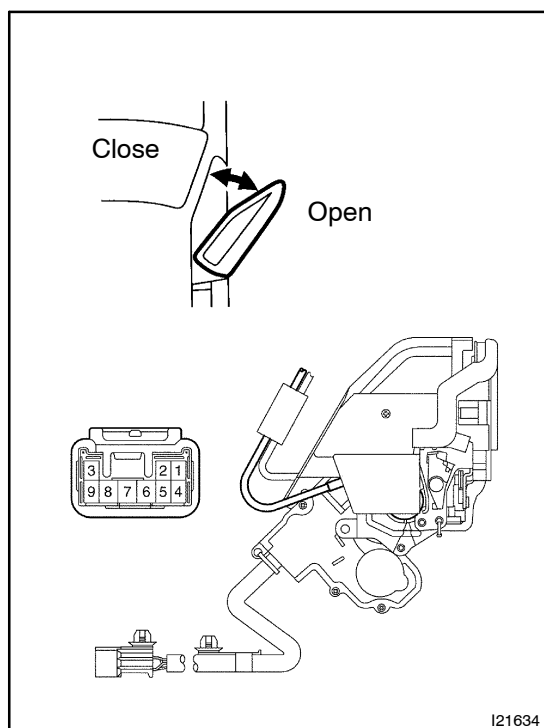

3. w/ Double locking system: INSPECT REAR DOOR COURTESY SWITCH CONTINUITY

- Connect the connector to the rear left door ECU or rear right door ECU.
- Check that continuity exists between terminals 1 and 2 when door is opened.
- Check that no continuity exists between terminals 1 and 2 when door is closed.

If continuity is not as specified, replace the door lock assembly.

4. w/ Double locking system: INSPECT REAR DOOR COURTESY SWITCH CIRCUIT

Rear LH side: (See page DI-704)

Rear RH side: (See page DI-724)