


REMOVAL


1. REMOVE THESE PARTS:

- (a) Luggage compartment floor mat
- (b) Rear floor finish plate
- (c) Luggage compartment trim front cover
- (d) Luggage compartment trim side cover LH

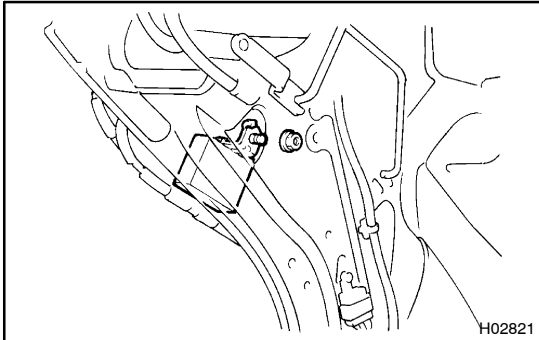


2. REMOVE FUEL LID LOCK ASSEMBLY

- (a) Remove the nut and lamp failure relay, then disconnect the connector.

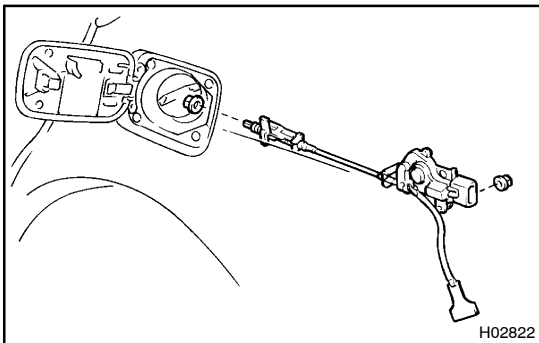

- (b) Remove the nut from the fuel lid side.
- (c) Remove the nut and lock assembly, then disconnect the connector.

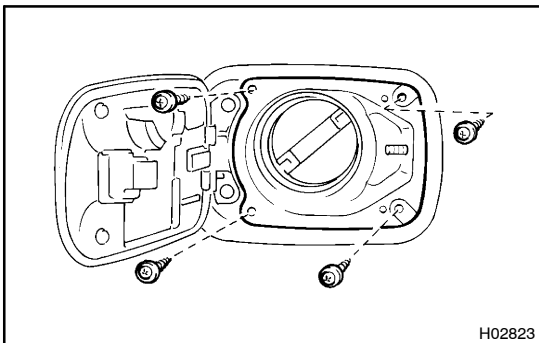


3. REMOVE FUEL TANK FILLER PIPE SHIELD

- (a) Remove the 4 screws.
- (b) Remove the fuel tank cap and shield.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.

- (c) Install the fuel tank cap quickly.

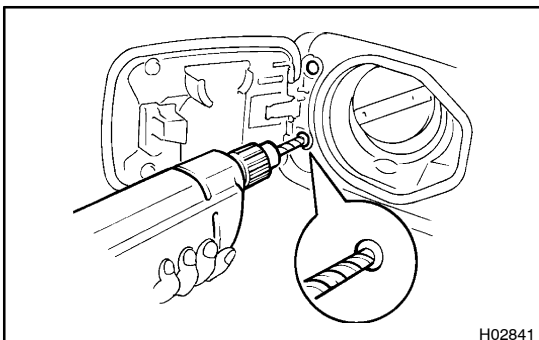

4. REMOVE FUEL FILLER OPENING LID

- (a) Using a drill, drill out the rivet heads.
- (b) Remove the fuel filler opening lid.
- (c) Remove the nut and fuel filler opening lid lock retainer from the opening lid.

5. REMOVE No.3 FUEL TANK FILLER PIPE SHIELD