


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

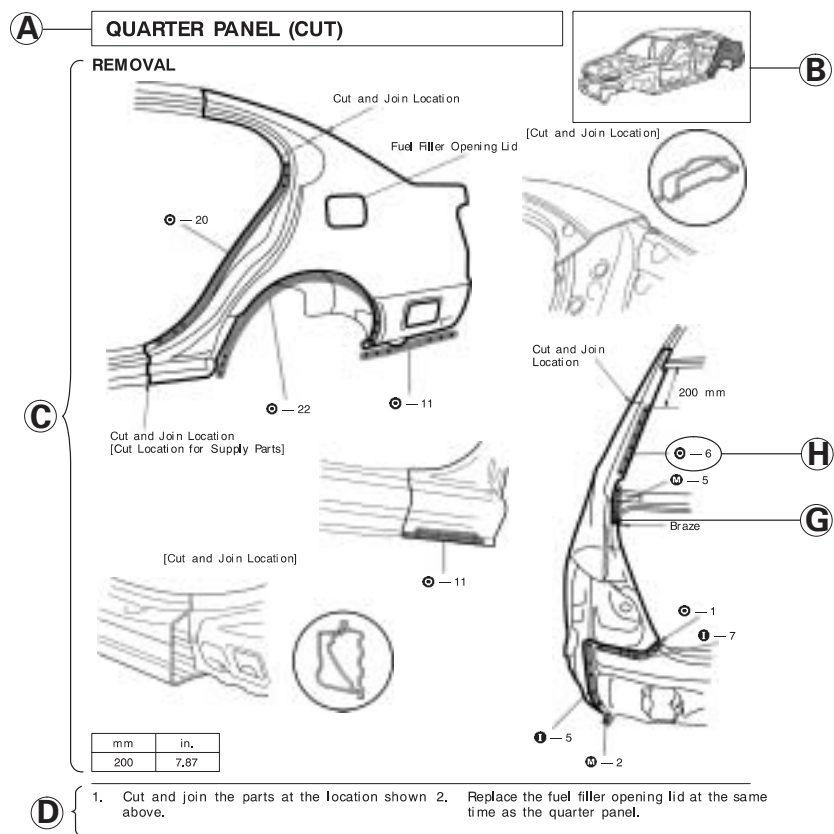

**A** : REPLACEMENT PARTS AND METHOD

QUARTER PANEL (CUT)

- Replacement method
- (ASSY) . . . . Assembly replacement
  - (CUT) . . . . . Major cutting (less than 1/2 of parts used)
  - (CUT-H) . . . . Half cutting (about 1/2 of parts used)
  - (CUT-P) . . . . Partial cutting (most of parts used)
- Replacement Parts


**B** : PARTS LOCATION

**C** : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.

**D** : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

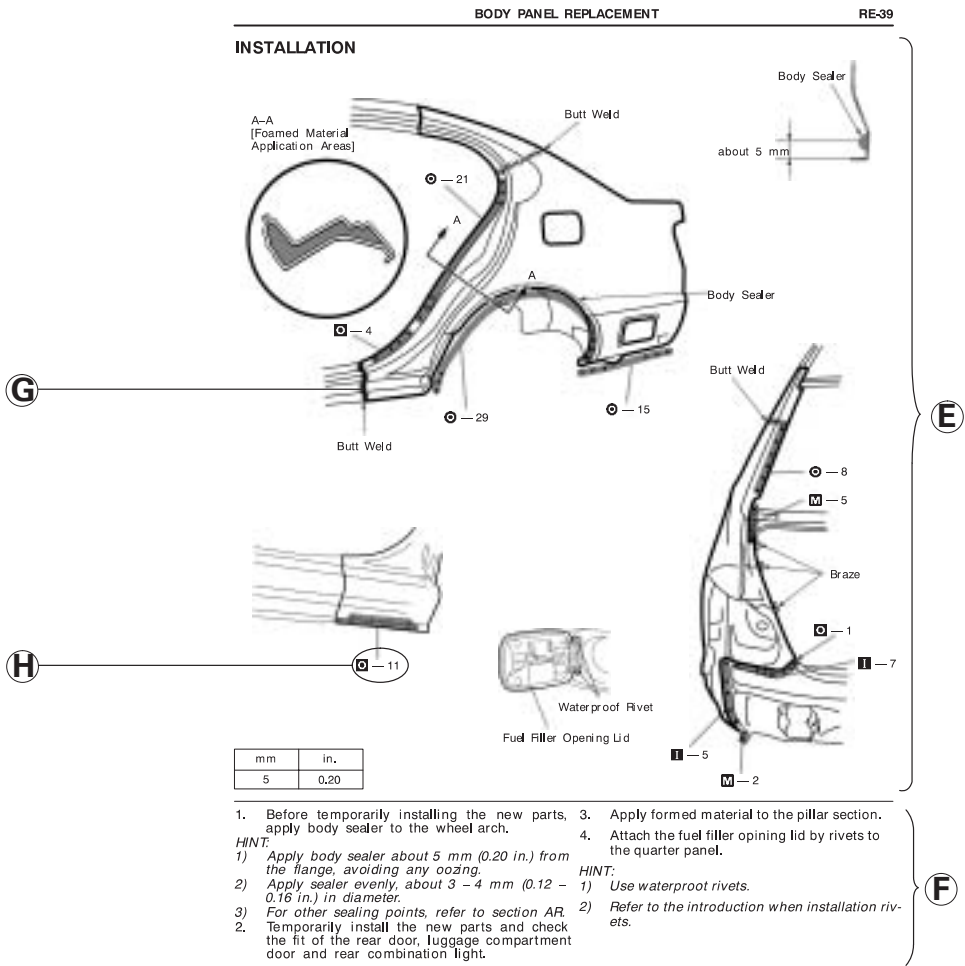

- E : INSTALLATION DIAGRAM**  
Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.
- F : INSTALLATION GUIDE**  
Provides additional information to more efficiently help you perform the installation.
- G : SYMBOLS**  
[See page IN-4.](#)
- H : ILLUSTRATION OF WELD POINTS**  
Weld method and panel position symbols.  
[See page IN-5.](#)