


Double lock motor circuit (Europe)

WIRING DIAGRAM

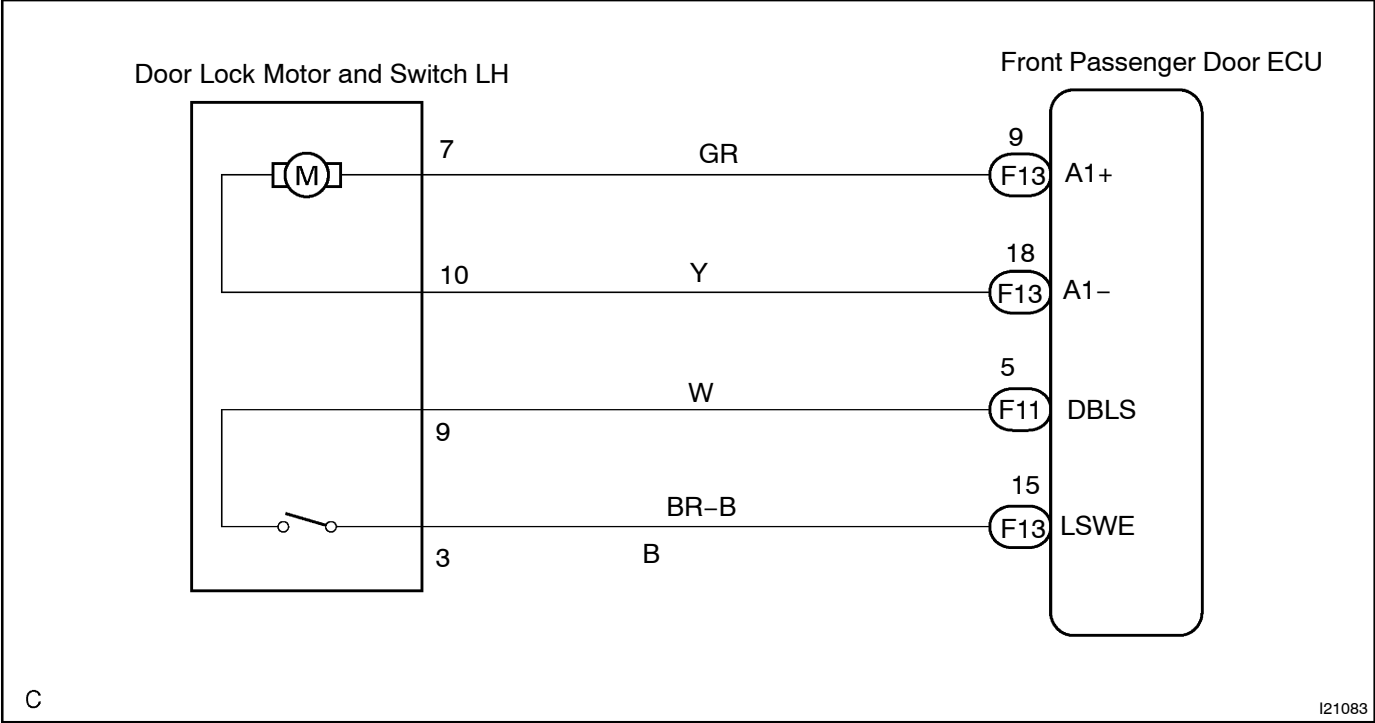

**INSPECTION PROCEDURE**

**1** Check double lock motor (See page [BE-18](#)).

NG

Replace the double lock motor.

OK

**2** Check wireharness and connector between double lock motor and passenger door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-604](#)).