


Door lock motor circuit

WIRING DIAGRAM

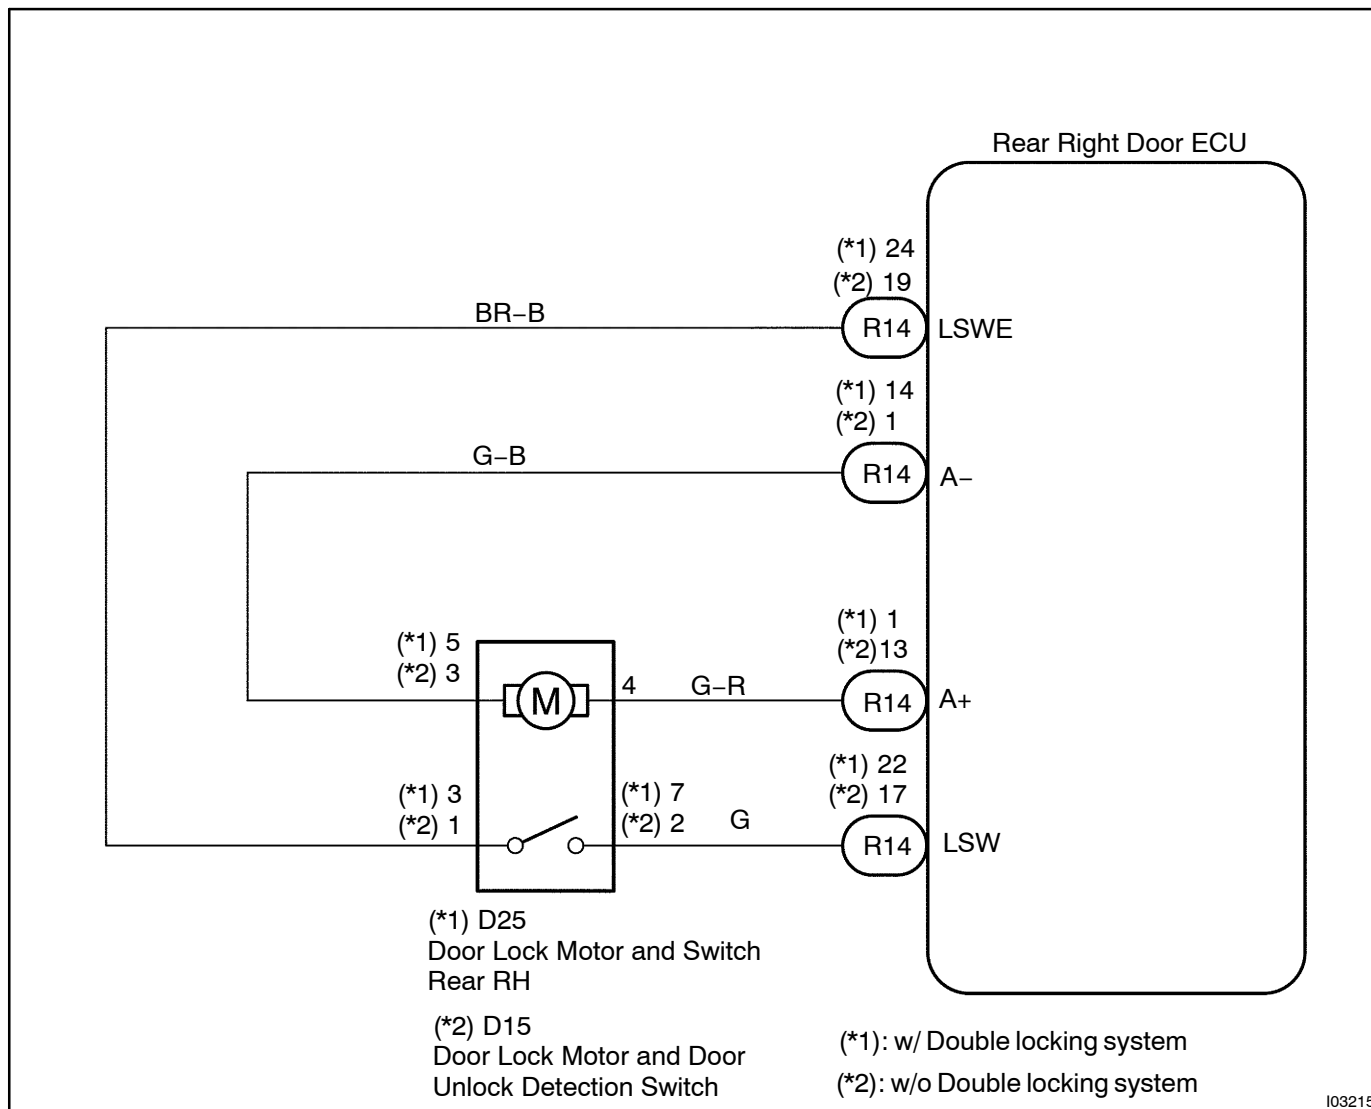

INSPECTION PROCEDURE

1	Check door lock motor. (w/o double locking system: See Pub. No. RM588E on page BE-148 w/ double locking system: See page BE-12)
---	--

OK

NG

Replace the door lock motor.

2	Check wireharness and connector between door lock motor and rear right door ECU.
---	--

OK

NG

Repair or replace wireharness or connector.

Proceed to next circuit inspection shown on problem symptom table (See Pub. No. RM588E on page DI-616).