


# Position of Parts in Engine Compartment

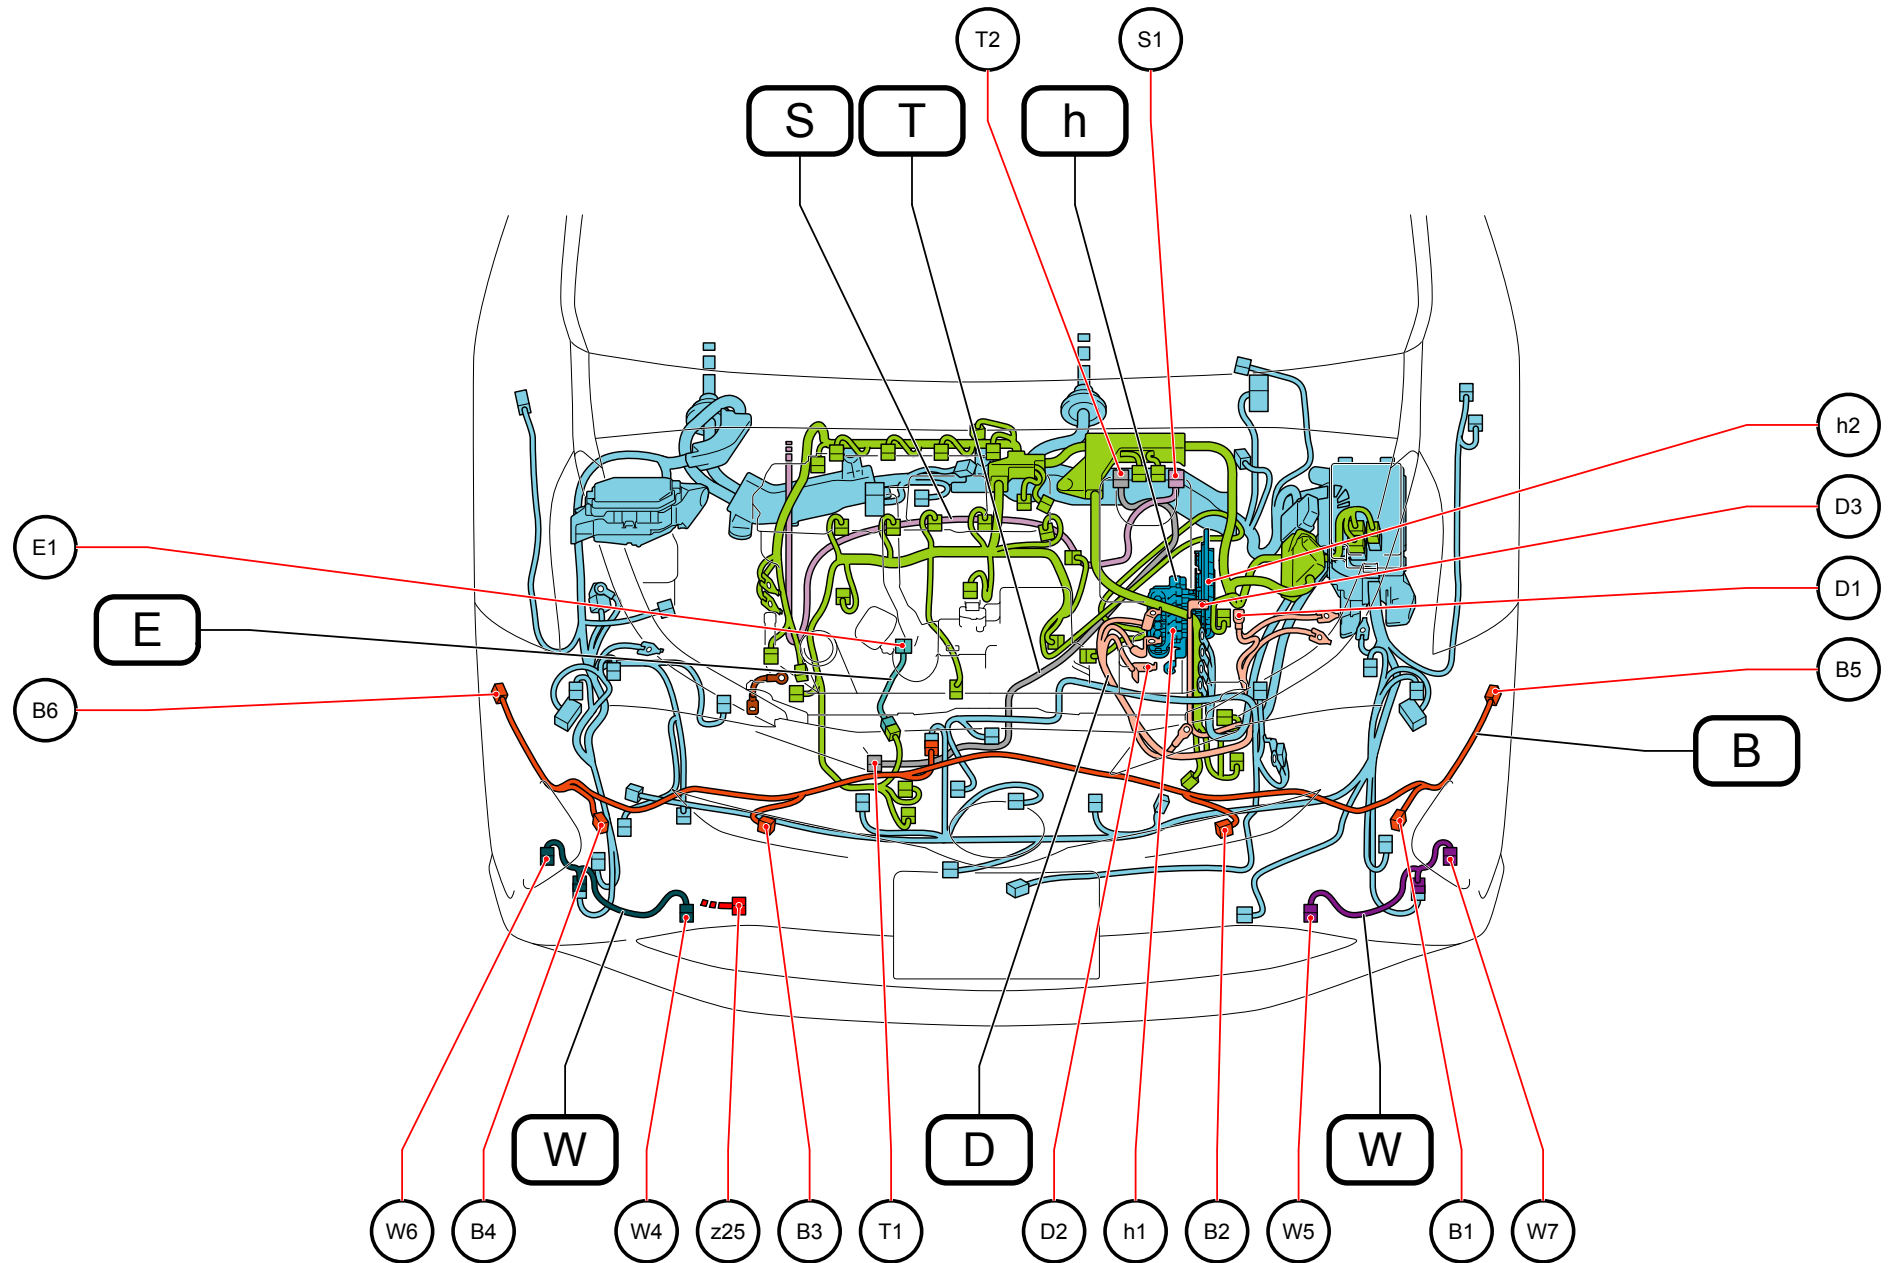


















---

#### Position of Parts in Engine Compartment

---


B1	Front Ultrasonic Sensor Corner LH
B2	Front Ultrasonic Sensor Center LH
B3	Front Ultrasonic Sensor Center RH
B4	Front Ultrasonic Sensor Corner RH
B5	Front Ultrasonic Sensor Side LH
B6	Front Ultrasonic Sensor Side RH
D1	Battery
D2	Inverter with Converter Assembly
D3	Fusible Link Block Assembly
E1	Knock Control Sensor (Bank 1)
S1	Inverter with Converter Assembly
T1	Compressor with Motor Assembly
T2	Inverter with Converter Assembly
W4	Fog Light Assembly RH
W5	Fog Light Assembly LH
W6	LED Illumination Light Assembly RH
W7	LED Illumination Light Assembly LH
h1	Hybrid Vehicle Transaxle Assembly
h2	Inverter with Converter Assembly
z25	Swing Grille Actuator Assembly , Radiator Shutter Sub-Assembly

Position of Parts in Engine Compartment

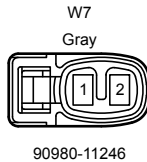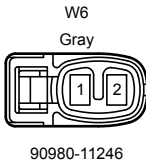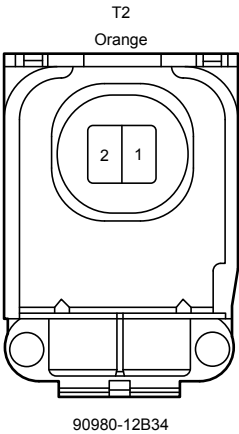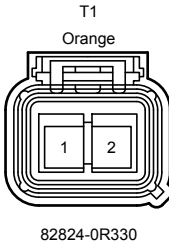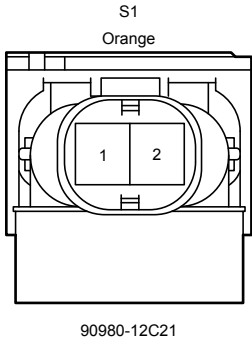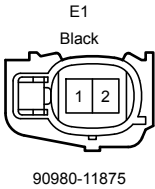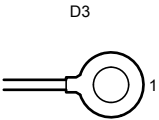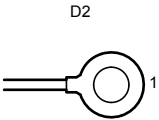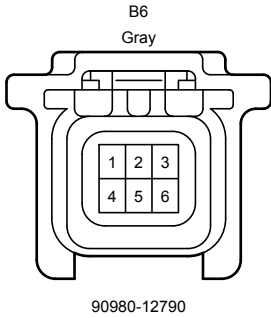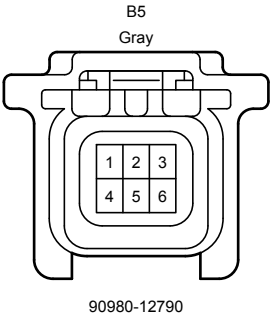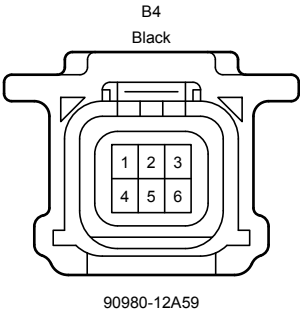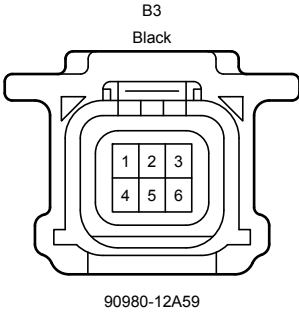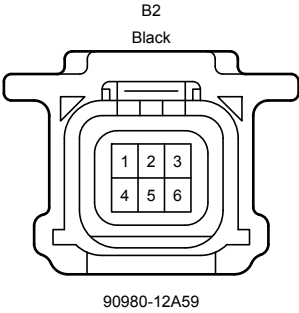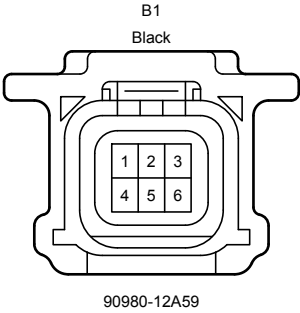


Position of Parts in Engine Compartment

h1  
Black

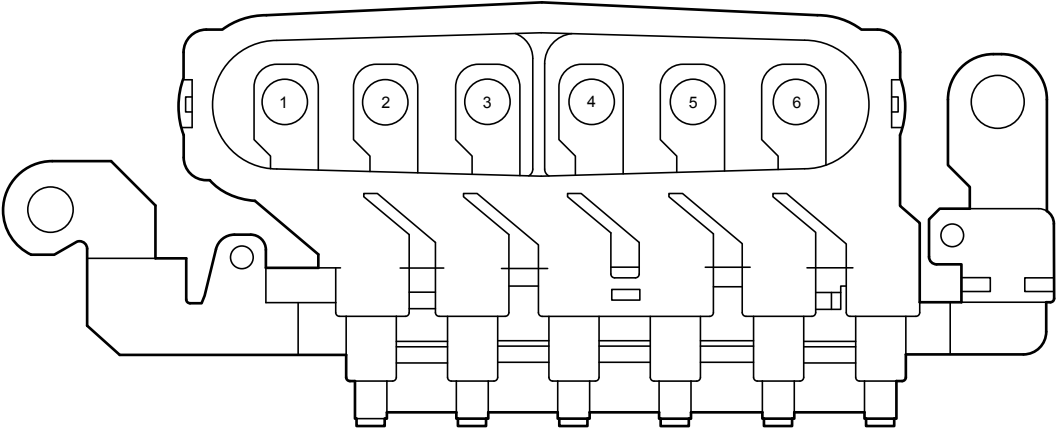


82824-47510

h2  
Black

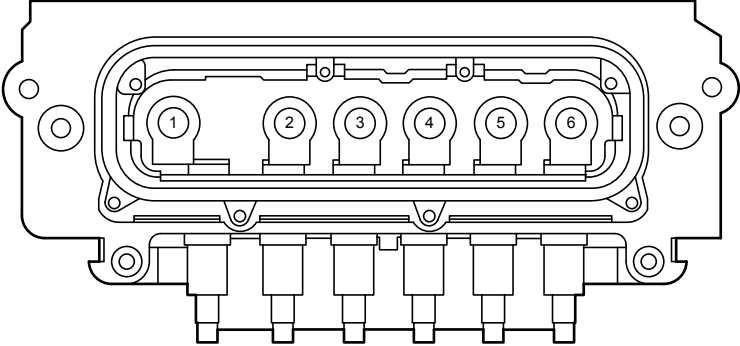

z25  
Black

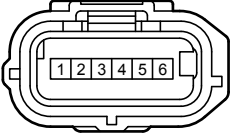

90980-12303