



EVAPORATOR REMOVAL

1. REMOVE A/C UNIT
(See page AC-26)
2. LHD Models Only:
REMOVE HEATER RADIATOR
(See page AC-59)

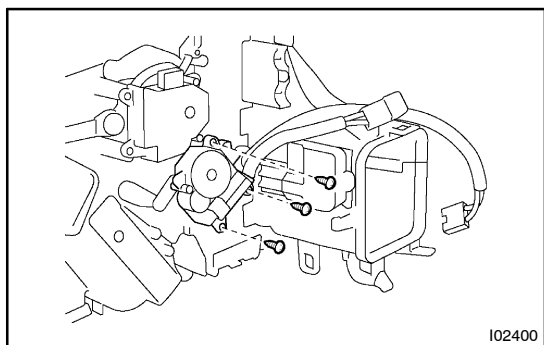

3. REMOVE AIR MIX SERVOMOTOR PASSENGER SIDE

- (a) Disconnect the connector.
- (b) Remove the 3 screws and servomotor.

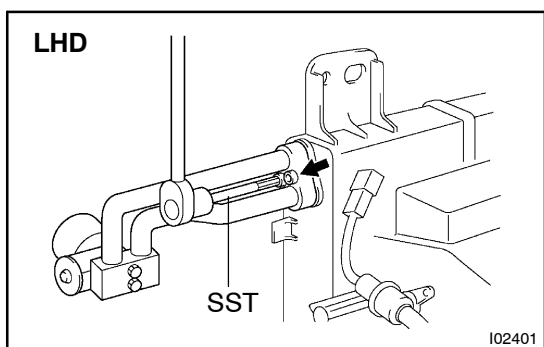

4. REMOVE TUBE AND ACCESSORY

- (a) Pry out packing.

HINT:

At the time of installation, please refer to the following item.
Do not reuse the packing.

- (b) Using SST, remove the 2 bolts and the tube and accessory.

SST 07110-61050

Torque: 4.1 N·m (42 kgf·cm, 36 in.·lbf)


NOTICE:


Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, please refer to the following item.
Lubricate 2 new O-rings with compressor oil and install them to the tube.

- (c) Remove screw and drain pipe.

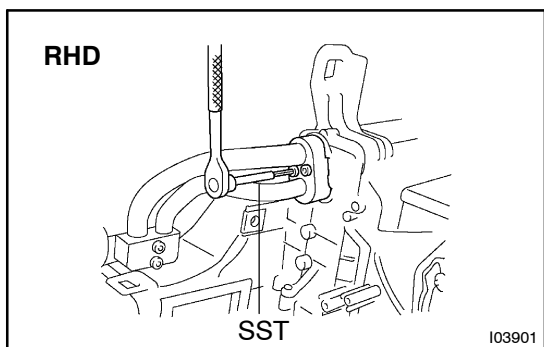

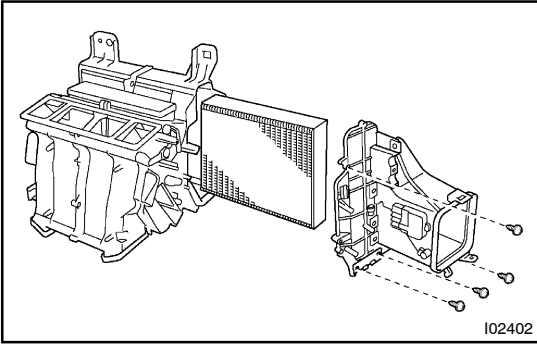**5. REMOVE EVAPORATOR**

- (a) Disconnect the connector from blower motor control relay.
- (b) Remove the screw and drain hose.
- (c) Remove the 4 screws and cover.
- (d) Pull out the evaporator.

HINT:

At the time of installation, please refer to the following item.
If evaporator is replaced, add compressor oil to evaporator.

Add 40 cc (1.4 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent