

# HEADLIGHT CLEANER

## SERVICE HINTS

### H6 HEADLIGHT CLEANER CONTROL RELAY

5-2 : Closed with ignition SW at **ON** position, light control SW at **HEAD** position and headlight cleaner SW on

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	A	72 (LHD)	H7	68 (LHD)	J18
		86 (RHD)		82 (RHD)	J32
C13	A	72 (LHD)	H22	A	72 (LHD)
		86 (RHD)			J35
	B	86 (RHD)	J8	B	86 (RHD)
D1		72 (LHD)			J37
		86 (RHD)	J10		J40
H6		68 (LHD)			J42
		82 (RHD)	J12		88 (RHD)
			J15		

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
1G	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS









Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	98 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IA2	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
II2	100 (LHD)	

## : GROUND POINTS


Code	See Page	Ground Points Location
EB	96 (LHD)	Left Fender
	106 (RHD)	
IF	98 (LHD)	Left Kick Panel
	108 (RHD)	
II	98 (LHD)	Right Side of the Cowl Panel
	108 (RHD)	Cowl Side Panel RH

## : SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	96 (LHD)	Cowl Wire	E4	106 (RHD)	Cowl Wire

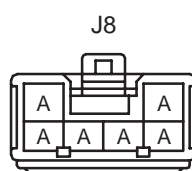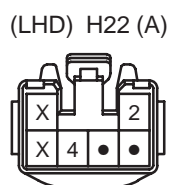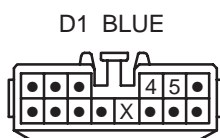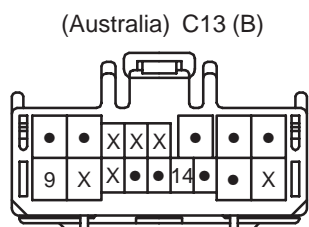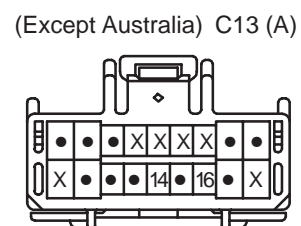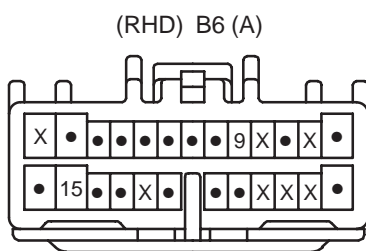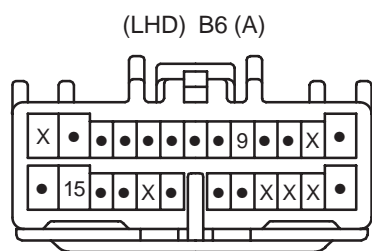


(Hint : See Page 7, 23, 39)

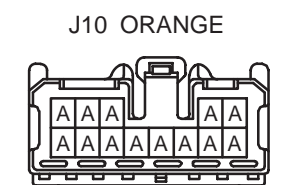


(Hint : See Page 7, 23, 39)

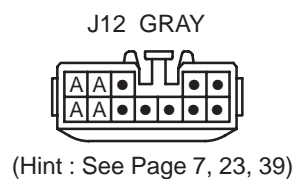


(Hint : See Page 7, 23, 39)

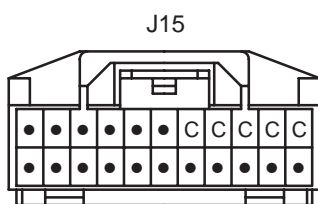


(Hint : See Page 7, 23, 39)

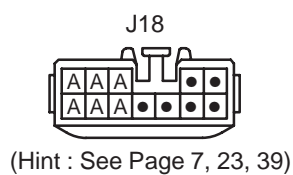


(Hint : See Page 7, 23, 39)

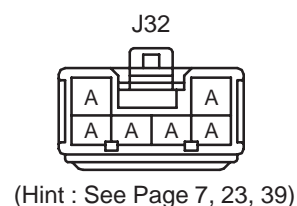


(Hint : See Page 7, 23, 39)

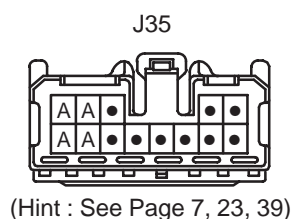


(Hint : See Page 7, 23, 39)

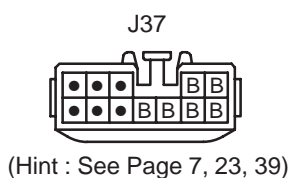

(Hint : See Page 7, 23, 39)

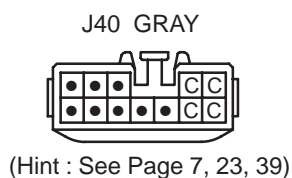

(Hint : See Page 7, 23, 39)

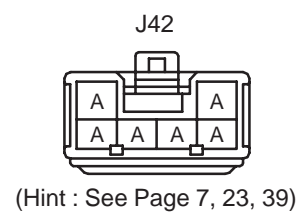

(Hint : See Page 7, 23, 39)