


Connector Joining Wire Harness and Wire Harness

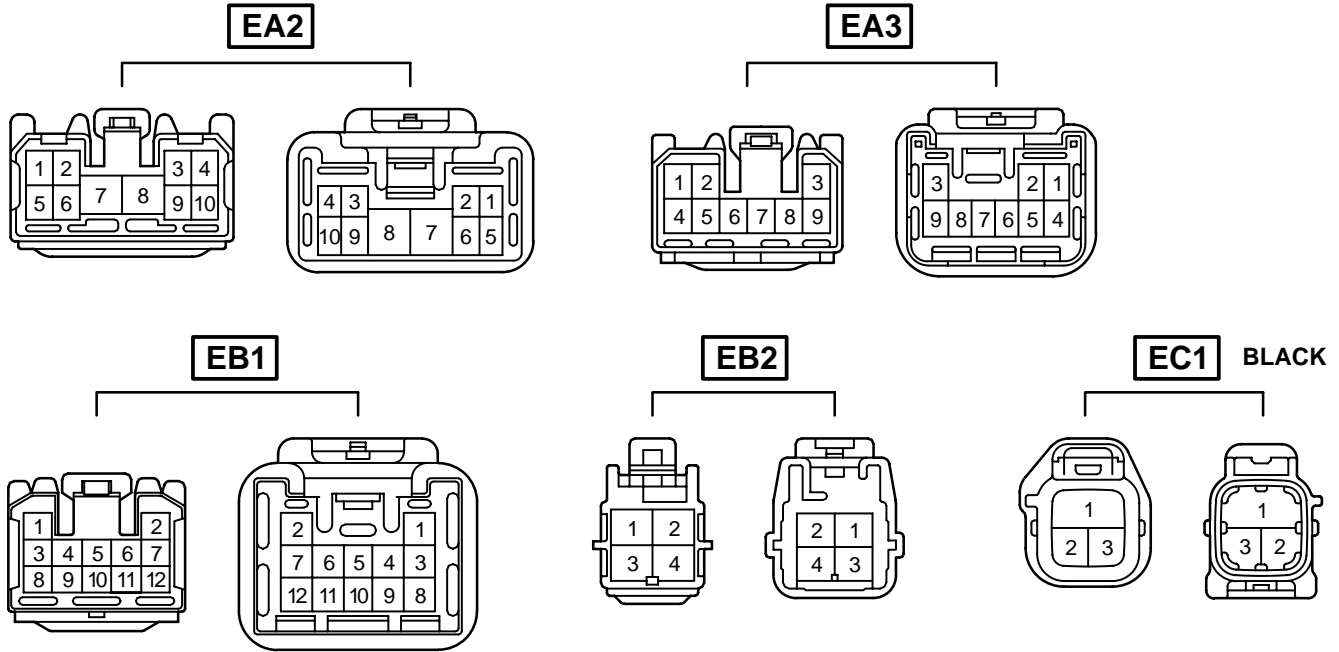

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA2	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	
EC1	Engine No.2 Wire and Engine Wire (Near the Starter)