


E ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[RHD]

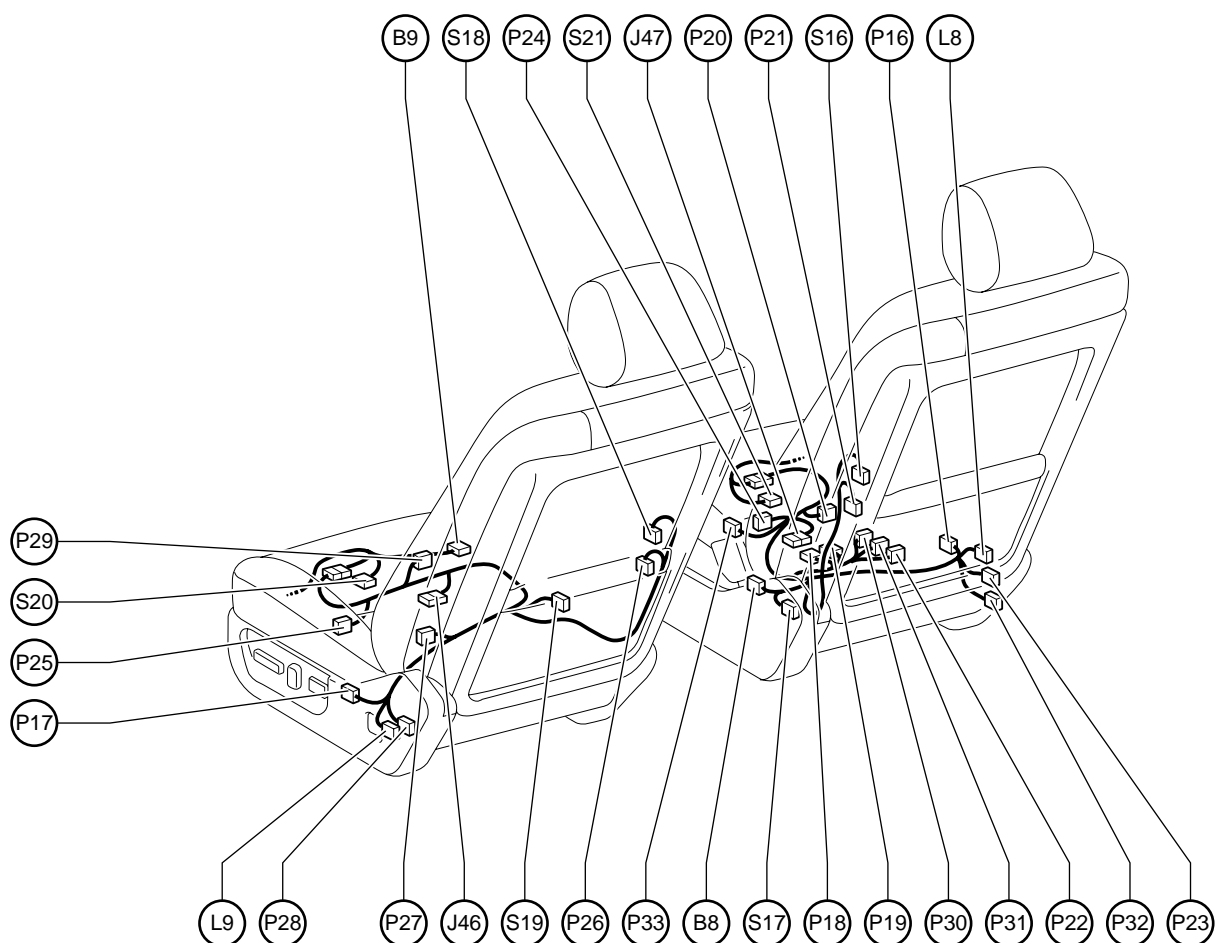

B 8 Buckle SW RH
B 9 Buckle SW LH and
Seat Belt Warning Occupant Detection Sensor

J 46 Junction Connector
J 47 Junction Connector

L 8 Lumbar Support Control SW (Driver's Seat)
L 9 Lumbar Support Control SW (Front Passenger's Seat)

P 16 Power Seat Control SW (Driver's Seat)
P 17 Power Seat Control SW (Front Passenger's Seat)
P 18 Power Seat ECU
P 19 Power Seat ECU
P 20 Power Seat Motor (Driver's Seat Front Vertical Control)
P 21 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P 22 Power Seat Motor (Driver's Seat Rear Vertical Control)
P 23 Power Seat Motor (Driver's Seat Reclining Control)
P 24 Power Seat Motor (Driver's Seat Slide Control)
P 25 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)

P 26 Power Seat Motor
(Front Passenger's Seat Lumbar Support Control)
P 27 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P 28 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P 29 Power Seat Motor
(Front Passenger's Seat Slide Control)
P 30 Power Seat Position Sensor
(Driver's Seat Front Vertical Control)
P 31 Power Seat Position Sensor
(Driver's Seat Rear Vertical Control)
P 32 Power Seat Position Sensor
(Driver's Seat Reclining Control)
P 33 Power Seat Position Sensor (Driver's Seat Slide Control)

S 16 Seat Heater (Driver's Seat Back)
S 17 Seat Heater (Driver's Seat Cushion)
S 18 Seat Heater (Front Passenger's Seat Back)
S 19 Seat Heater (Front Passenger's Seat Cushion)
S 20 Side Airbag Squib LH
S 21 Side Airbag Squib RH