

# RADIO AND PLAYER (LHD)

## SERVICE HINTS

### R2 (A) RADIO AND PLAYER

- (A) 1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- (A) 4-GROUND : Always approx. **12** volts
- (A) 2-GROUND : Always continuity

### S10 (C) STEREO COMPONENT AMPLIFIER

- (C) 4-GROUND : Always approx. **12** volts
- (C) 7-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code		See Page	Code		See Page
A38	76 (LHD)	R2	A	74 (LHD)	S10	C	74 (LHD)
C5	72 (LHD)	R3	B	74 (LHD)	S11	D	74 (LHD)
F9	76 (LHD)	R4	C	74 (LHD)	T8	A	78 (LHD)
F10	76 (LHD)	R15		78 (LHD)	T9	B	78 (LHD)
J19	74 (LHD)	R16		78 (LHD)	W7		78 (LHD)
M3	74 (LHD)	S8	A	74 (LHD)			
N3	78 (LHD)	S9	B	74 (LHD)			

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	58 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
2H	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
3A	62	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Reinforcement Center)
3D		
3G	63	

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	98 (LHD)	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC2	98 (LHD)	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
II4	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IJ2	100 (LHD)	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IJ3		
IK1	100 (LHD)	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	100 (LHD)	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL2		
IL3		
IM1	100 (LHD)	Instrument Panel Wire and Floor No.1 Wire (Front RH Side of the Shift Lever)
BA1	102 (LHD)	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	102 (LHD)	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)


## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	98 (LHD)	Instrument Panel Brace RH

A38



C5

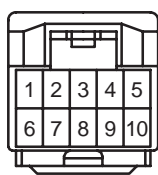


F9



F10




J19 BLUE

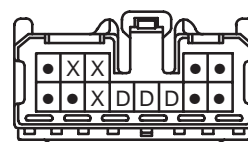


(Hint : See Page 7, 23, 39)


M3

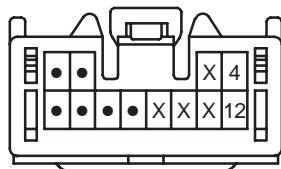


N3

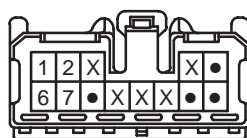


R2 (A)

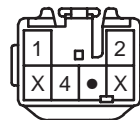


R3 (B)

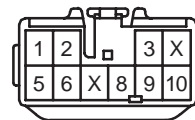

(w/ LEXUS Navigation System) R4 (C)

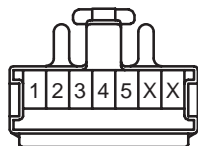

(w/o LEXUS Navigation System) R4 (C)

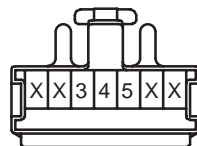


R15



R16




S8 (A) BLACK




S9 (B) ORANGE




S10 (C)

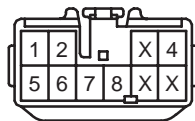

S11 (D)

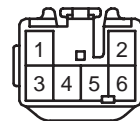

T8 (A)

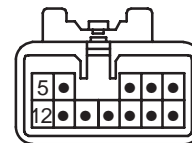

T9 (B)



W7

