


## INSTALLATION

### NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

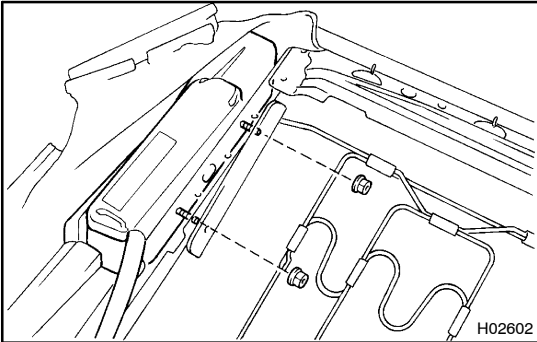


### 1. INSTALL SIDE AIRBAG ASSEMBLY

- (a) Install the 2 nuts and side airbag assembly to the seatback frame.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

### NOTICE:


- Make sure that the side airbag assembly is installed to the specified torque.
- If the side airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the side airbag assembly with a new one.
- When installing the side airbag assembly, take care it is not pinched between other parts.

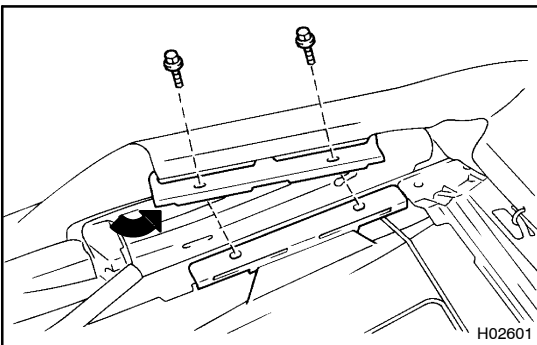

- (b) Hang the 2 hooks onto the seatback frame, then install the 2 bolts.

### CAUTION:

Take care to hang the hook securely. Otherwise the seat cover slides, it might cause incorrect deploying.

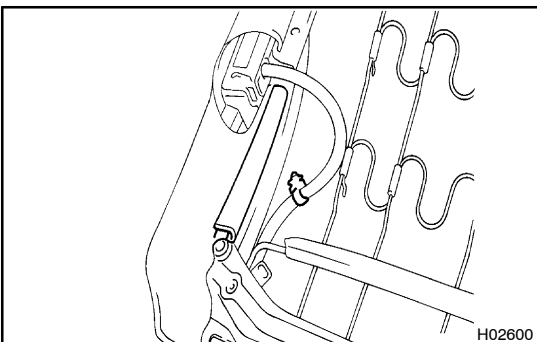


- (c) Hang the hook onto the seatback frame.  
(d) Install the clamp.

**2. INSTALL THESE PARTS:**

(See page BO-112)

- (a) Seatback assembly
- (b) Front seatback board
- (c) Reclining adjuster inside cover LH
- (d) Seat cushion assembly
- (e) Front seat inner shield
- (f) Front seat cushion shield
- (g) Power seat switch knobs

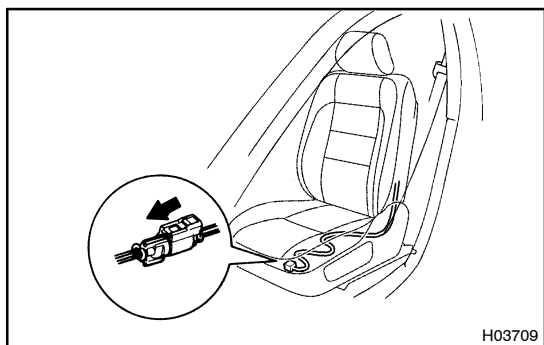**3. INSTALL SIDE AIRBAG ASSEMBLY WIRE HARNESS**


- (a) Install the wire harness with the 5 clamps to the seat cushion frame.
- (b) Install the connector to the bracket.

**4. INSTALL FRONT SEAT**

- (a) Disconnect the connector, then install the 4 bolts.

**Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)**

- (b) Install the 4 seat track covers.

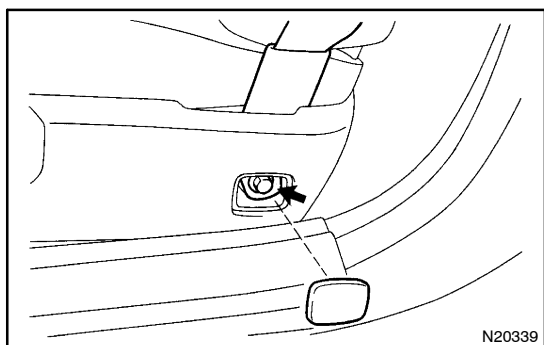**5. INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR**

- (a) Install the front seat outer belt floor anchor.

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

- (b) Install the seat belt anchor cover cap.