


Door lock motor circuit

WIRING DIAGRAM

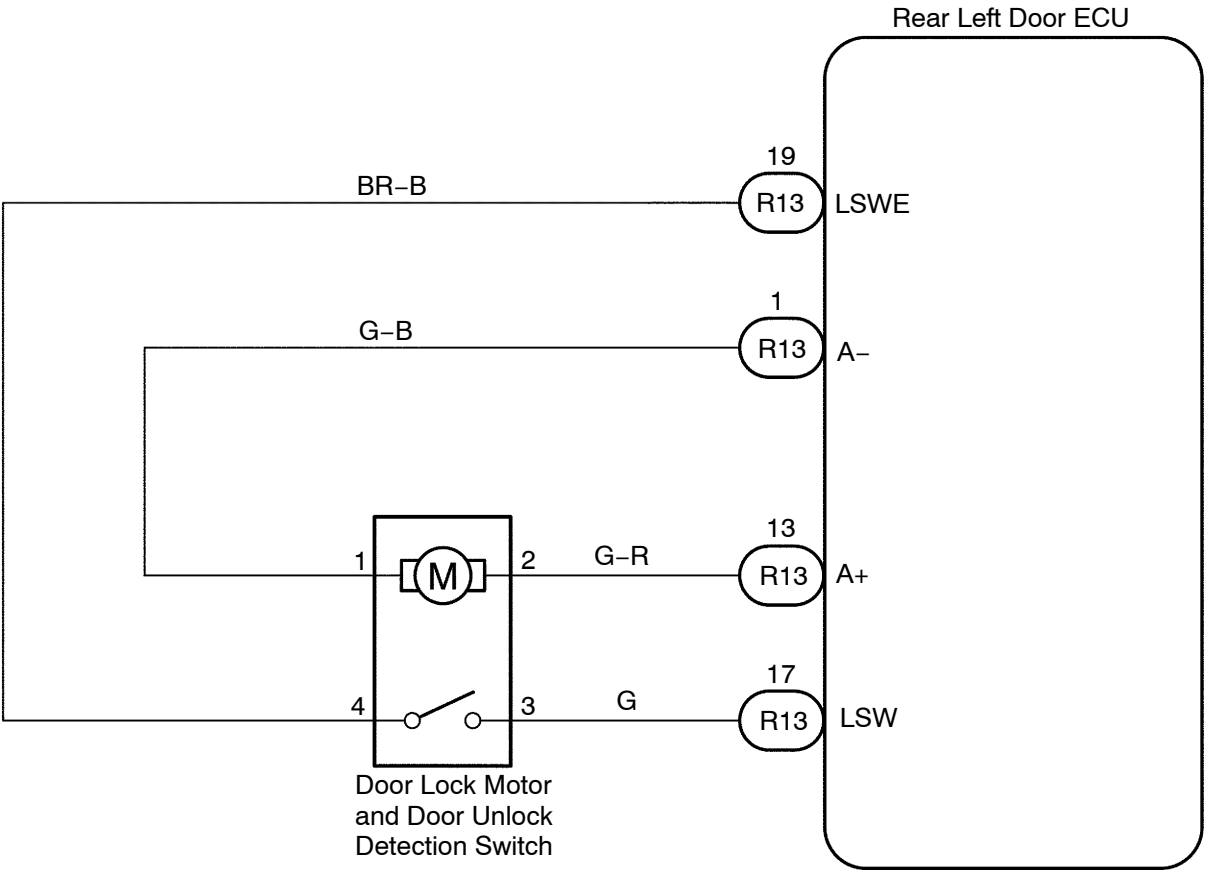

I03215

INSPECTION PROCEDURE

1	Check door lock motor. (See page BE-148)
---	--

NG	Replace the door lock motor.
----	------------------------------

OK

2	Check wireharness and connector between door lock motor and rear left door ECU.
---	---

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)
--