


REMOVAL

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT
3. REMOVE AIR CLEANER INLET
4. REMOVE AIR CLEANER AND AIR FLOW METER ASSEMBLY
5. REMOVE RADIATOR AND ELECTRIC COOLING FAN ASSEMBLY

(a) Disconnect these parts:

- Upper radiator hose from radiator
- Lower radiator hose from radiator
- ECU outlet duct from ECU box
- Wire for electric cooling fan from clamp on electric cooling fan
- 2 electric cooling fan connectors
- Water temperature switch connector for electric cooling fan
- 2 oil cooler hoses for A/T from radiator

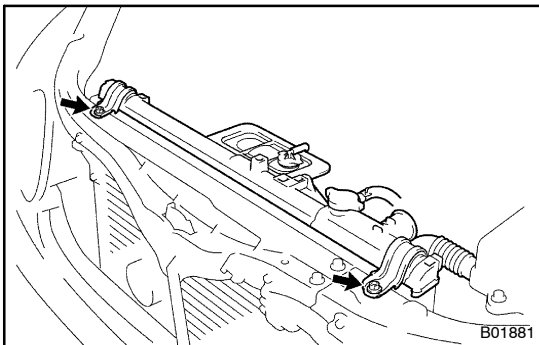

(b) Remove the 2 nuts and 2 upper radiator supports.

(c) Lift out the radiator and cooling fan assembly.

(d) Remove the 2 lower radiator supports.

6. REMOVE ELECTRIC COOLING FAN FROM RADIATOR

(a) Disconnect the radiator reservoir hose from the radiator.

(b) Remove the 6 bolts and electric cooling fan.