


Stop light switch circuit

CIRCUIT DESCRIPTION

The body No.2 ECU is detecting the condition of the stop light switch.

WIRING DIAGRAM

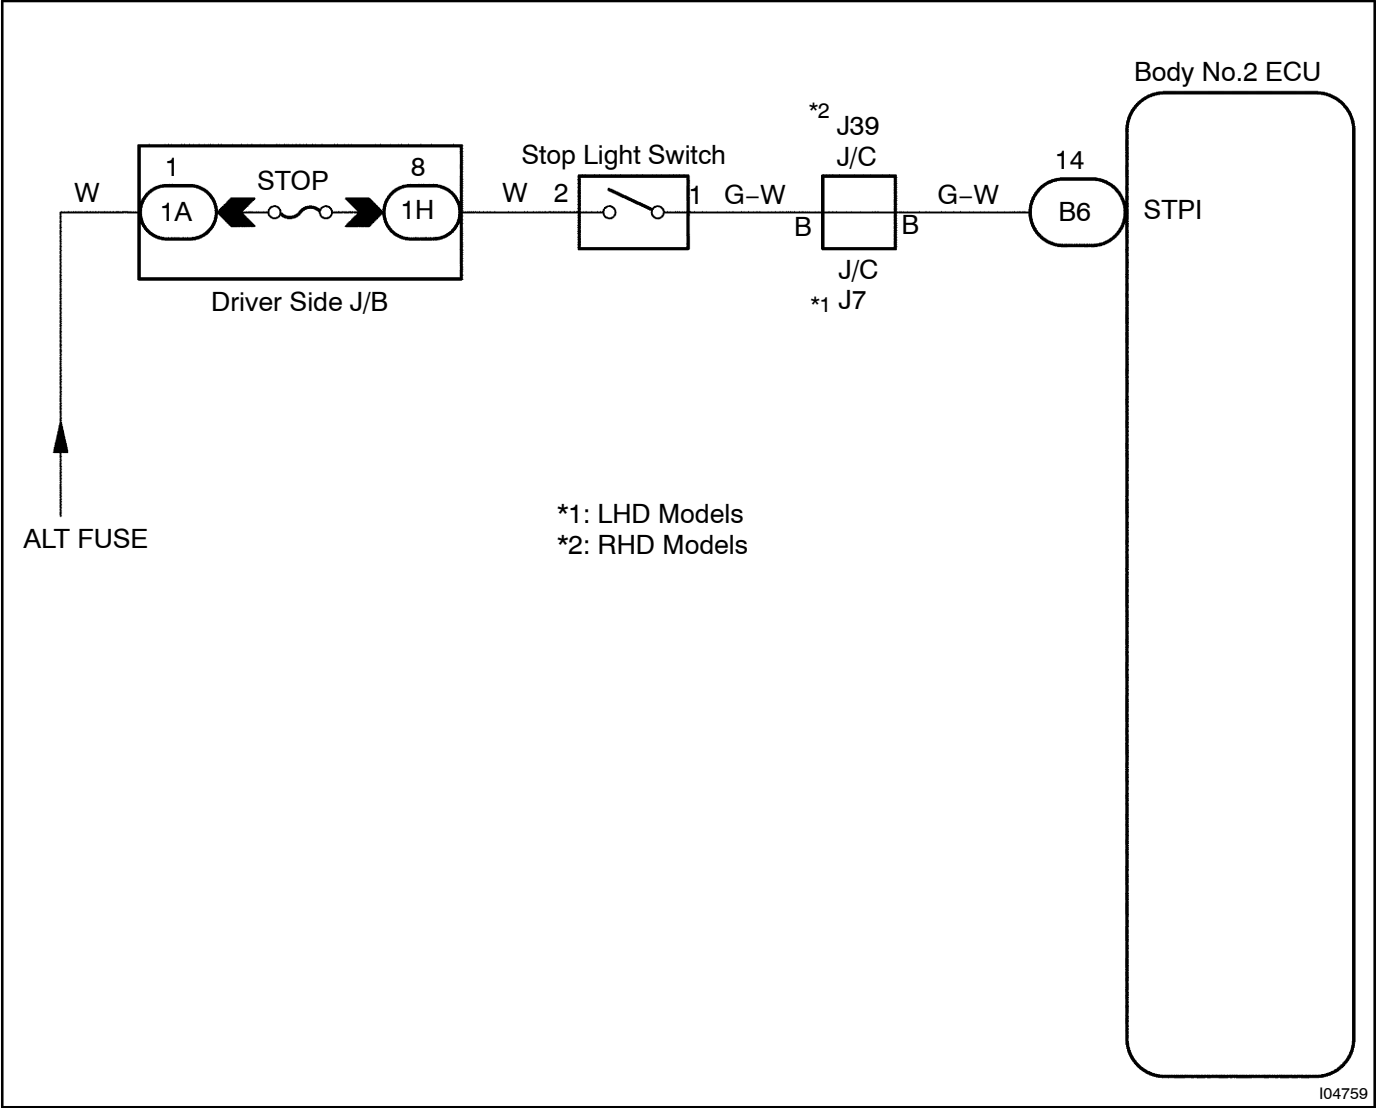

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check stop light switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the stop light switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-546)

NG

2 Check stop light switch. (See page BE-76)

NG

Replace the stop light switch.

OK

3 Check wireharness and connector between stop light switch and body No.2 ECU, battery and stop light switch.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-546)