


## Luggage opener motor circuit

### WIRING DIAGRAM

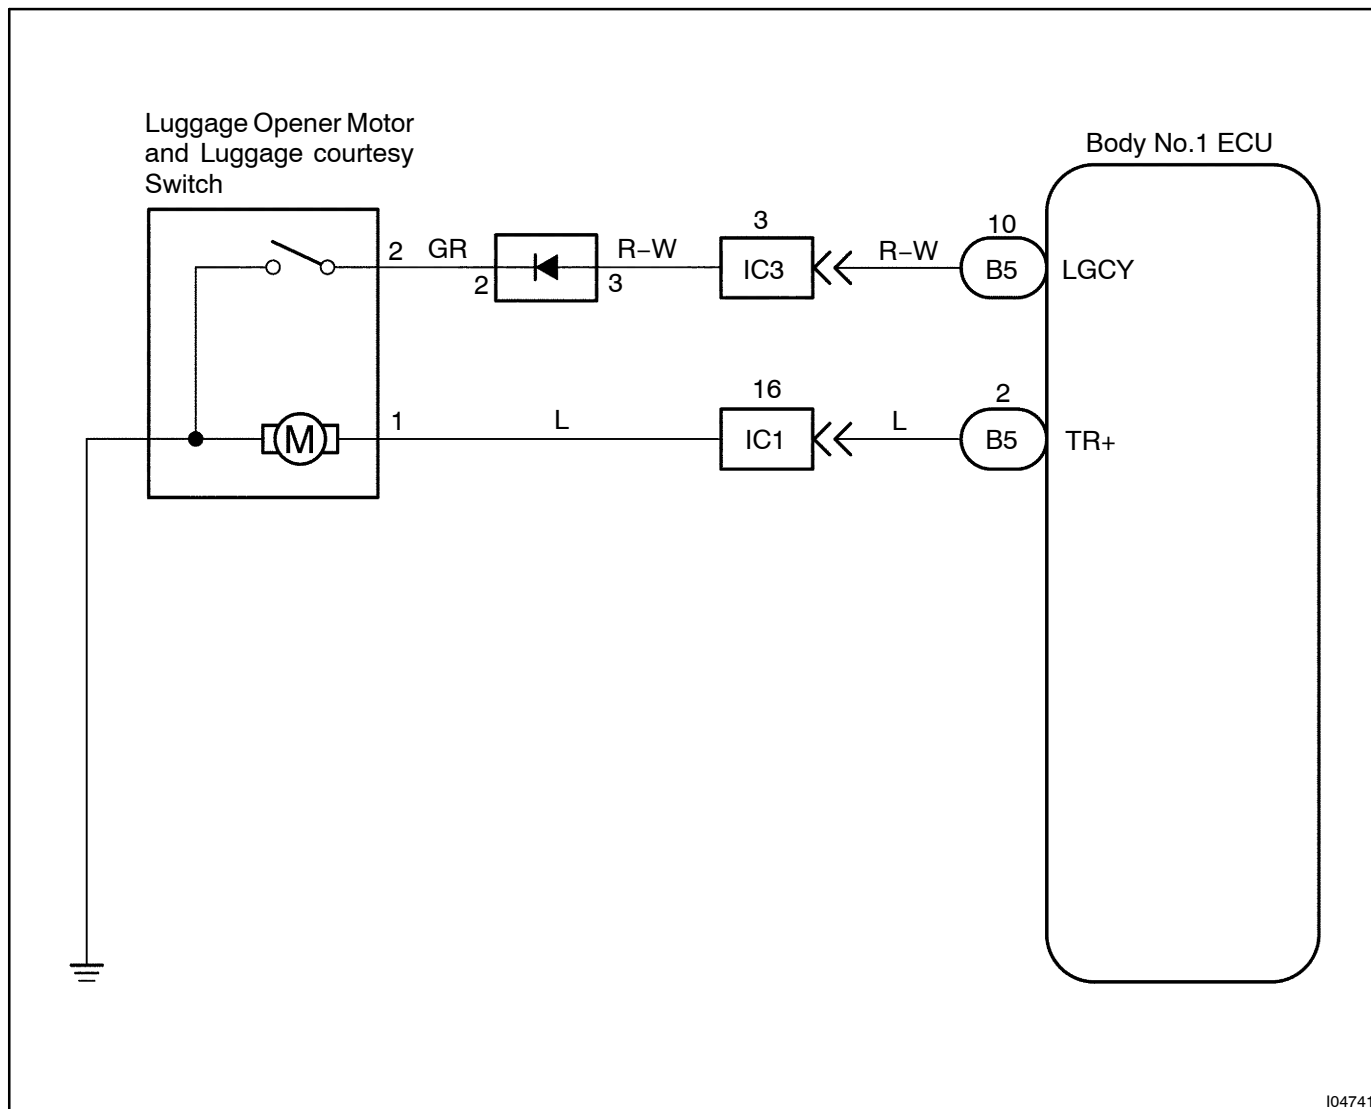

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1 Check luggage opener motor using LEXUS hand-held tester.**

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

### CHECK:

Check that the luggage opener motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)

NG

**2 Check luggage opener motor. (See page BE-148)**

NG

Replace the luggage opener motor.

OK

**3 Check wireharness and connector between luggage opener motor and body No.1 ECU.**

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)